 
 
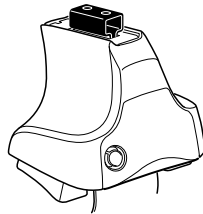 


Kit 1634

 
FORD Focus, 4-dr Sedan, 11-
FORD Focus, 5-dr Hatchback, 11-
FORD Focus, 5-dr Estate, 11- (Without railing)

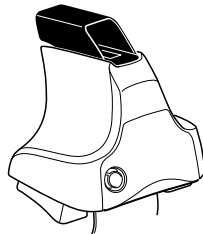


754 Rapid System
480R Rapid Traverse (North America)

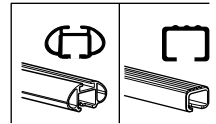

480 Traverse (North America)

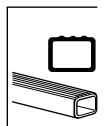



1

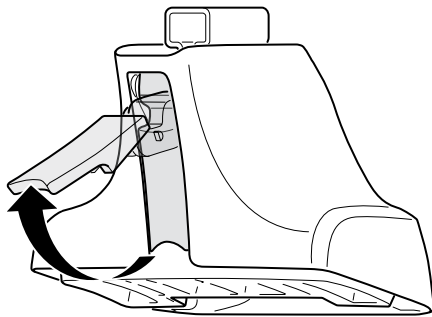 




2




 
 
754 Rapid System
480R Rapid Traverse
(North America)

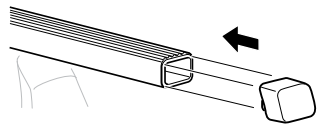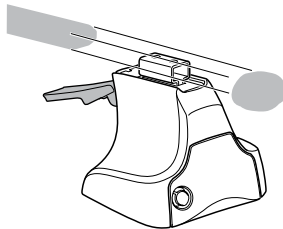

x4

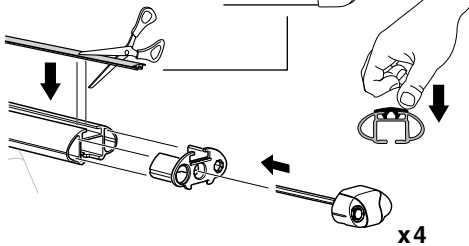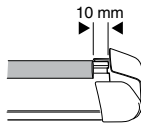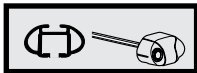   



x4

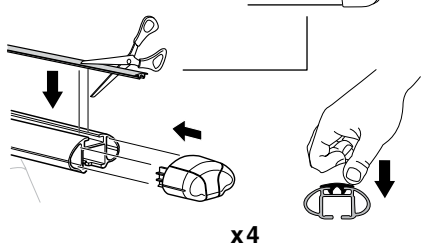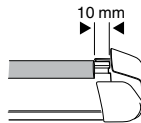   

x4




  480 Traverse
(North America)

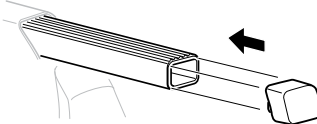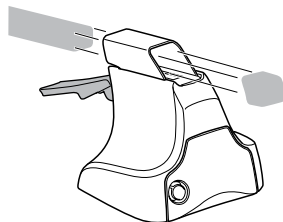


x4

 
3



754 Rapid System

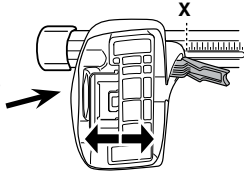 

	X
FORD Focus, 4-dr Sedan, 11-	39
FORD Focus, 5-dr Hatchback, 11-	38,5
FORD Focus, 5-dr Estate, 11- (Without railing)	38

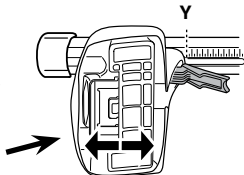 

	Y
FORD Focus, 4-dr Sedan, 11-	37,5
FORD Focus, 5-dr Hatchback, 11-	36
FORD Focus, 5-dr Estate, 11- (Without railing)	34,5

3

 


480R Rapid Traverse




480 Traverse

(North America)

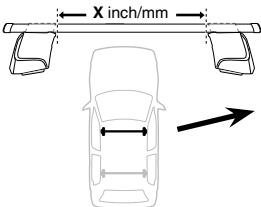


	X inch	X mm
FORD Focus, 4-dr Sedan, 11-	41"	1041 mm
FORD Focus, 5-dr Hatchback, 11-	40 3/8"	1036 mm
FORD Focus, 5-dr Estate, 11- (Without railing)	40 5/8"	1031 mm

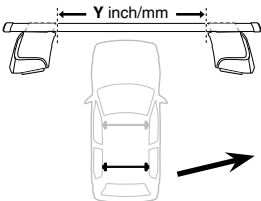 



	Y inch	Y mm
FORD Focus, 4-dr Sedan, 11-	40 3/8"	1026 mm
FORD Focus, 5-dr Hatchback, 11-	39 3/4"	1011 mm
FORD Focus, 5-dr Estate, 11- (Without railing)	39 1/4"	996 mm

 4


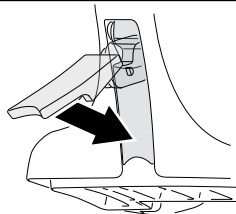


5

  
FORD Focus, 4-dr Sedan, 11-
FORD Focus, 5-dr Hatchback, 11-
FORD Focus, 5-dr Estate, 11- (Without railing)

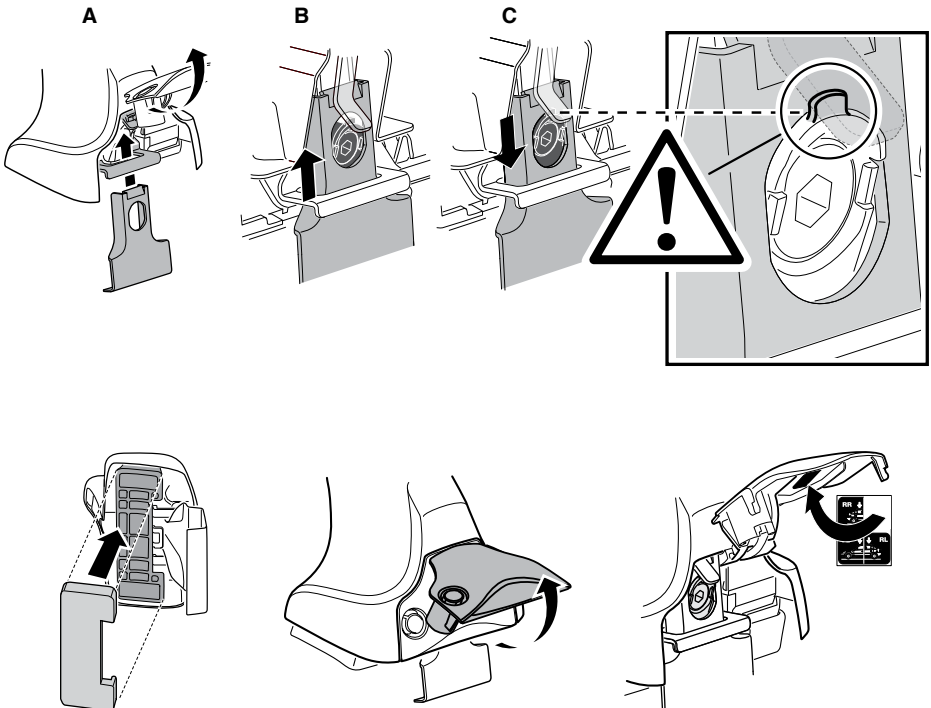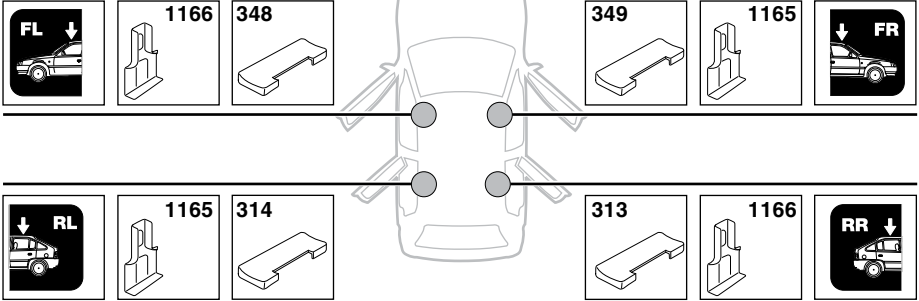


6

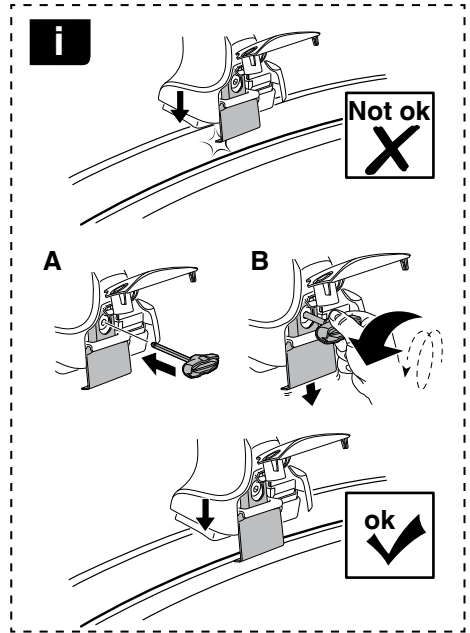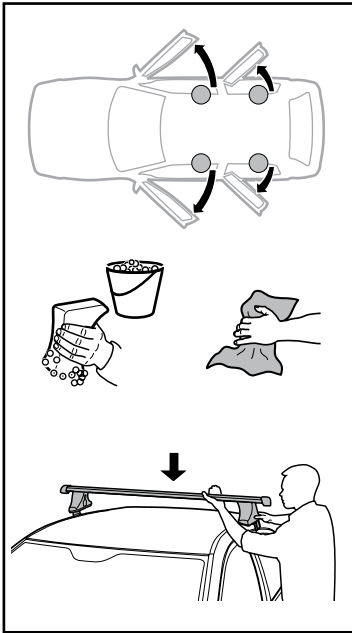  

	X mm	Y mm	X inch	Y inch
FORD Focus, 4-dr Sedan, 11-	250 mm	770 mm	9 ⁷ / ₈ "	30 ³ / ₈ "
FORD Focus, 5-dr Hatchback, 11-	265 mm	760 mm	10 ³ / ₈ "	29 ⁷ / ₈ "
FORD Focus, 5-dr Estate, 11- (Without railing)	260 mm	760 mm	10 ¹ / ₄ "	29 ⁷ / ₈ "

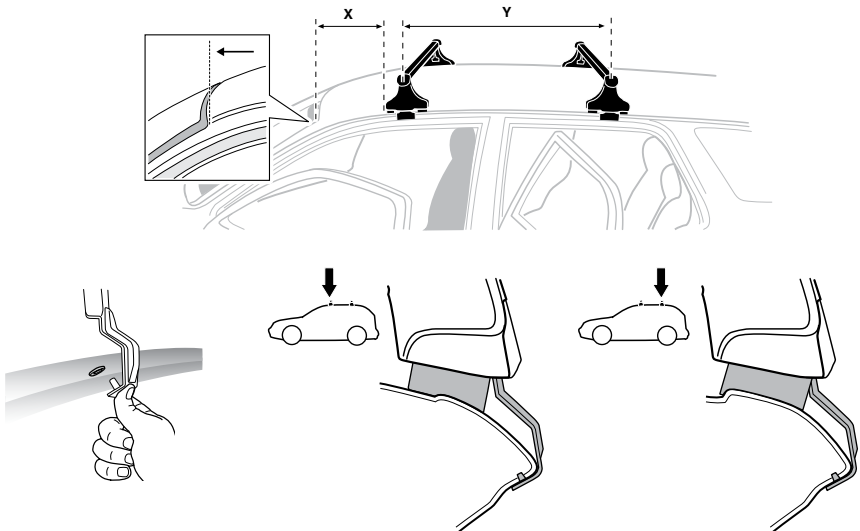 

7

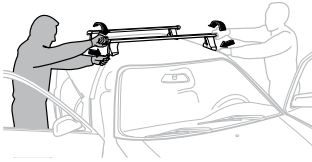 

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apertar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pieļieciet pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

 
CZ Pokręťta bagażnika dokręcaj naprzemiennie.
SK Dofahajte striedavo
SLO Privijajte izmenično.
HR Naizmjenočno zategnite
HU Egymástól függetlenül szorítandó
GR Σφιγίγτες εναλλάξ
TR Dönüşümlü sıkın

中文 交替拧紧


한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

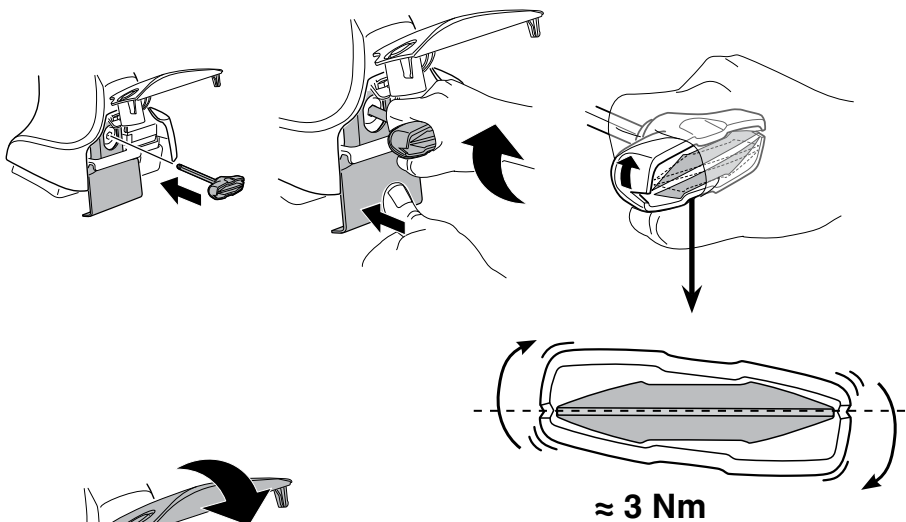



≈ 3 Nm



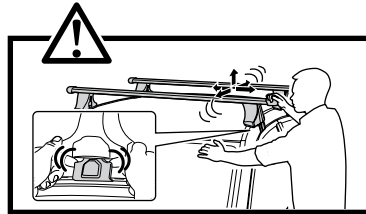 


8




     x1
17 mm

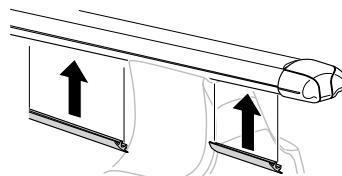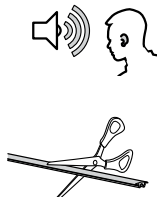


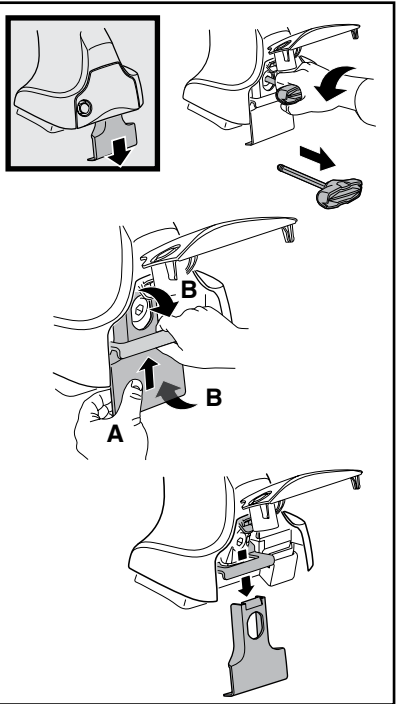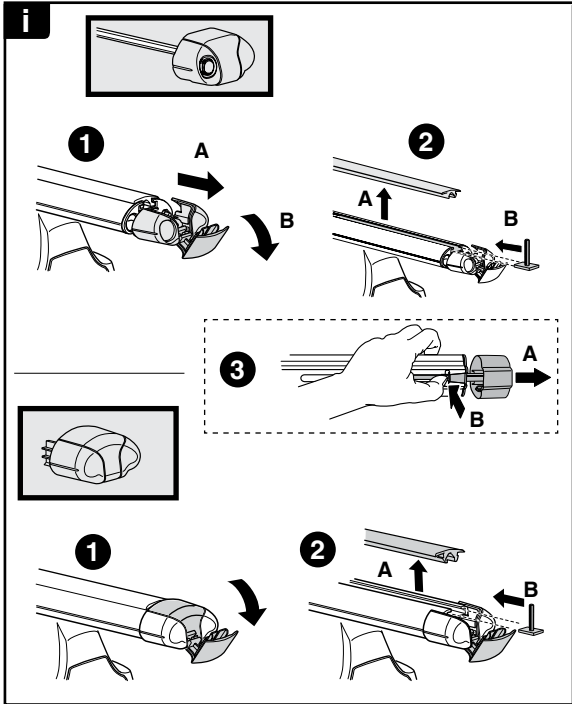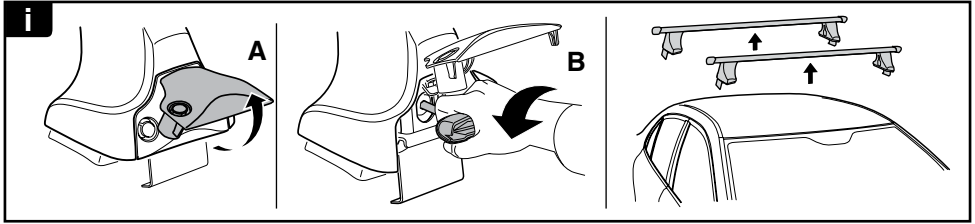

THULE
SWEDEN
**ONE
KEY
SYSTEM**

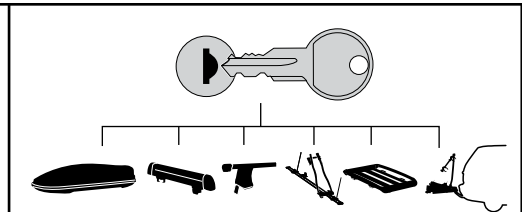 

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		

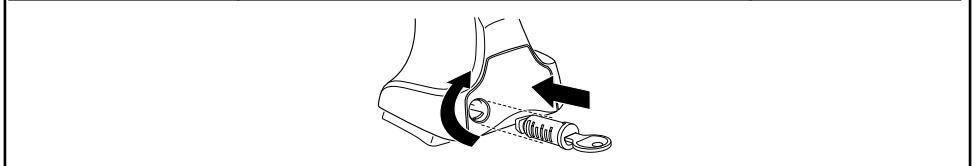 

WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thule.com