 
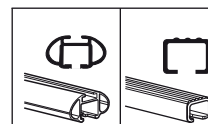 
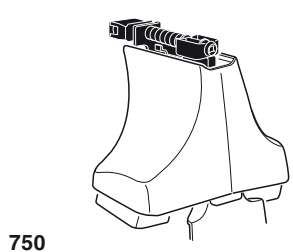 
 
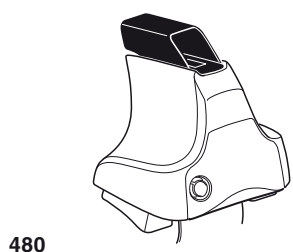 
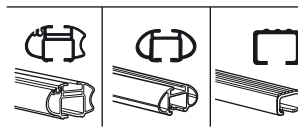 


Kit 1419

ALFA Romeo 159, 4-dr Sedan, 05–

ALFA Romeo 159, 5-dr Estate, 06–





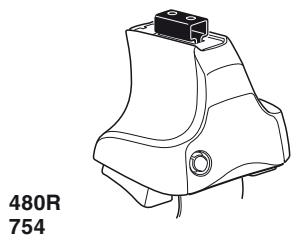


THULE[®]
SWEDEN


ISO 11154-E

This diagram shows the exploded view of the robot's chassis and motor assembly. The components and their quantities are as follows:

     
- Motor Housing:** 1 (shown as a separate assembly at the top left).
- Motor Mounting Bracket (821):** x 1
- Motor Mounting Bracket (822):** x 1
- Motor Mounting Bracket (823):** x 2
- Chassis Plate (204):** x 1
- Chassis Plate (206):** x 1
- Chassis Plate (258):** x 2
- Directional Control Pad:** x 1 (shown with a 4-way arrow pad and labels RR, FR, FL, RL).

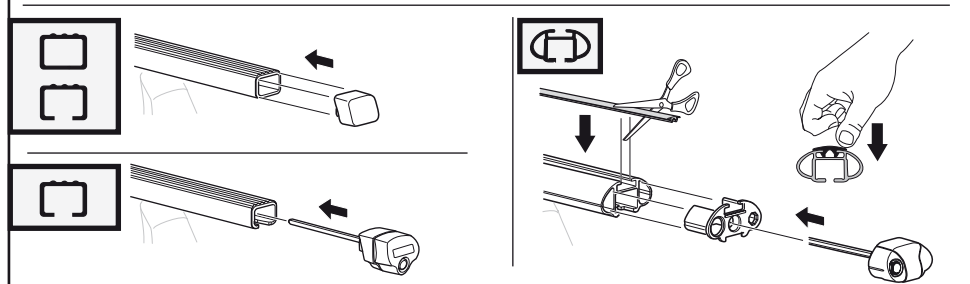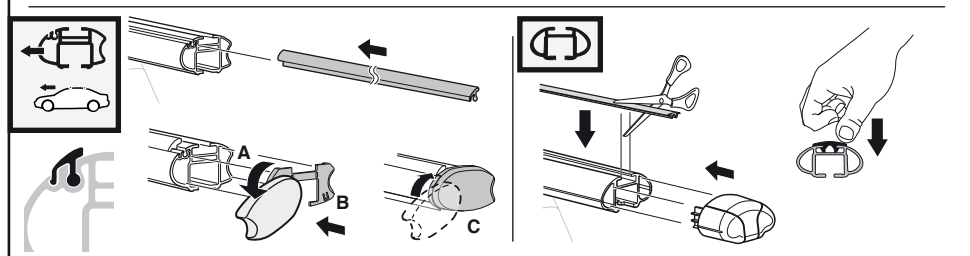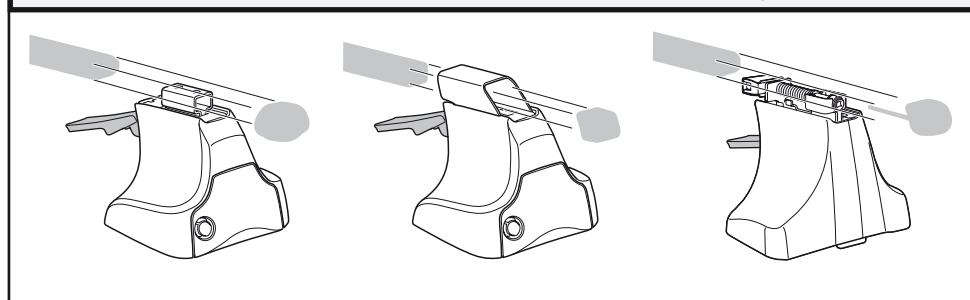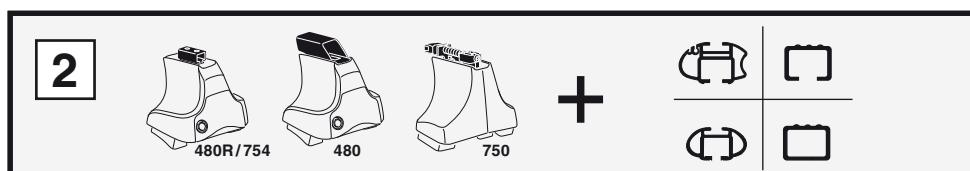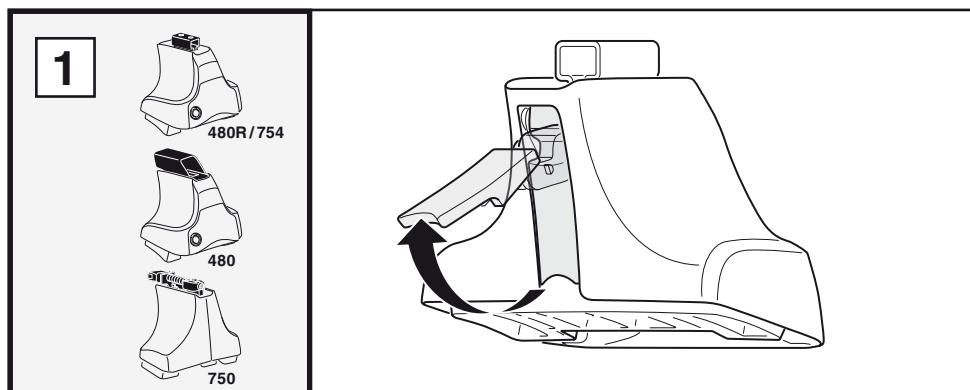

3

 



754

 


750



  1

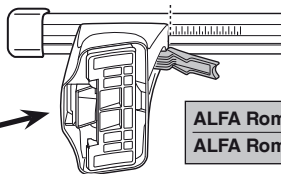

2

 


X

ALFA Romeo 159, 4-dr Sedan, 05–
ALFA Romeo 159, 5-dr Estate, 06–

28,5
28

 1

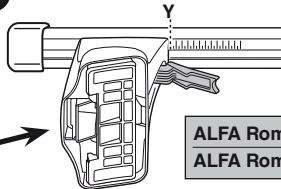

2



Y

ALFA Romeo 159, 4-dr Sedan, 05–
ALFA Romeo 159, 5-dr Estate, 06–

25,5
25

 


480R




480

1



2

 


X inch

X mm

ALFA Romeo 159, 4-dr Sedan, 05–
ALFA Romeo 159, 5-dr Estate, 06–

36 ⁷/₈ " 936 mm
36 ⁵/₈ " 931 mm

 1



2



Y inch

 
 
 
 
 
 
 
 
 
 
 
 
 
Y mm

ALFA Romeo 159, 4-dr Sedan, 05–
ALFA Romeo 159, 5-dr Estate, 06–


35 ⁵/₈ " 906 mm
35 ¹/₂ " 901 mm

4





ALFA Romeo 159, 4-dr Sedan, 05–
ALFA Romeo 159, 5-dr Estate, 06–

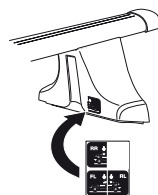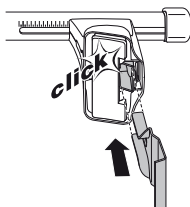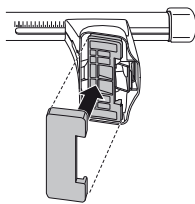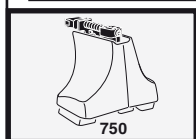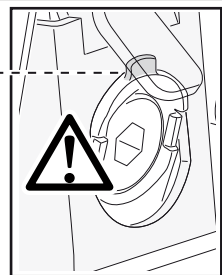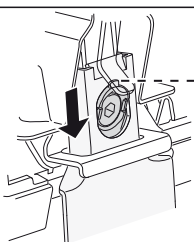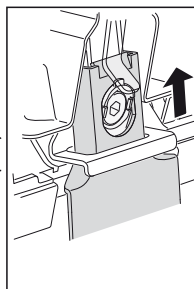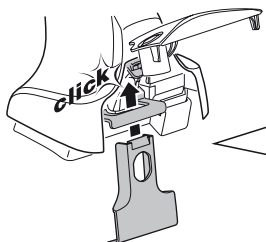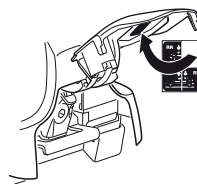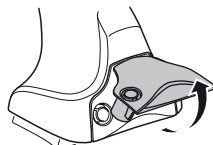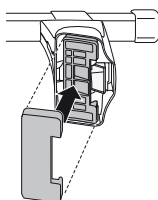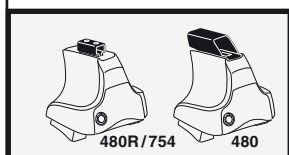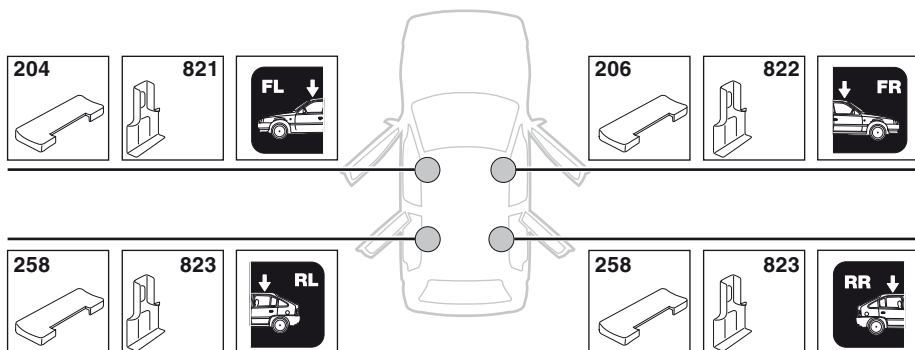

5

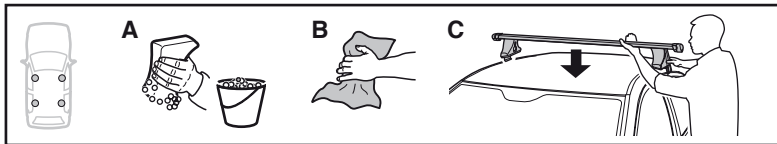 

	X mm	Y mm	X inch	Y inch
ALFA Romeo 159, 4-dr Sedan, 05–	240 mm	650 mm	9 1/2"	25 5/8"
ALFA Romeo 159, 5-dr Estate, 06–	240 mm	650 mm	9 1/2"	25 5/8"

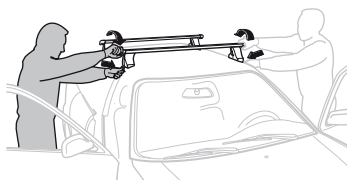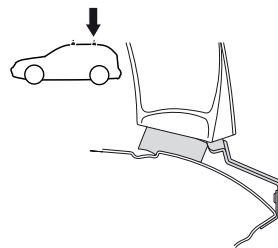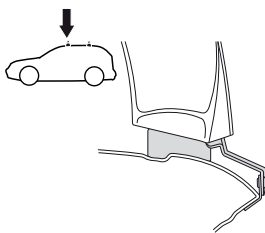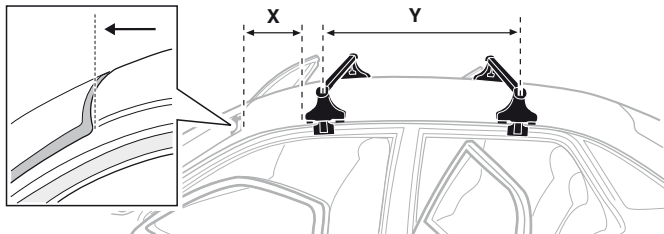    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apretar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciot pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφιγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ






6





480R/754



     480

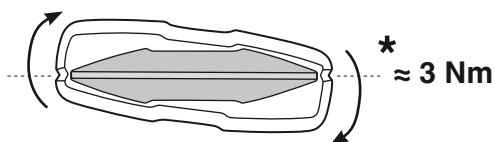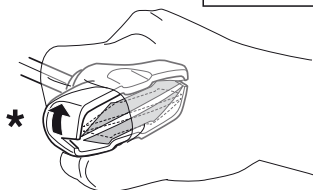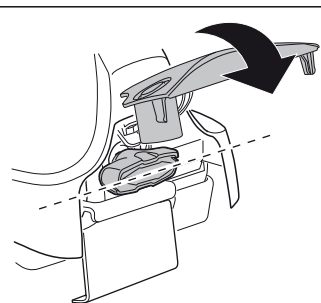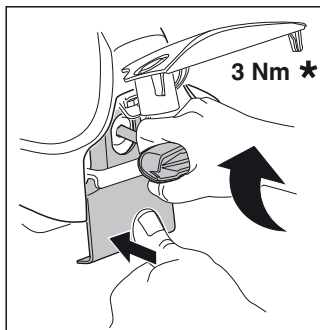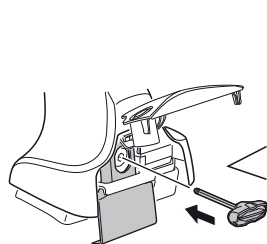


750

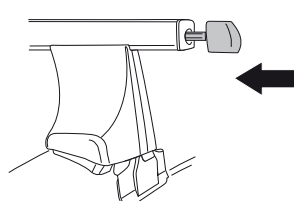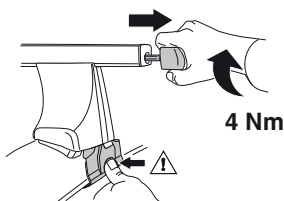  


i



 
1

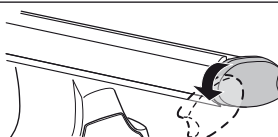


2

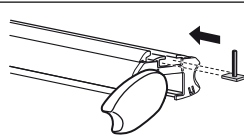 


i

 

1

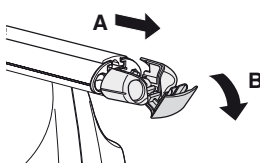 


2

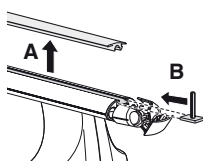 


i








 1

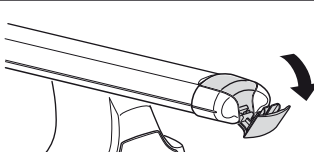

2

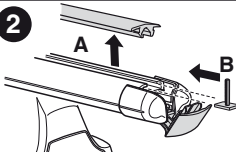 

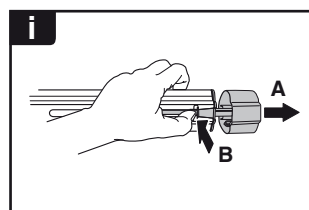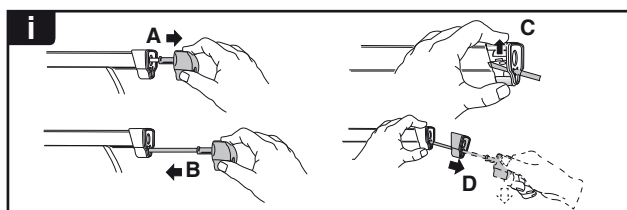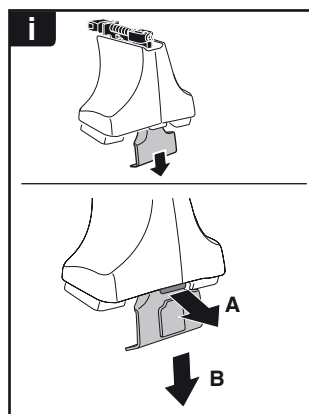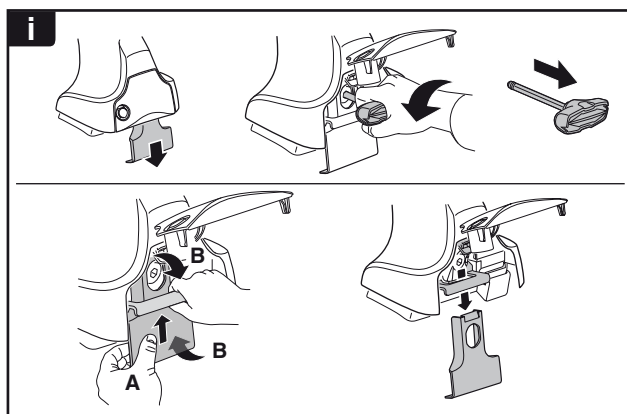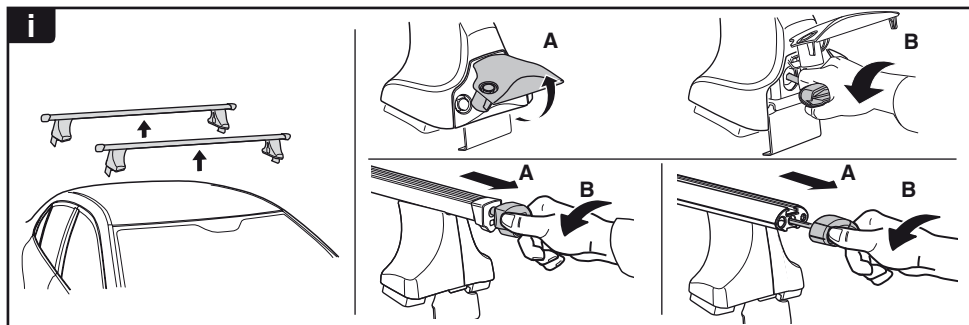     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		