

Kit 1129

 
 
FORD Focus, 3-dr Hatchback, 98-03, 04

FORD Focus, 4-dr Sedan, 98-03, 04



FORD Focus, 5-dr Hatchback, 98-03, 04

FORD Focus, 5-dr Estate, 98-03, 04



480R
754

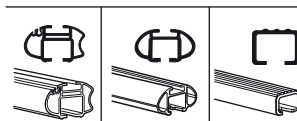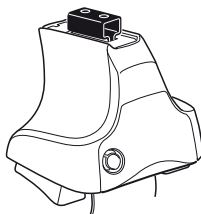

480

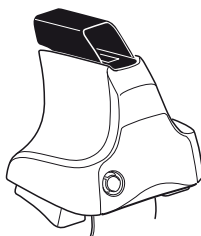  

750

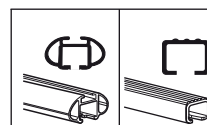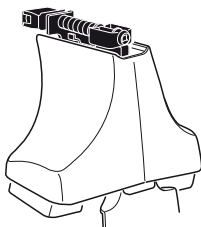  

THULE[®]
SWEDEN

ISO 11154-E

The diagram illustrates the importance of instructions. It features a box on the left labeled 'THULE' with a warning symbol and a plus sign next to a box on the right labeled 'Kit XXXX' with a warning symbol and the word 'instructions'. A person is shown reading the instructions.

				
				
 x2	 x2	 x2	 x2	 x2
 x2		 x2	 x2	
 x2		 x2	 x2	
 x4		 x4		
		 x4		

Kit

 
 
 
 
 
Box icon

254 x 4


280 x 2

04 x 4


RR FR
FL RL x 1

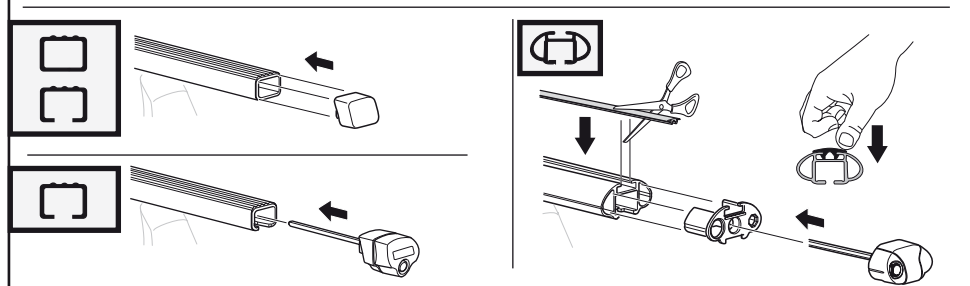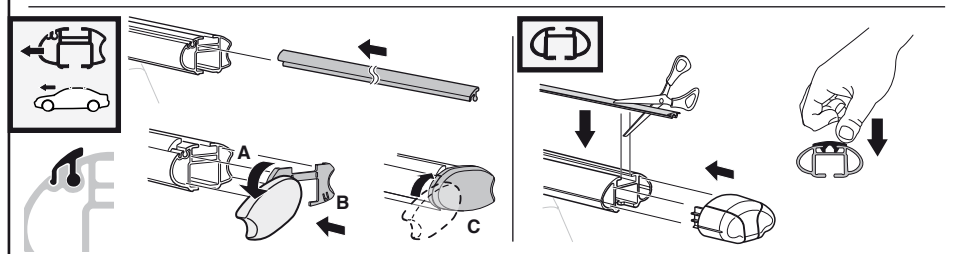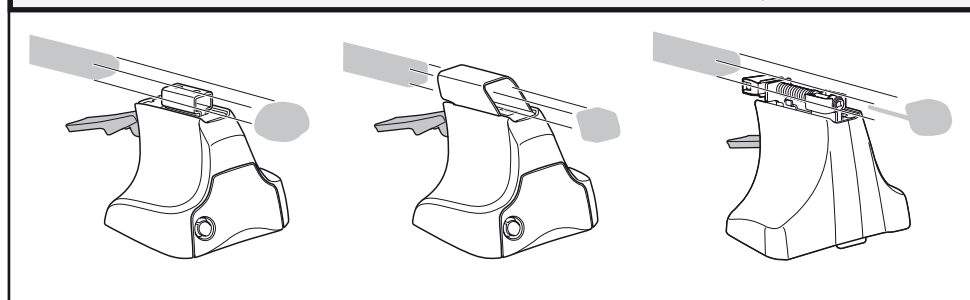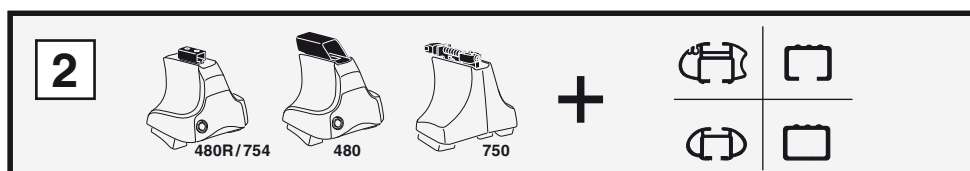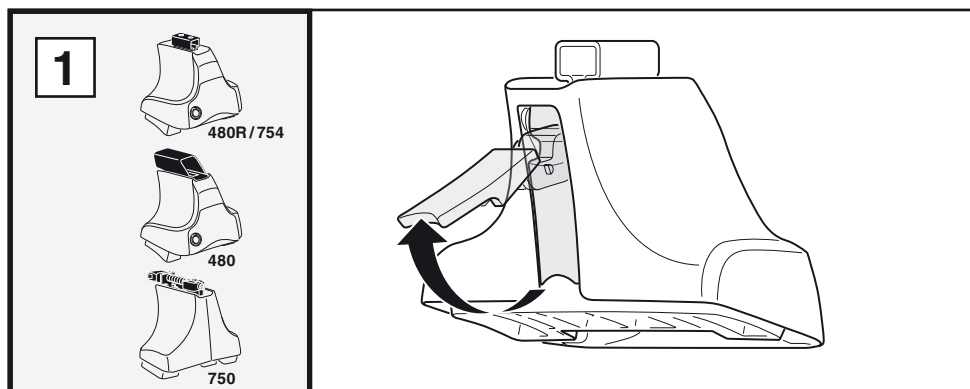

3

 


754

 


750



 1

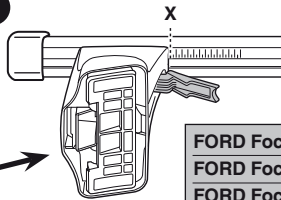


2

 

	X
FORD Focus, 3-dr Hatchback, 98-03, 04	33,5
FORD Focus, 4-dr Sedan, 98-03, 04	32,5
FORD Focus, 5-dr Hatchback, 98-03, 04	32,5
FORD Focus, 5-dr Estate, 98-03, 04	32

 1

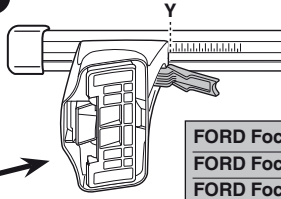

2



	Y
FORD Focus, 3-dr Hatchback, 98-03, 04	28
FORD Focus, 4-dr Sedan, 98-03, 04	30
FORD Focus, 5-dr Hatchback, 98-03, 04	29
FORD Focus, 5-dr Estate, 98-03, 04	28,5

 


480R



480

1




2




	X inch	X mm
FORD Focus, 3-dr Hatchback, 98-03, 04	38 7/8"	986 mm
FORD Focus, 4-dr Sedan, 98-03, 04	38 3/8"	976 mm
FORD Focus, 5-dr Hatchback, 98-03, 04	38 3/8"	976 mm
FORD Focus, 5-dr Estate, 98-03, 04	38 1/4"	971 mm

 1



2

 

	Y inch	Y mm
FORD Focus, 3-dr Hatchback, 98-03, 04	36 5/8"	931 mm
FORD Focus, 4-dr Sedan, 98-03, 04	37 1/2"	951 mm
FORD Focus, 5-dr Hatchback, 98-03, 04	37"	941 mm
FORD Focus, 5-dr Estate, 98-03, 04	36 7/8"	936 mm

 
 
 
 
4

FORD Focus, 3-dr Hatchback, 98-03, 04


FORD Focus, 4-dr Sedan, 98-03, 04

FORD Focus, 5-dr Hatchback, 98-03, 04

FORD Focus, 5-dr Estate, 98-03, 04

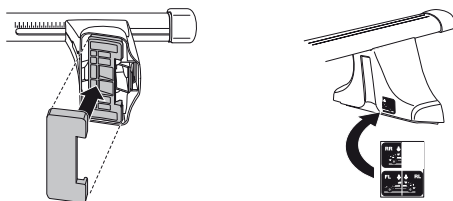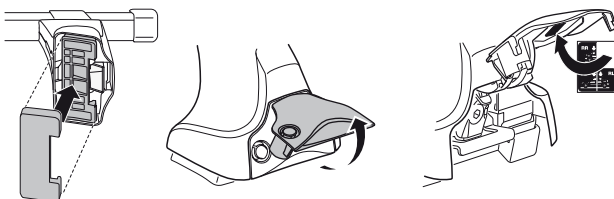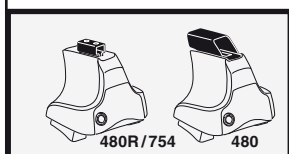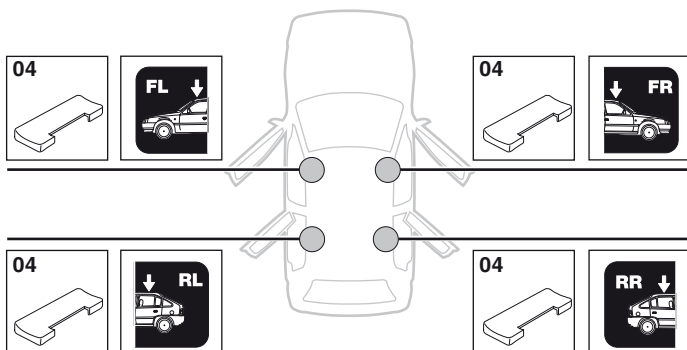


5

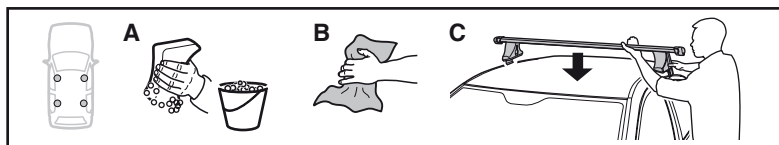 


FORD Focus, 3-dr Hatchback, 98-03, 04

 
SRA

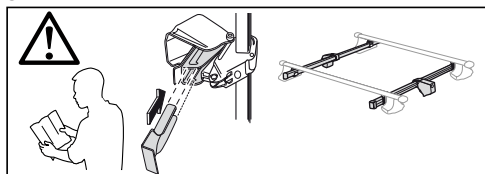


254

 











254

 


280


 







280

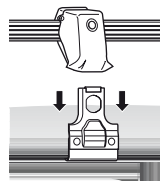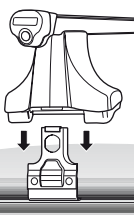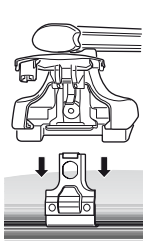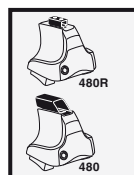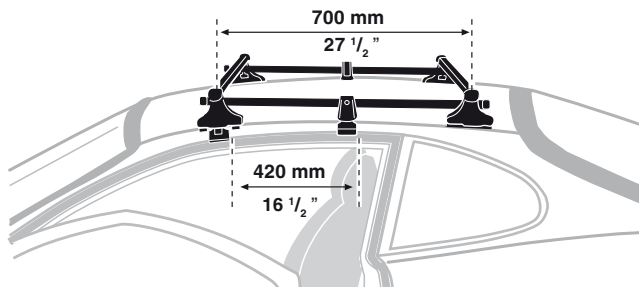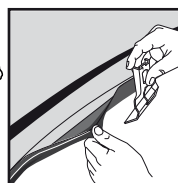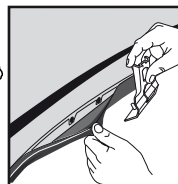          






6

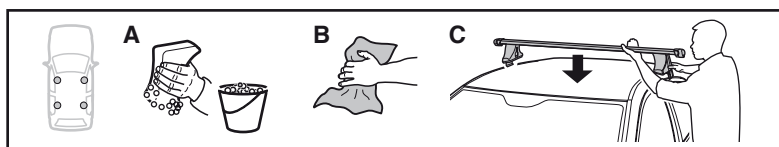 

  		
FORD Focus, 4-dr Sedan, 98-03, 04		
FORD Focus, 5-dr Hatchback, 98-03, 04		
FORD Focus, 5-dr Estate, 98-03, 04		

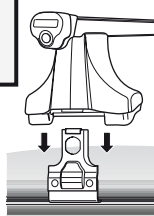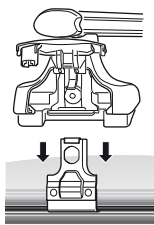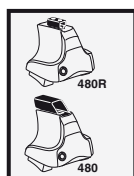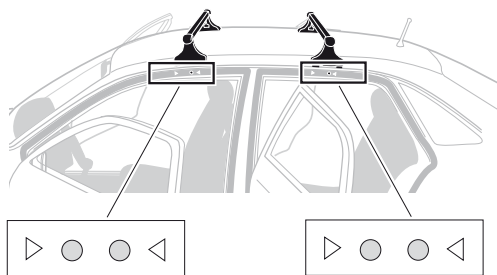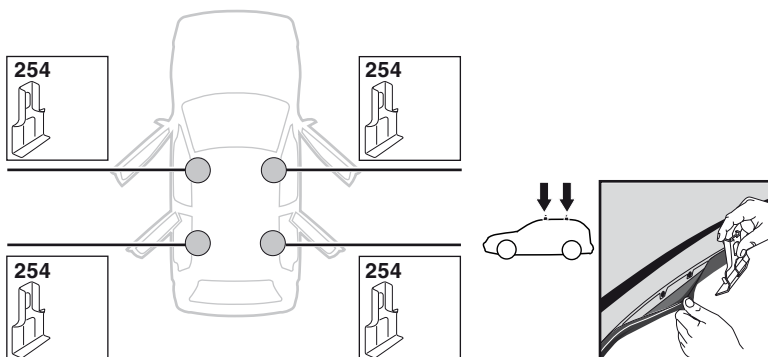     

7

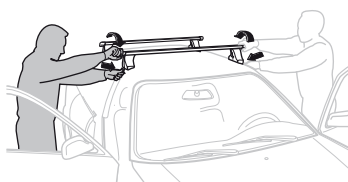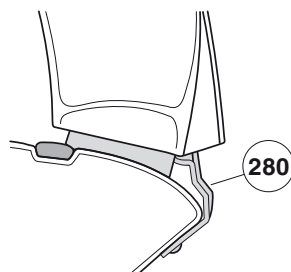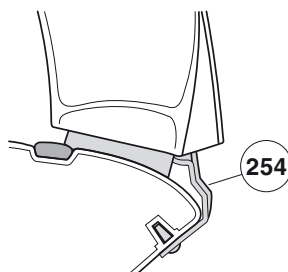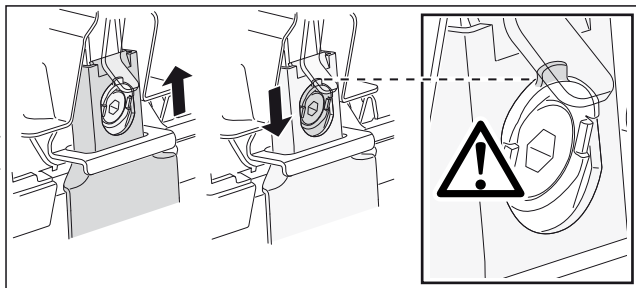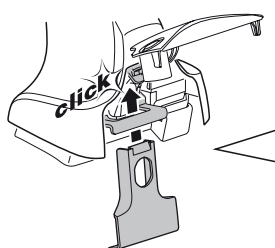     

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ






8





480R/754



     480

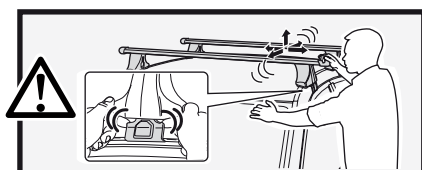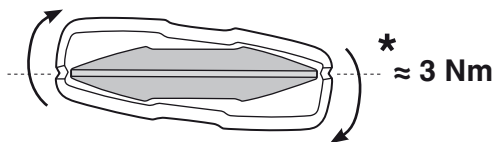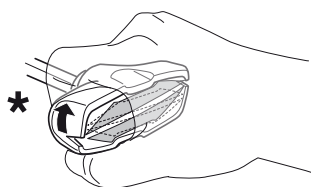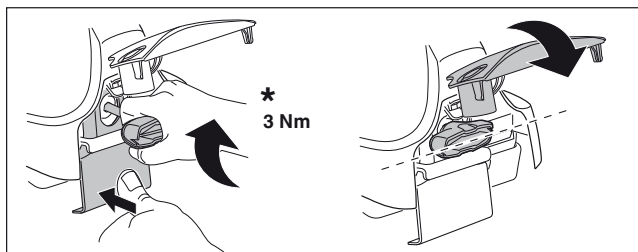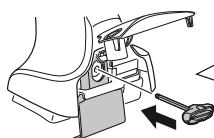

750

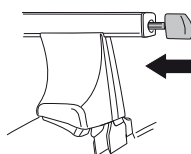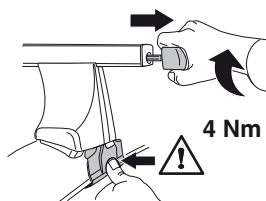  


i




1



 
2

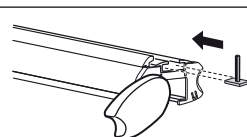


i

 


1

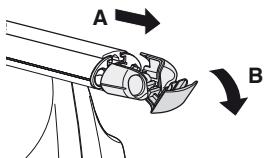 


2

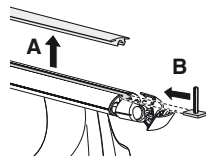 


i





 


1

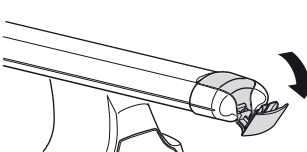 

2

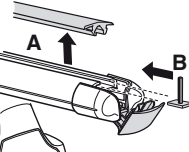 

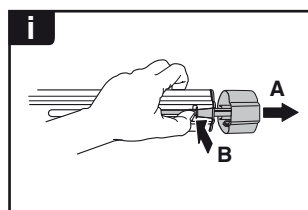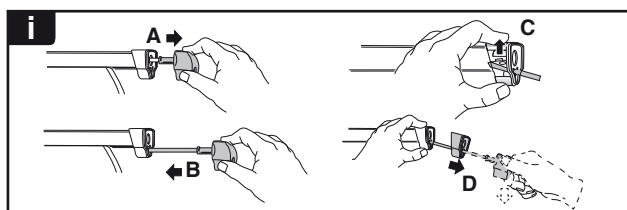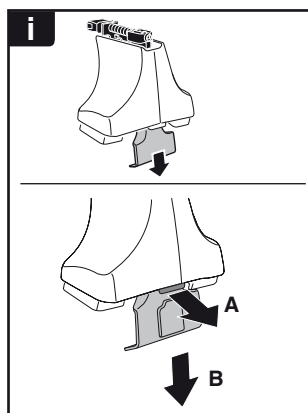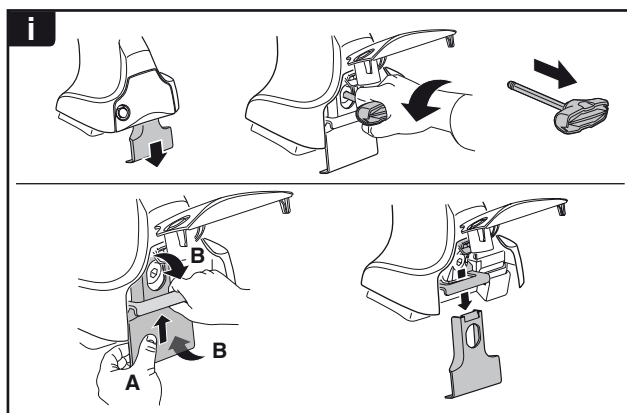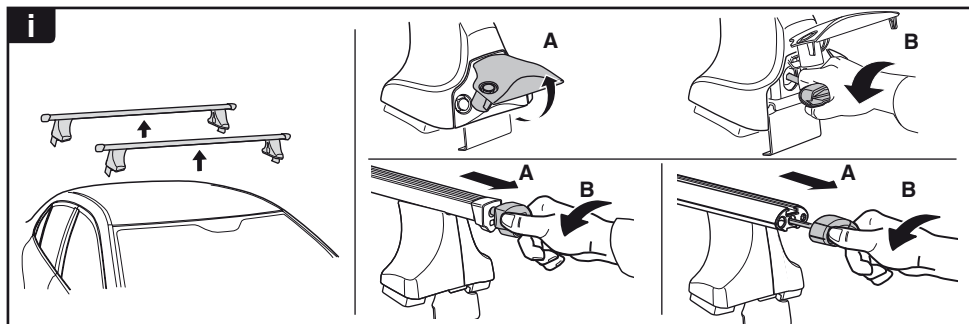     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		