 
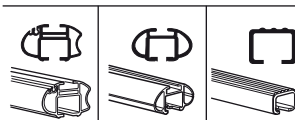 


Kit 1333

 
MITSUBISHI Grandis, 5-dr Estate, 04– (EUR)

MITSUBISHI Grandis, 5-dr Estate, 03– (JPN)



**480R
754**

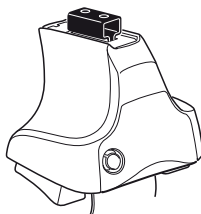

480

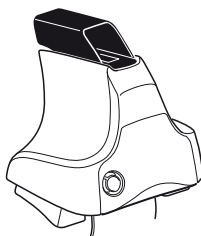

750

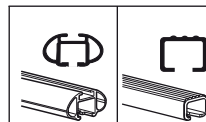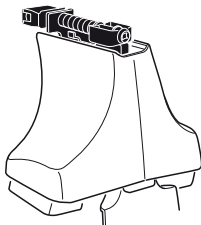  

THULE[®]
SWEDEN

ISO 11154-E

**Max.
60 kg**
**Max.
132 lbs**

Kit XXXX
instructions

480R/754

480

750

x2 x2 x2 x4	x2	x2 x2 x4 x4	x2 x2 x2	x2

613 x2

 
 
 
 
 
620 x2

43 x2


147 x2

x1


Kit

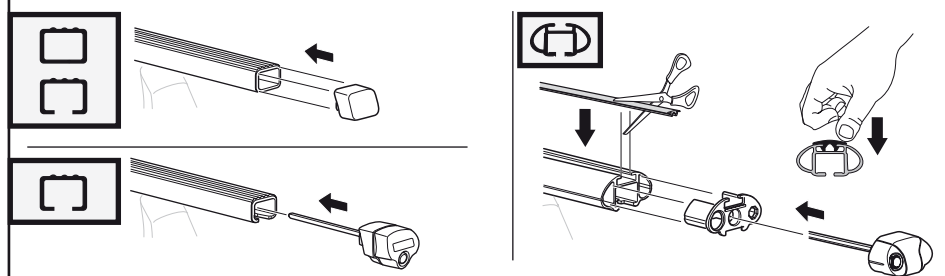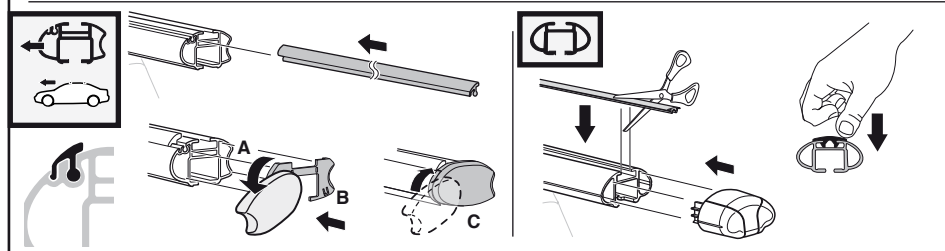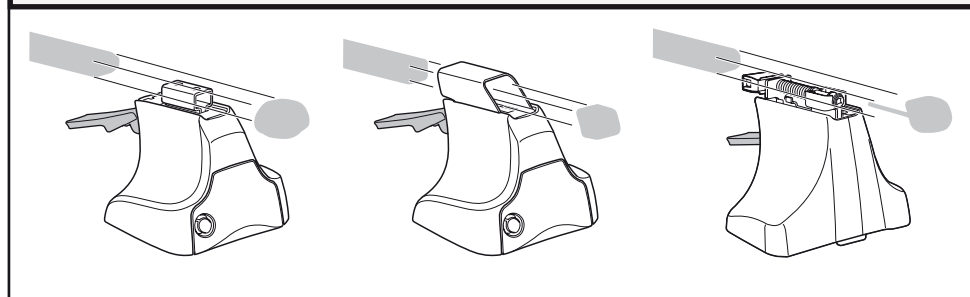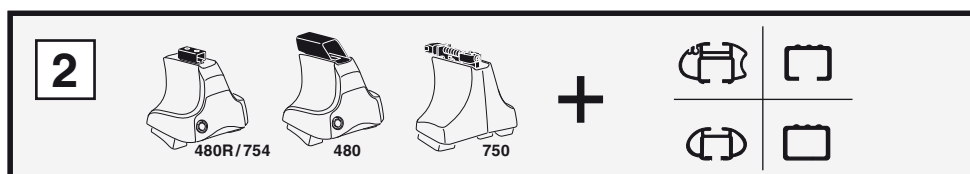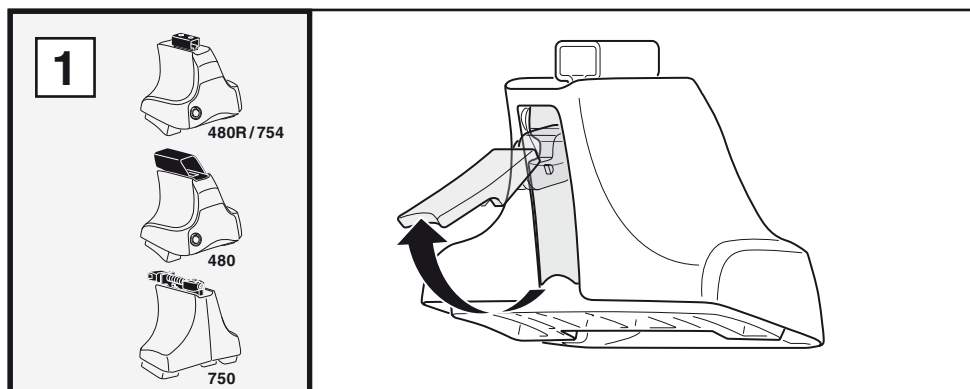

3


 


754

 


750

  1

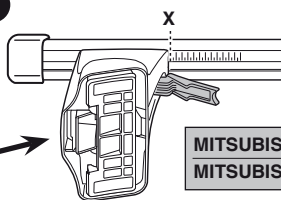

2

 

X

 
MITSUBISHI Grandis, 5-dr Estate, 04- (EUR)

44,5

MITSUBISHI Grandis, 5-dr Estate, 03- (JPN)

44,5

1

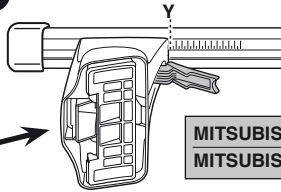

2



Y

MITSUBISHI Grandis, 5-dr Estate, 04- (EUR)

42,5

MITSUBISHI Grandis, 5-dr Estate, 03- (JPN)

42,5

 
 


480R




480

1

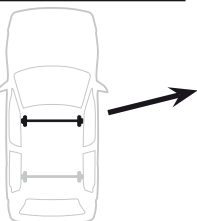

2

 

X inch

X mm

MITSUBISHI Grandis, 5-dr Estate, 04- (EUR)

43 1/8"

 
 
1096mm

MITSUBISHI Grandis, 5-dr Estate, 03- (JPN)


43 1/8"

1096mm

1

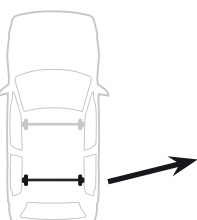

2

 

Y inch

Y mm

MITSUBISHI Grandis, 5-dr Estate, 04- (EUR)

42 3/8"

1076 mm

MITSUBISHI Grandis, 5-dr Estate, 03- (JPN)

 
 
 
 
 
 
42 3/8"

1076 mm


4

MITSUBISHI Grandis, 5-dr Estate, 04- (EUR)





MITSUBISHI Grandis, 5-dr Estate, 03- (JPN)

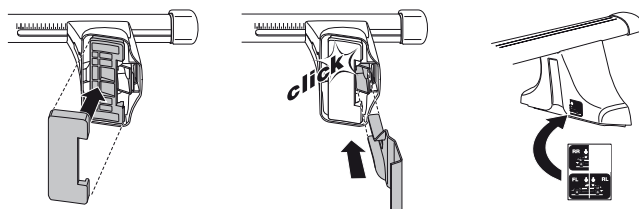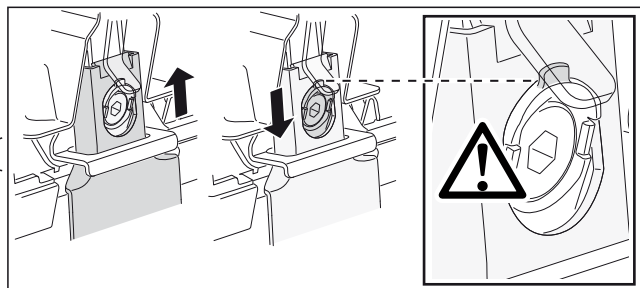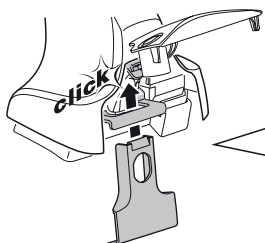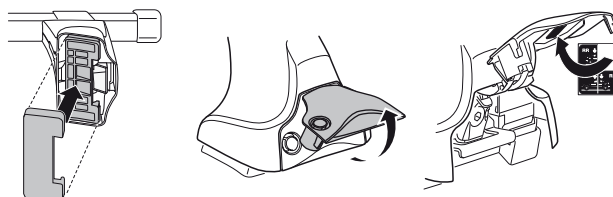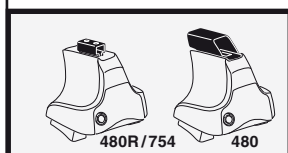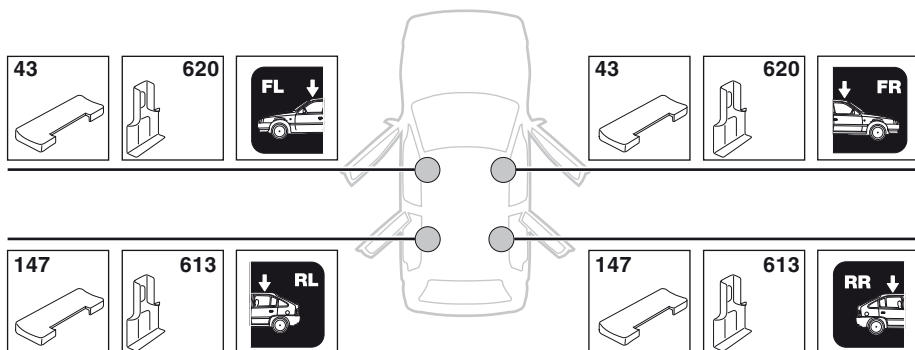

5

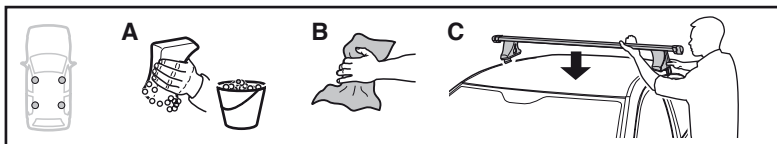 

	X mm	Y mm	X inch	Y inch
MITSUBISHI Grandis, 5-dr Estate, 04- (EUR)	460 mm	700 mm	18 1/8"	27 1/2"
MITSUBISHI Grandis, 5-dr Estate, 03- (JPN)	460 mm	700 mm	18 1/8"	27 1/2"

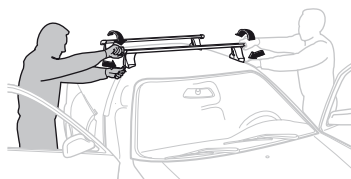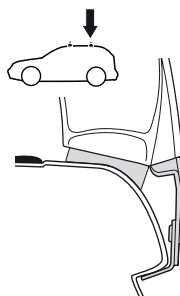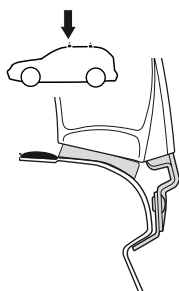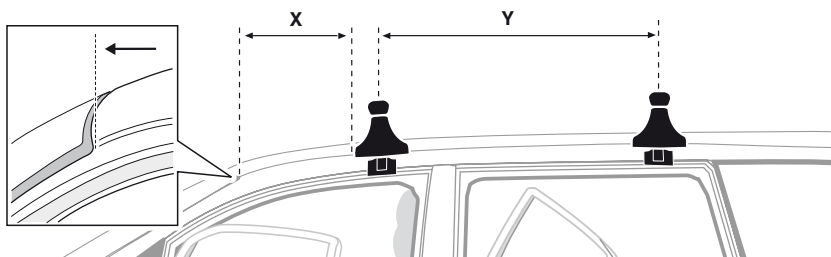    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apretar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielvelciot pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťta багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ






6





480R/754



     480

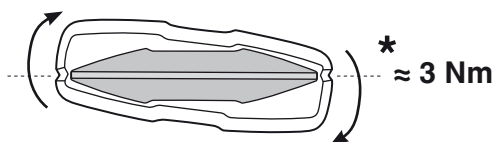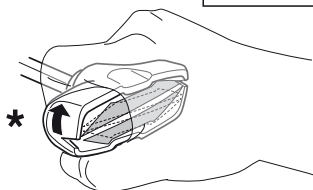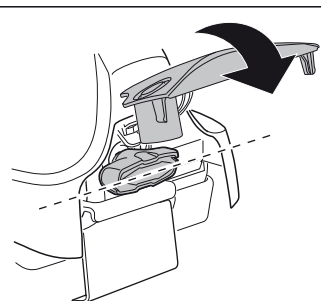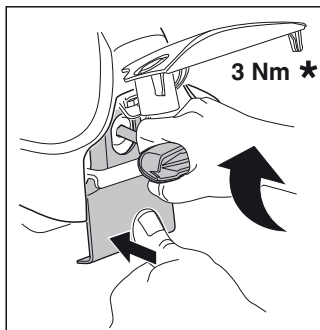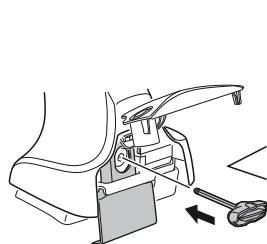


750

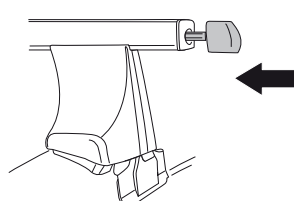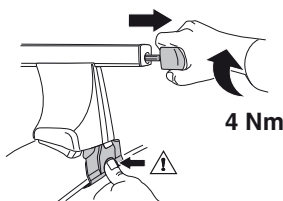  


i



 
1

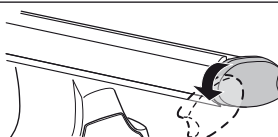


2

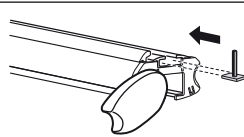 


i

 

1

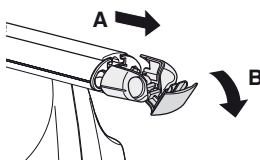 


2

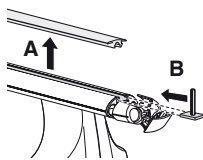 


i








 1

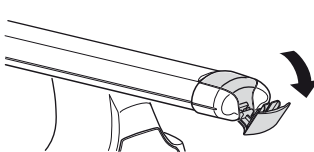

2

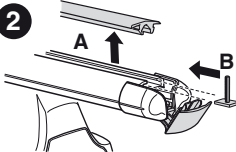 

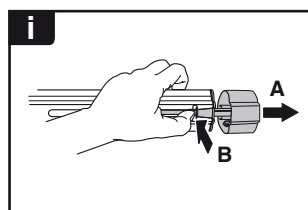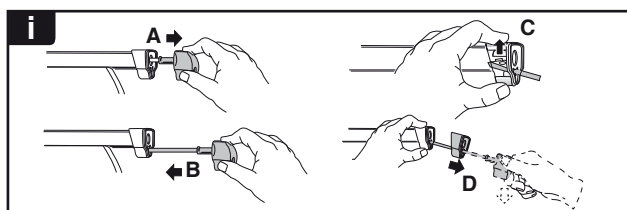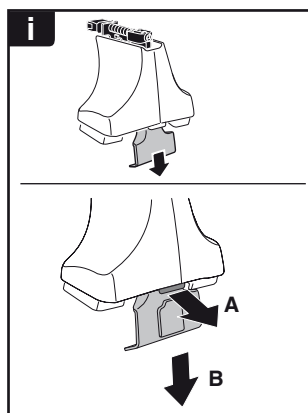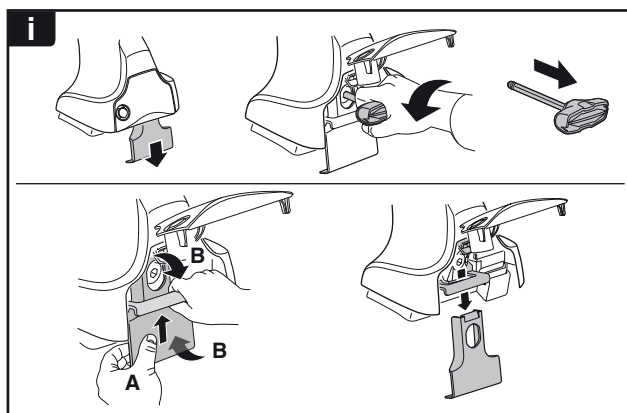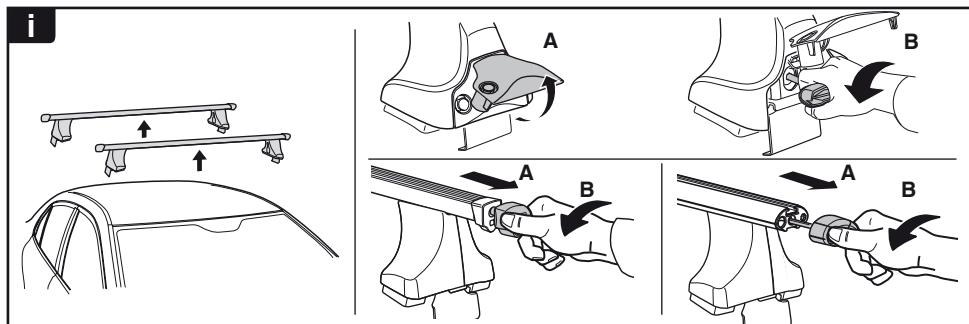     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

510 (x10)

NA **452** (x12)

EUR

ASIA