 
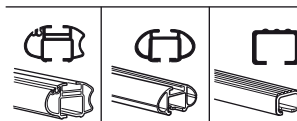 


Kit 1465

 
HONDA Fit, 5-dr Hatchback, 08– (JPN)

HONDA Jazz, 5-dr Hatchback, 08–



**480R
754**

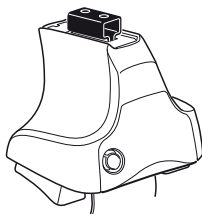

480

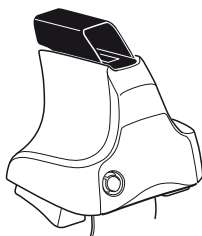

750

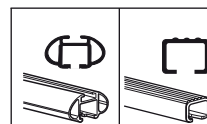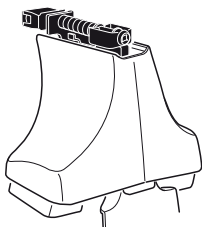  

**Max.
40 kg**
**Max.
88 lbs**

x1

x4

x4

x4

x1

x4

x4

x4

x1

x4

x4

x4

x2 x2 x2 x4	x2	x2 x2 x4 x4	x2 x2 x2	x2
----------------------	----	----------------------	----------------	----

 
 
 
 
 
1022 x 4

06 x 2




278 x 2

x1



Kit

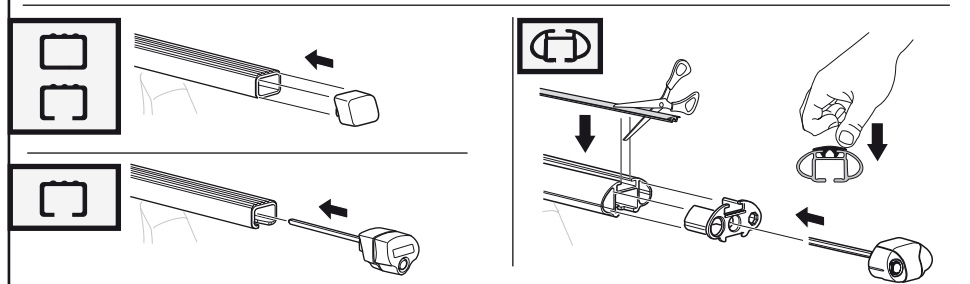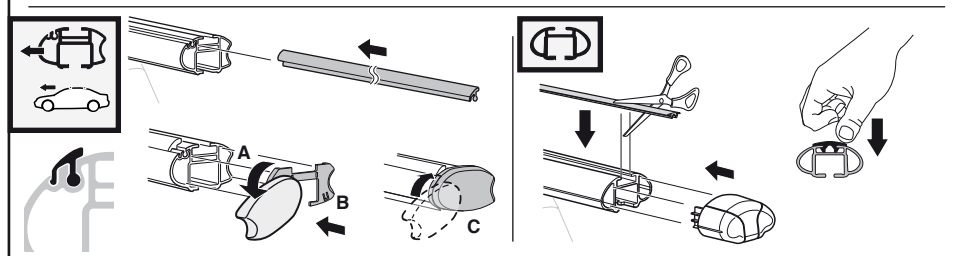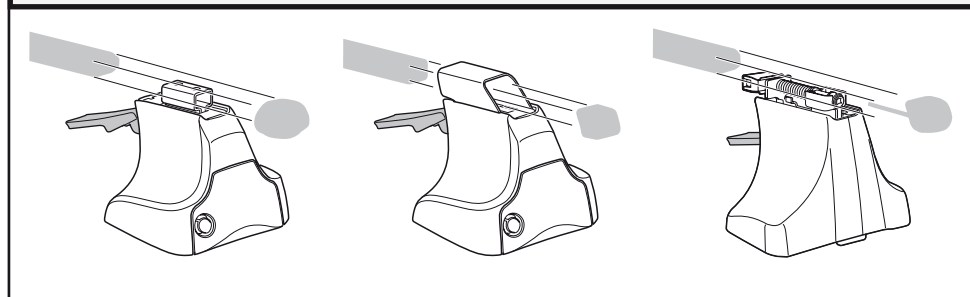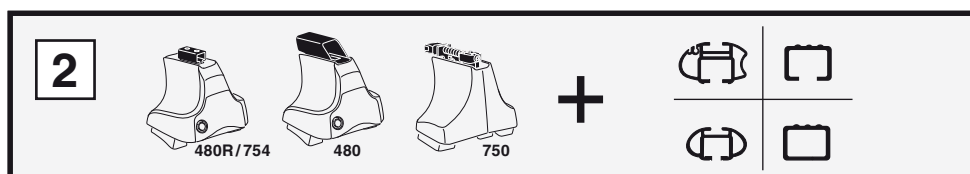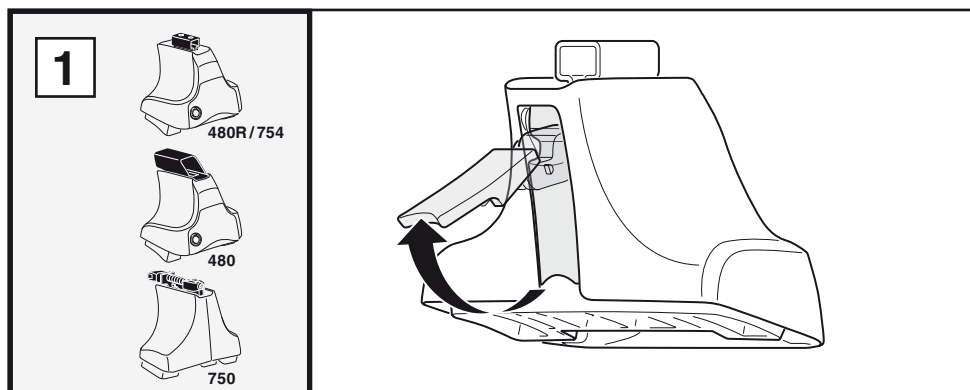

3

   

1

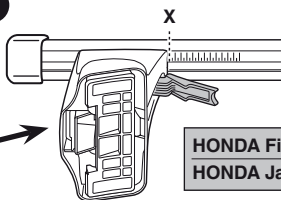  

2



 
 
HONDA Fit, 5-dr Hatchback, 08- (JPN)
HONDA Jazz, 5-dr Hatchback, 08-

X

30

30

1

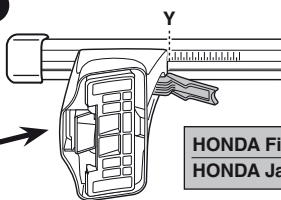

2



HONDA Fit, 5-dr Hatchback, 08- (JPN)
HONDA Jazz, 5-dr Hatchback, 08-

Y

25,5

25,5

 


480R




480

1



2

 

HONDA Fit, 5-dr Hatchback, 08- (JPN)
HONDA Jazz, 5-dr Hatchback, 08-

X inch

X mm

 
37 1/4"

951 mm


37 1/4"

951 mm

1



2

 

HONDA Fit, 5-dr Hatchback, 08- (JPN)
HONDA Jazz, 5-dr Hatchback, 08-

Y inch

Y mm

35 5/8"

906 mm

35 5/8"

906 mm

4

HONDA Fit, 5-dr Hatchback, 08- (JPN)

HONDA Jazz, 5-dr Hatchback, 08-

278



1022



278



1022



06



 
 
 
 
 
 
 
 
 
 
 
1022




06





1022

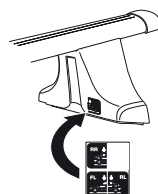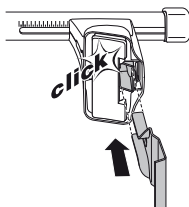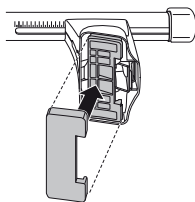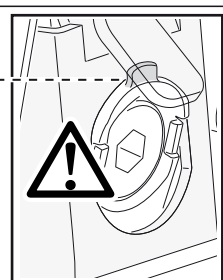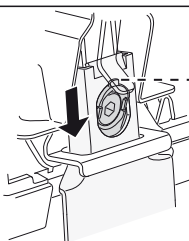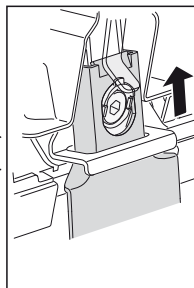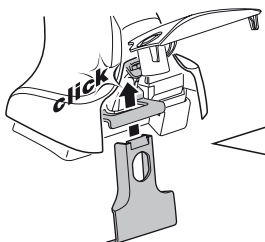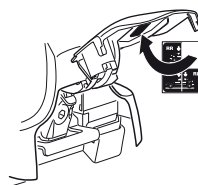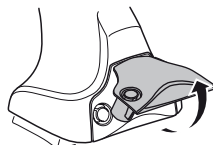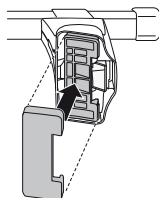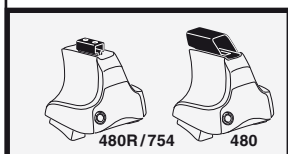

5

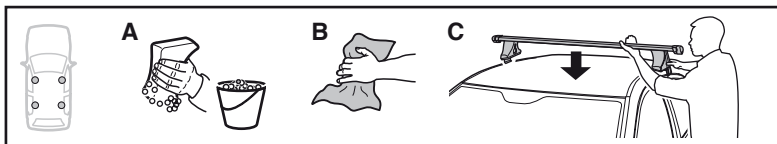 

	X mm	Y mm	X inch	Y inch
HONDA Fit, 5-dr Hatchback, 08– (JPN)	310 mm	750 mm	12 1/4"	29 1/4"
HONDA Jazz, 5-dr Hatchback, 08–	310 mm	750 mm	12 1/4"	29 1/4"

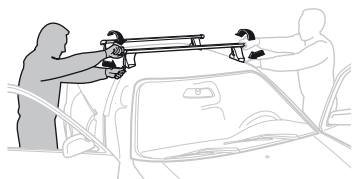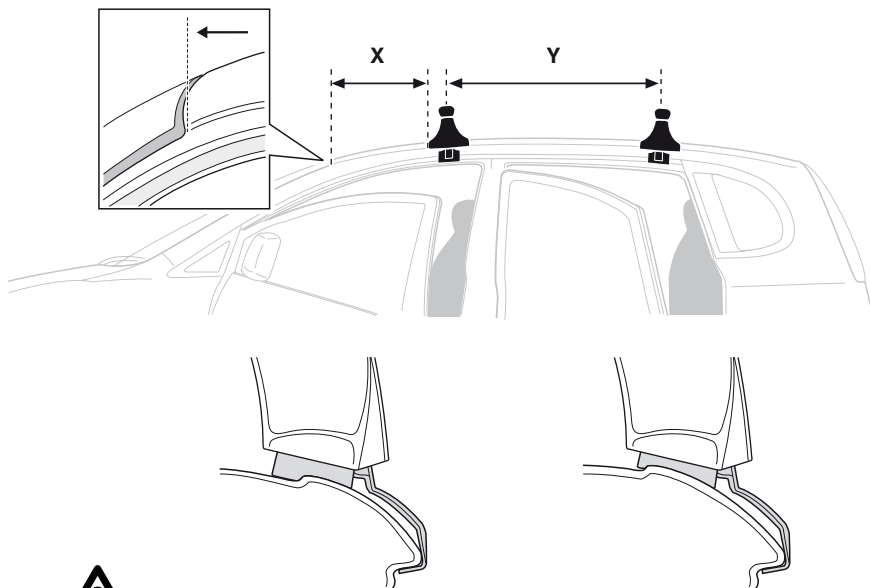  

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelsvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciēt pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ





6





480R/754



    480

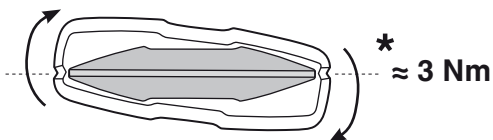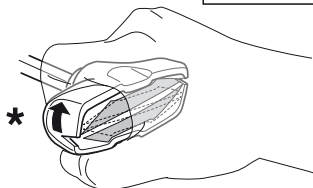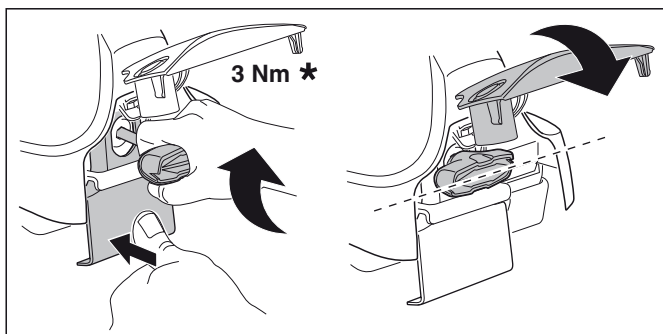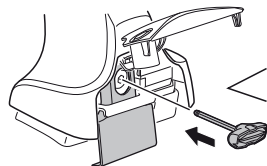

750

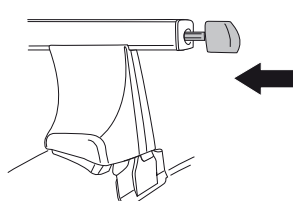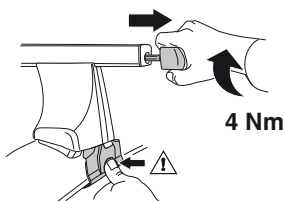  


i




1



 
2

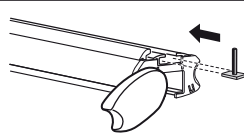


i

 


1

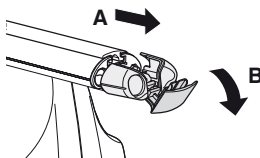 


2

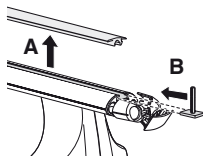 


i





 


1

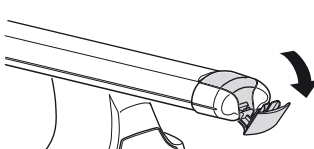 

2

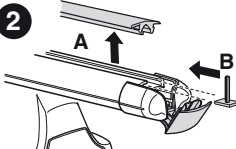 

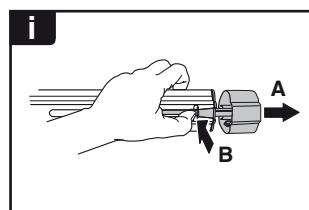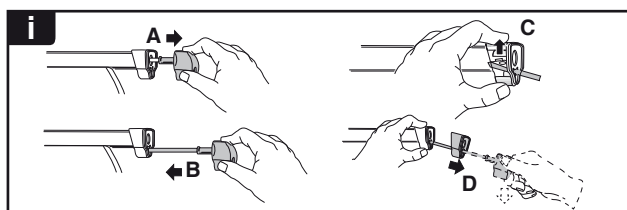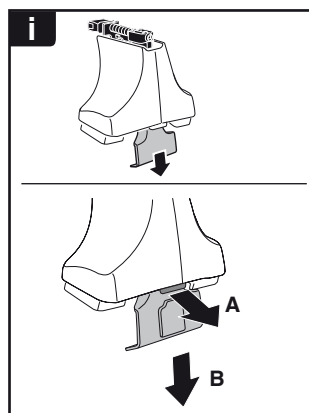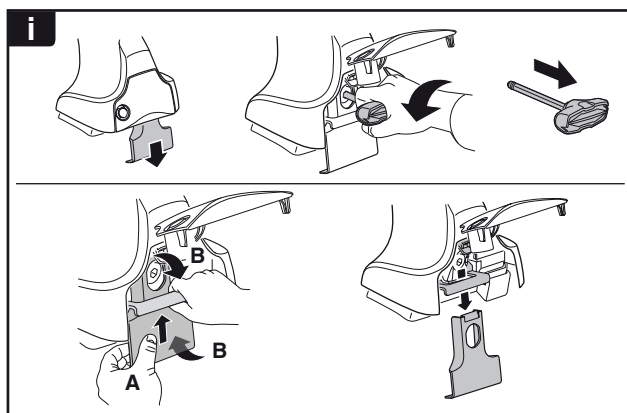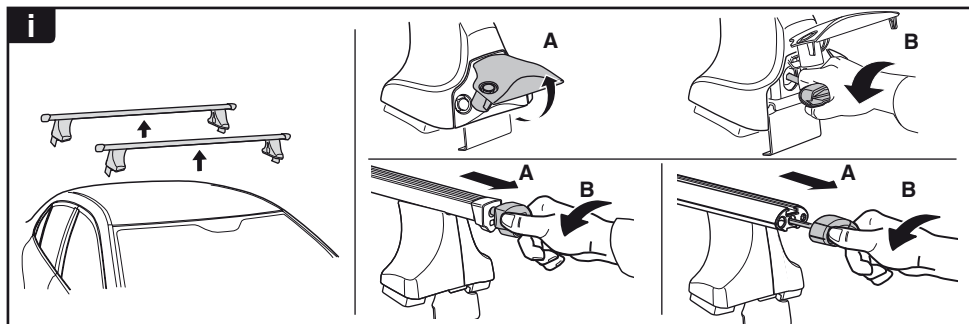     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		