 
 
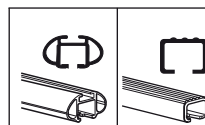 
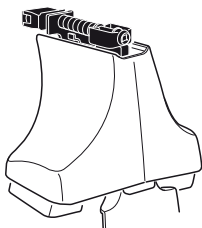 
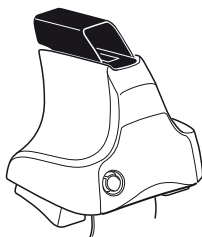 
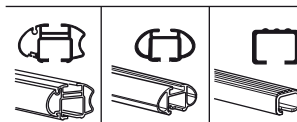 
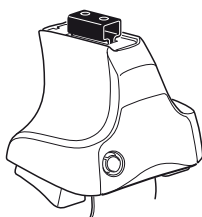 
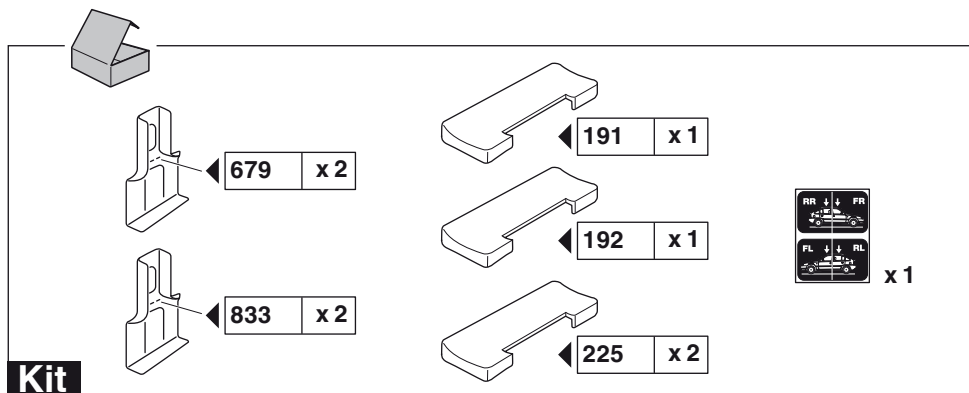 
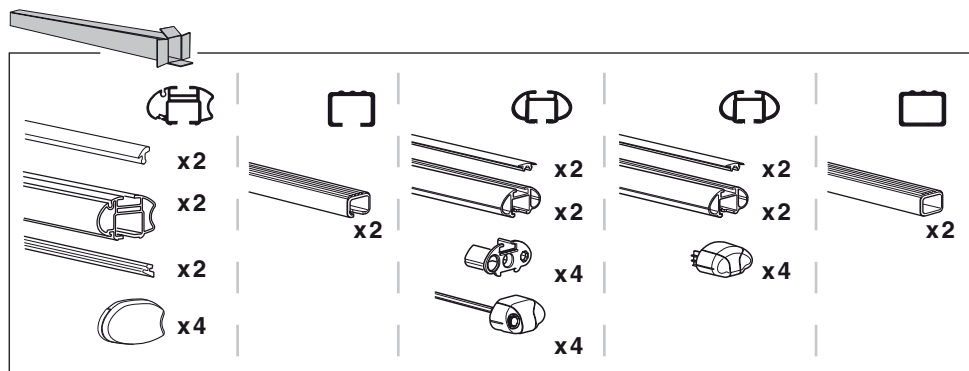 


Kit 1425

 
HONDA Civic, 4-dr Sedan, 05–

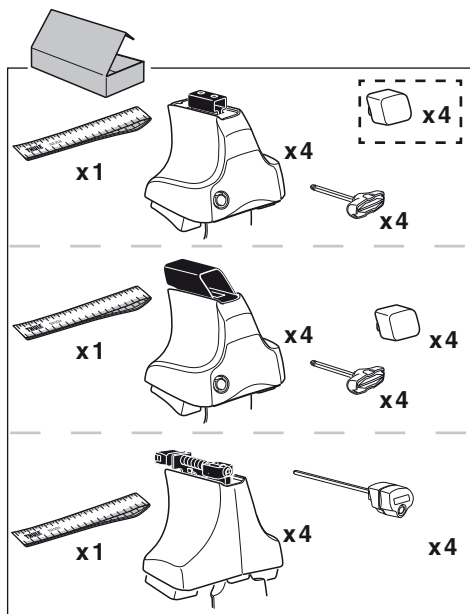

THULE[®]
SWEDEN

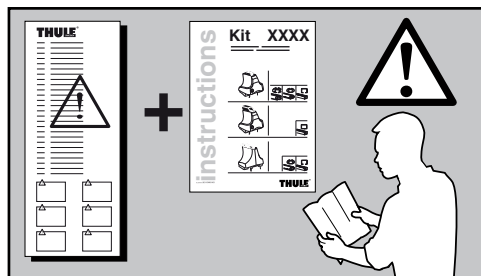









1

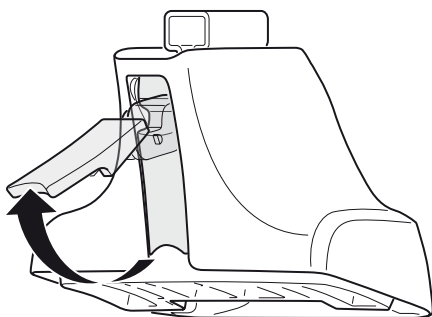



2



        
+

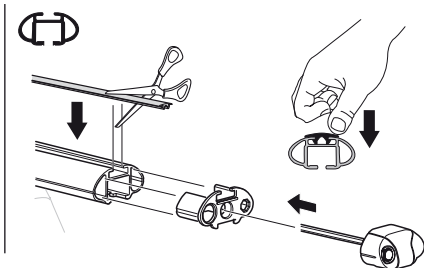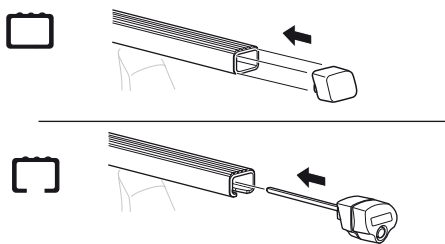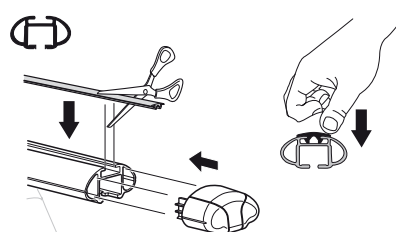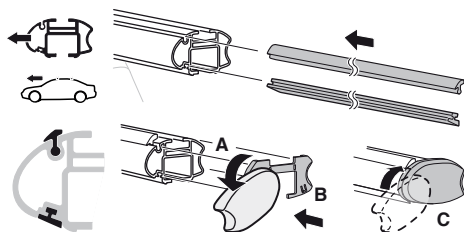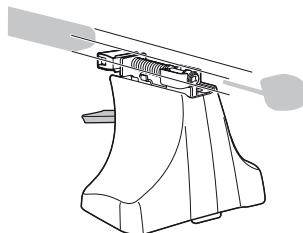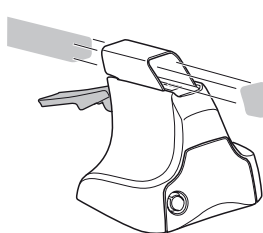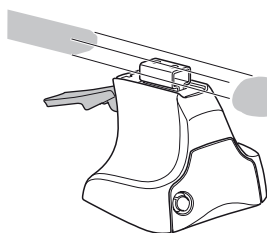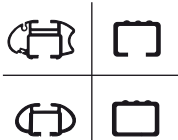



3

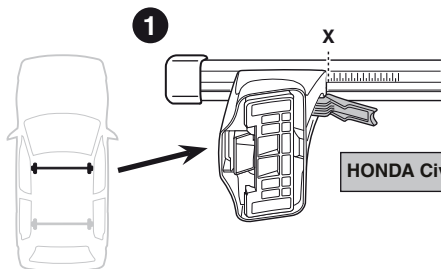  



X
HONDA Civic, 4-dr Sedan, 05–
43,5

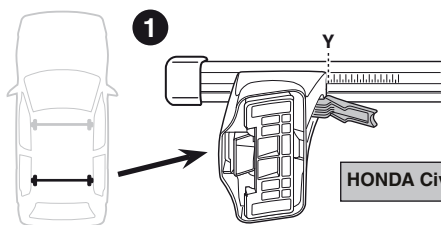 

Y
HONDA Civic, 4-dr Sedan, 05–
37

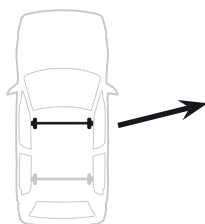  




X inch	X mm
HONDA Civic, 4-dr Sedan, 05–	
42 3/4"	1086 mm

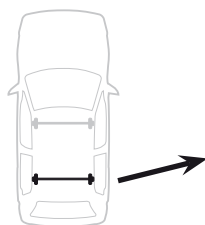  


Y inch	Y mm
HONDA Civic, 4-dr Sedan, 05–	
40 1/4"	1021 mm

4

  
 
HONDA Civic, 4-dr Sedan, 05–

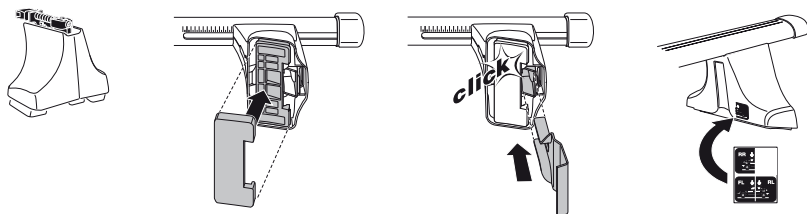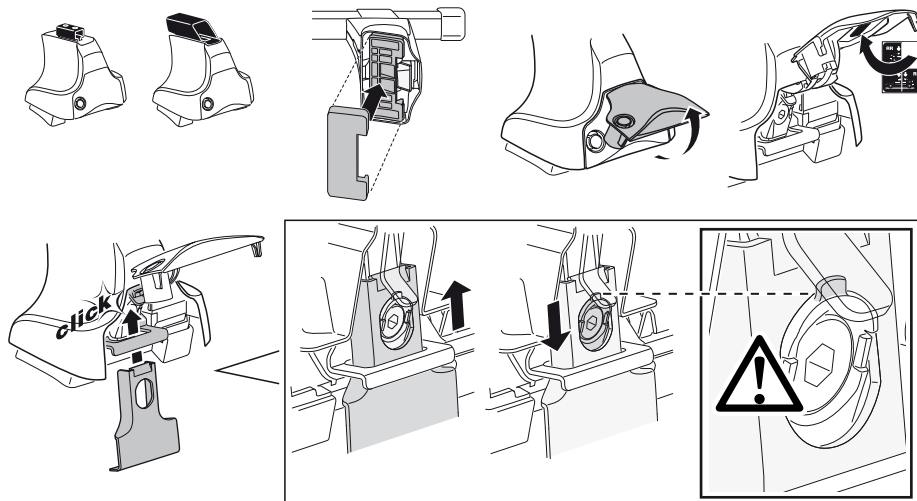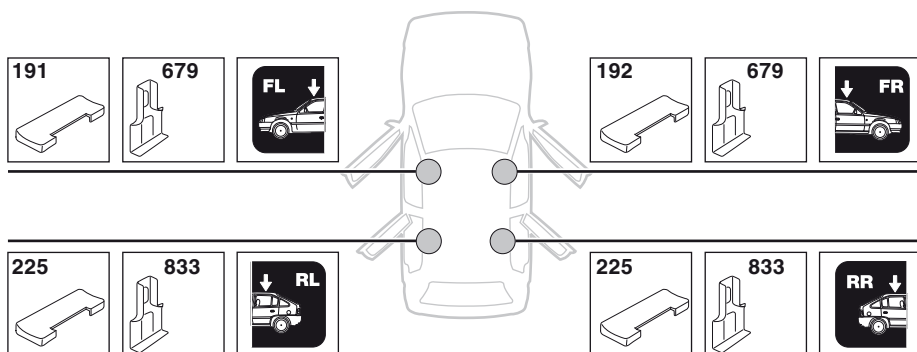

5

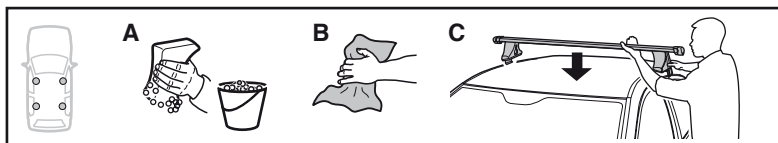 

	X mm	Y mm	X inch	Y inch
HONDA Civic, 4-dr Sedan, 05–	270 mm	700 mm	10 ⁵ / ₈ "	27 ¹ / ₄ "

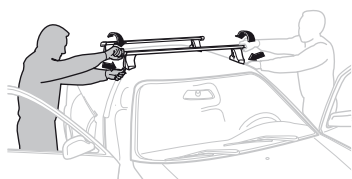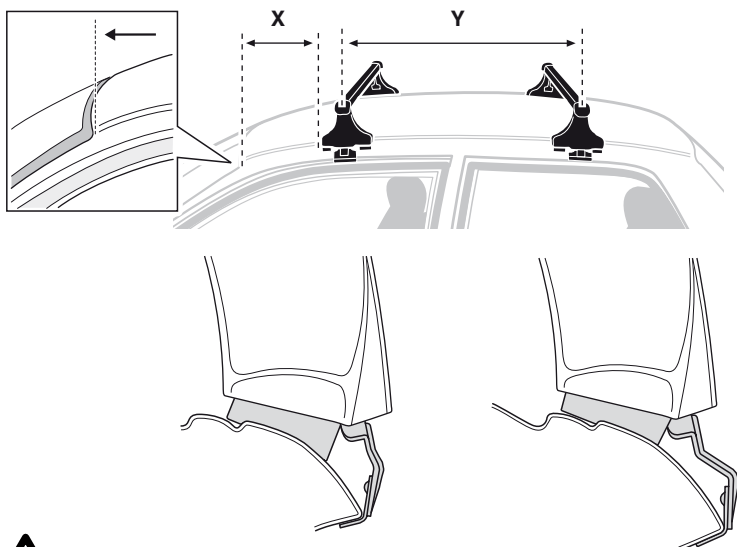  

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciet pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól fűggetlenül szorítandó

GR Σφιγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ชันในแบบสลับ

6

