 
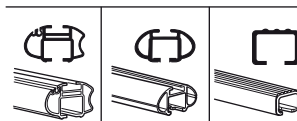 


# Kit 1039

 
 
**AUDI A6, 4-dr Sedan, 97-00, 01-03**

**AUDI A6 Avant, 5-dr Estate, 98-04**



**480R  
754**

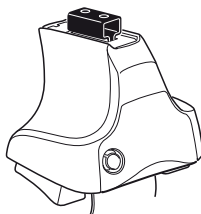

**480**

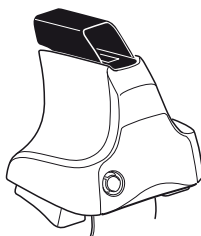

**750**

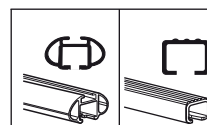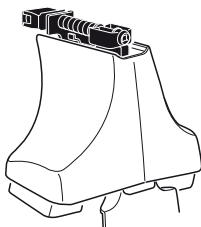  

**THULE**<sup>®</sup>  
SWEDEN

ISO 11154-E

**Max.  
75kg**  
**Max.  
165 lbs**

**Kit XXXX**  
**instructions**

**480R/754**

**480**

**750**

|                      |    |                      |                |    |
|----------------------|----|----------------------|----------------|----|
|                      |    |                      |                |    |
| x2<br>x2<br>x2<br>x4 | x2 | x2<br>x2<br>x4<br>x4 | x2<br>x2<br>x2 | x2 |

**04** x2

**29** x1

**30** x1

 
 
 
 
 
**33** x1

**34** x1


**341** x4

**x1**

**Kit**

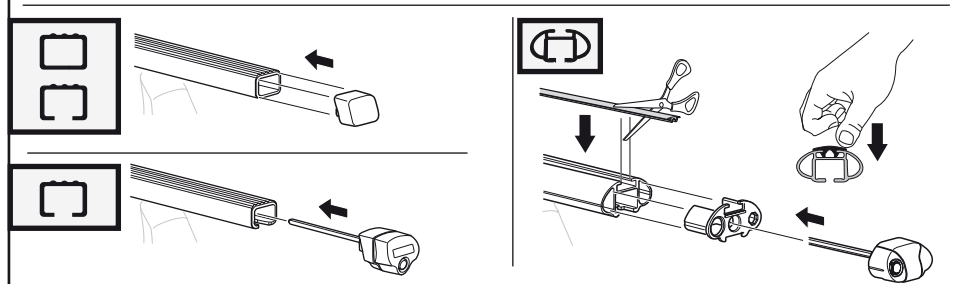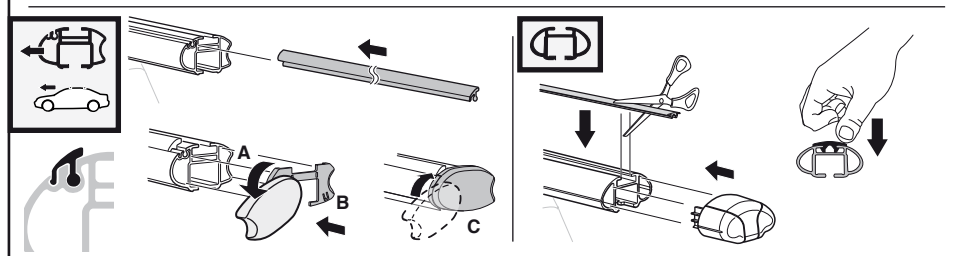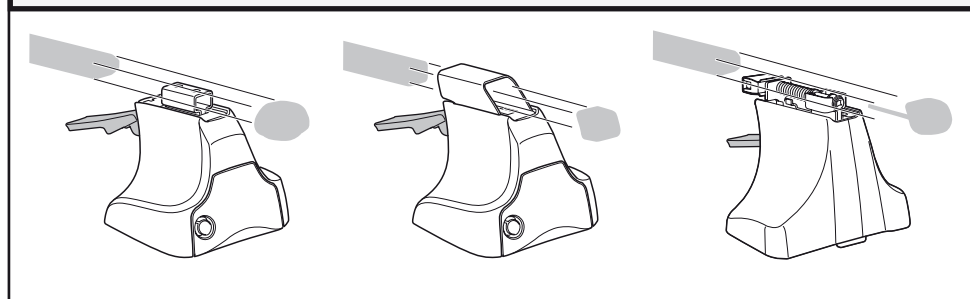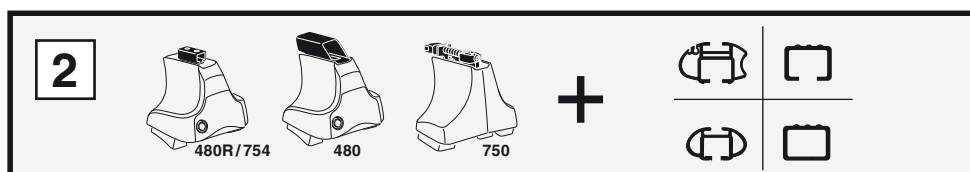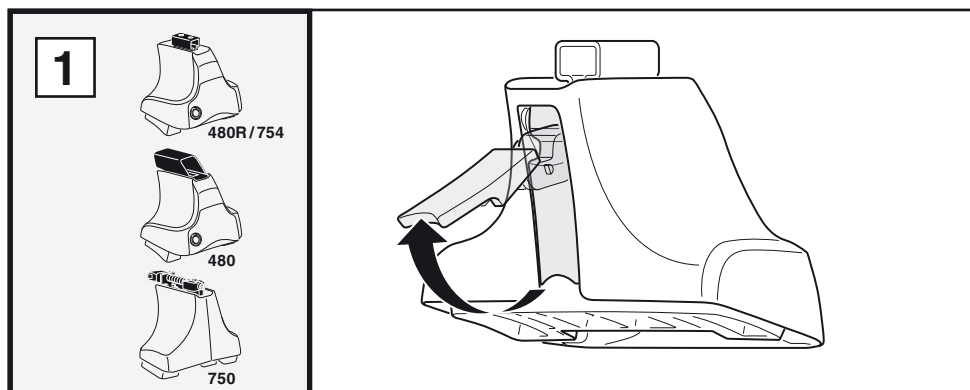

3

 



754



750



  1

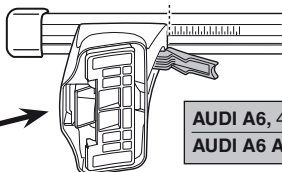

2



X

 
AUDI A6, 4-dr Sedan, 97-00, 01-03

34,5

AUDI A6 Avant, 5-dr Estate, 98-04

34

1

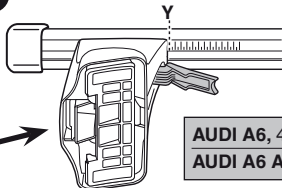

2



Y

AUDI A6, 4-dr Sedan, 97-00, 01-03

34,5

AUDI A6 Avant, 5-dr Estate, 98-04

32

 


480R



480

1



2



X inch

X mm

AUDI A6, 4-dr Sedan, 97-00, 01-03

39 1/4"

 
996 mm

AUDI A6 Avant, 5-dr Estate, 98-04

39"

991 mm

1



2



Y inch

Y mm

AUDI A6, 4-dr Sedan, 97-00, 01-03

39 1/4"

996 mm


AUDI A6 Avant, 5-dr Estate, 98-04

38 1/4"








971 mm

**4**





 
**AUDI A6, 4-dr Sedan, 97-00, 01-03**

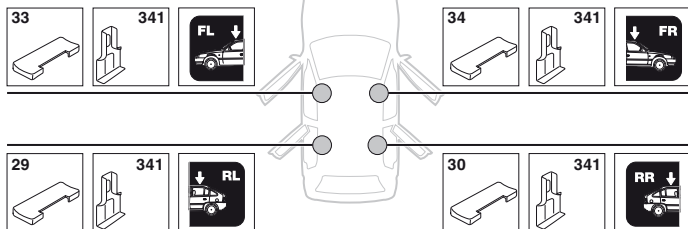

**AUDI A6 Avant, 5-dr Estate, 98-04**

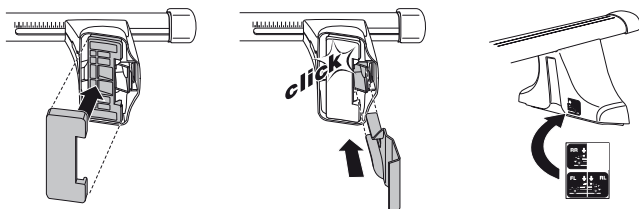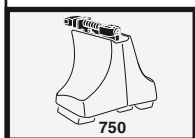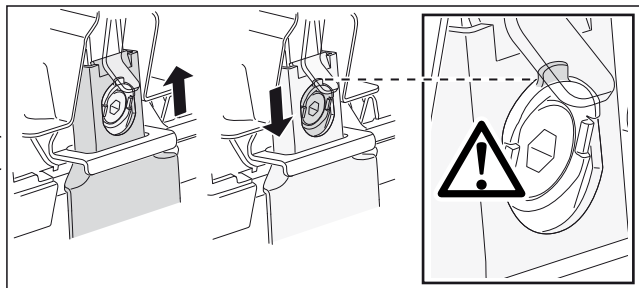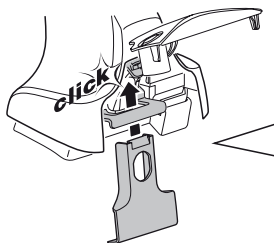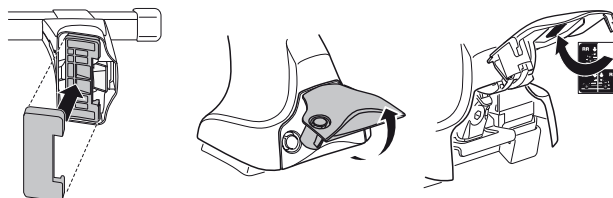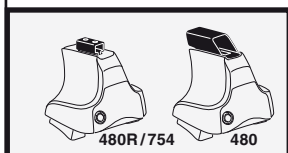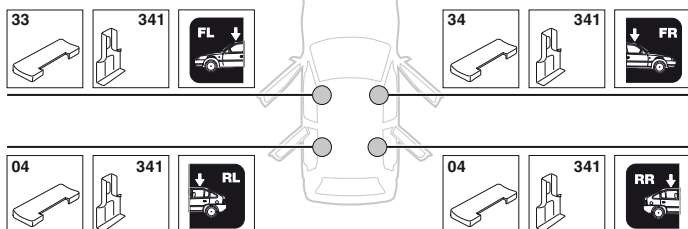       

5

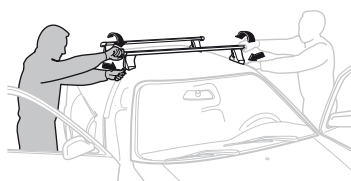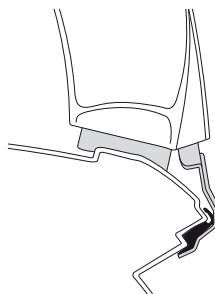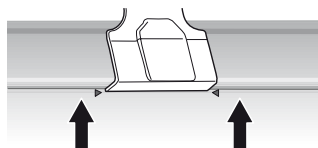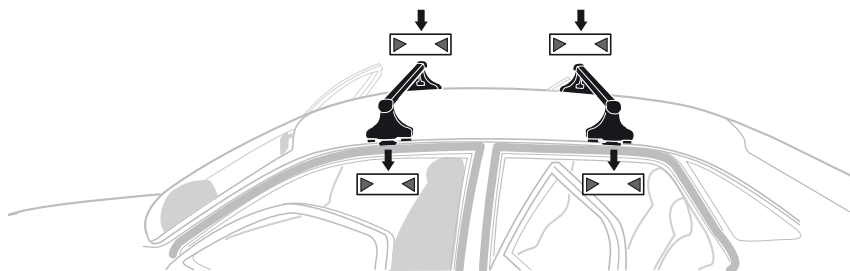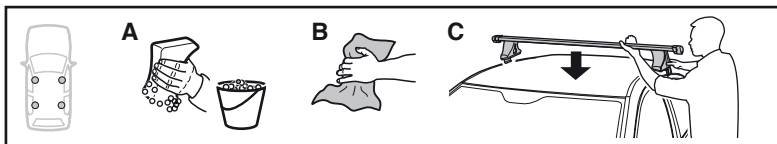     

**GB/US** Tighten alternately

**D** Die Schrauben abwechselnd anziehen

**F** Serrer alternativement chaque côté

**NL** Afwisselend aan de linker- en de rechterkant aandraaien

**I** Alternare il serraggio delle viti

**E** Apretar alternativamente

**PT** Aperte alternadamente

**S** Dra åt växelvis

**FIN** Kierrä vuorotellen

**EST** Pinguldage vaheldumisi

**LAT** Pievelciet pamišus

**LIT** Užsukinėkite pakaitomis

**PL** Śruby dokręcaj naprzemiennie

**RU** Затягивайте попеременно

**CZ** Pokręťta bagazníka dokręcaj dokręcaj naprzemiennie.

**SK** Doťahujte striedavo

**SLO** Privijajte izmenično.

**HR** Naizmjenično zategnite

**HU** Egymástól függetlenül szorítandó

**GR** Σφίγγετε εναλλάξ

**TR** Dönüşümlü sıkın

 
**中文** 交替拧紧

**한국어** 번갈아 가며 조이십시오.

**日本語** 交互に締め付けてください。

**ไทย** ชันในแบบสลับ






6





480R/754



     
480

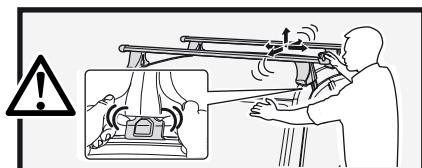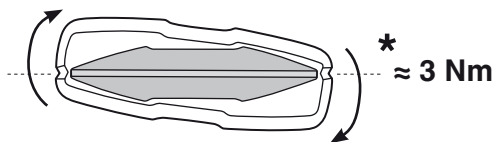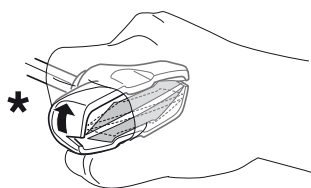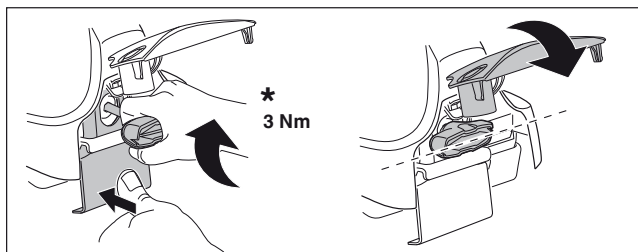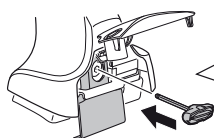




750

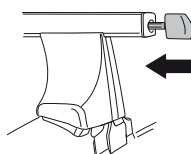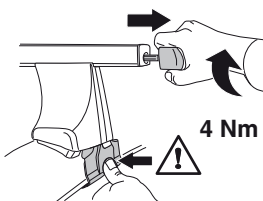  



i





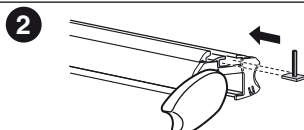 


i

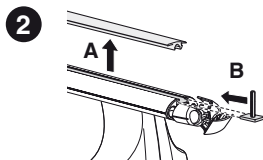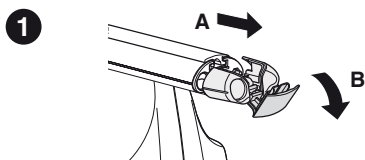   

i

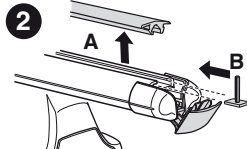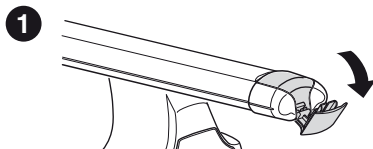  

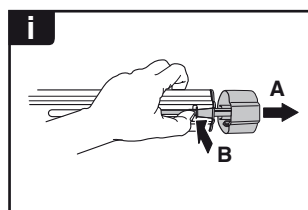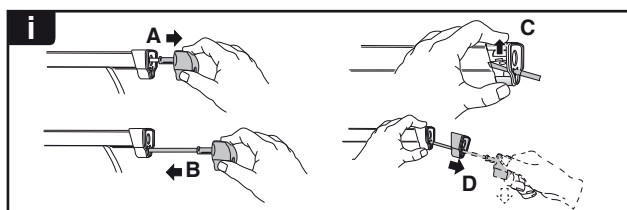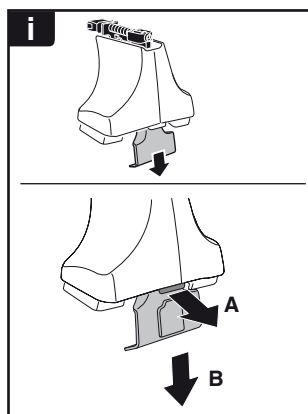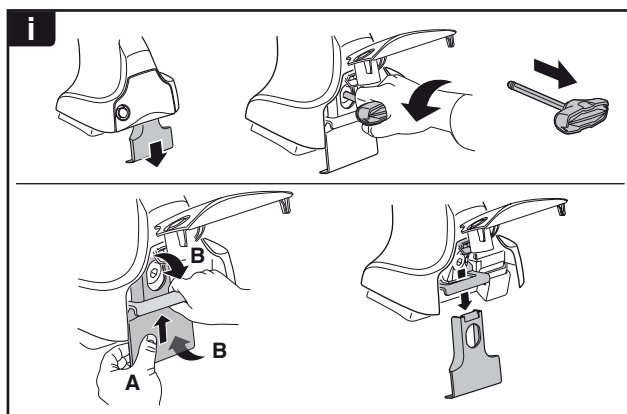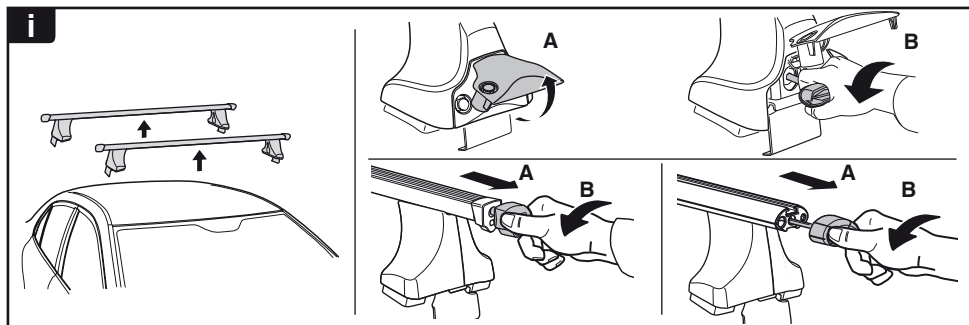     

**THULE®**  
SWEDEN

**ONE  
KEY  
SYSTEM**

|      |  |       |
|------|--|-------|
|      |  | (x4)  |
|      |  | (x6)  |
|      |  | (x8)  |
| NA   |  | (x10) |
| EUR  |  | (x12) |
| ASIA |  |       |