



Kit 1068

HONDA Civic, 4-dr Sedan, 96-00



HONDA Civic Ferio, 4-dr Sedan, 96-99

ACURA EI, 4-dr Sedan, 96-05

 
 
**480R
754**

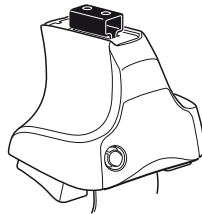

480

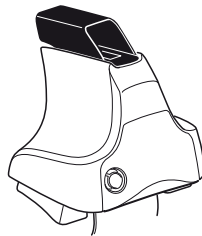  

750

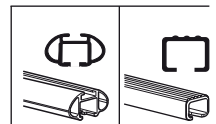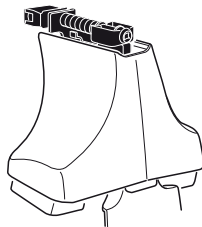  

THULE[®]
SWEDEN

ISO 11154-E






**Max.
75kg**
**Max.
165 lbs**

Kit XXXX
instructions


480R/754
480
750

185 **x 4**
15 **x 4**
x 1

     
Kit

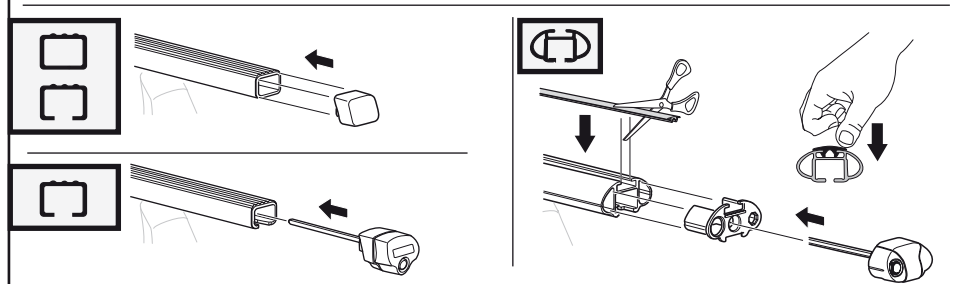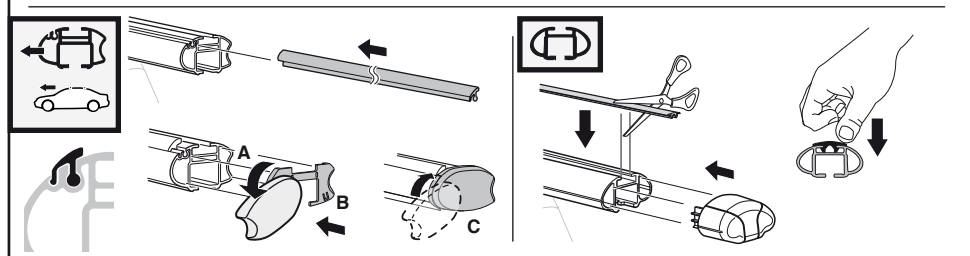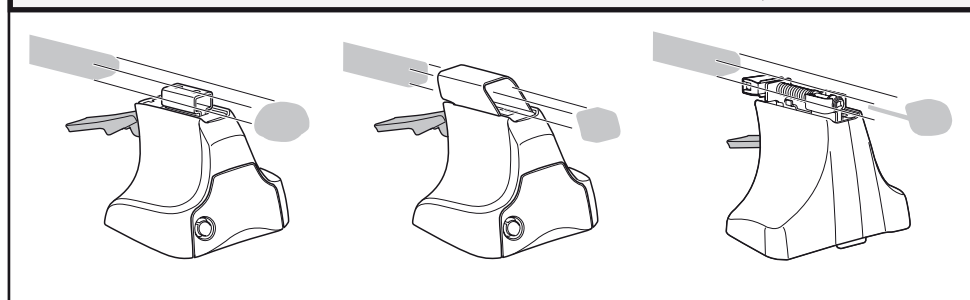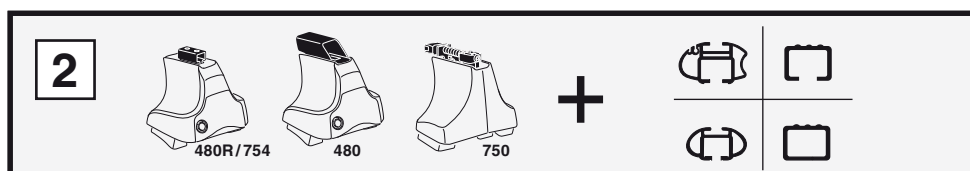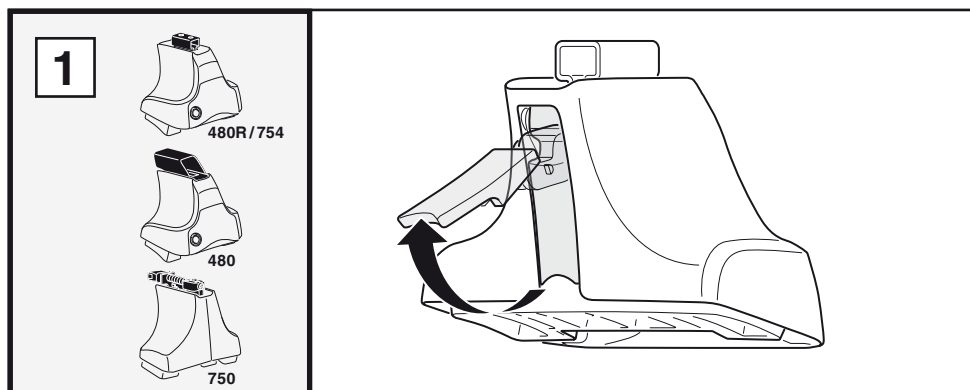

3

 


754

 


750



 1

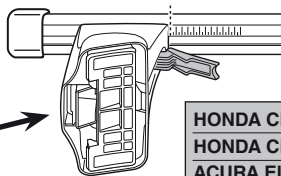


2

 


	X
HONDA Civic, 4-dr Sedan, 96-00	24,5
HONDA Civic Ferio, 4-dr Sedan, 96-99	24,5
ACURA EI, 4-dr Sedan, 96-05	24,5

 1

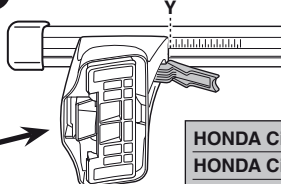

2

 

	Y
HONDA Civic, 4-dr Sedan, 96-00	24,5
HONDA Civic Ferio, 4-dr Sedan, 96-99	24,5
ACURA EI, 4-dr Sedan, 96-05	24,5

 


480R




480

1




2

 


	X inch	X mm
HONDA Civic, 4-dr Sedan, 96-00	35 1/4"	896 mm
HONDA Civic Ferio, 4-dr Sedan, 96-99	35 1/4"	896 mm
ACURA EI, 4-dr Sedan, 96-05	35 1/4"	896 mm

 1



2

 














	Y inch	Y mm
HONDA Civic, 4-dr Sedan, 96-00	35 1/4"	896 mm
HONDA Civic Ferio, 4-dr Sedan, 96-99	35 1/4"	896 mm
ACURA EI, 4-dr Sedan, 96-05	35 1/4"	896 mm

4


HONDA Civic, 4-dr Sedan, 96-00

HONDA Civic Ferio, 4-dr Sedan, 96-99

           
 
 
ACURA EI, 4-dr Sedan, 96-05

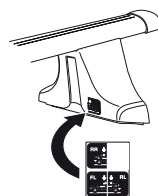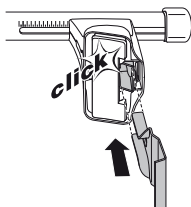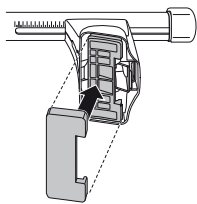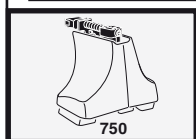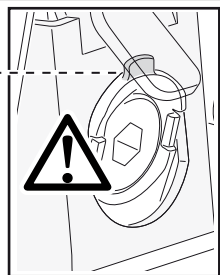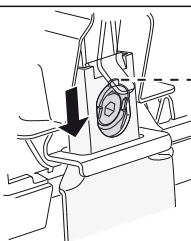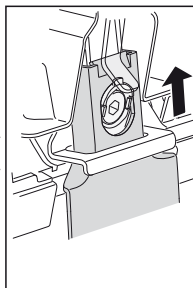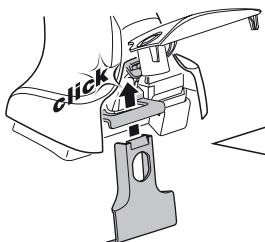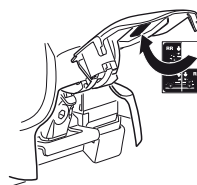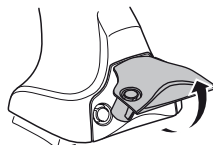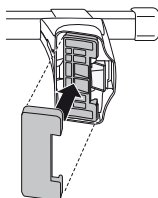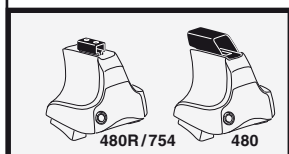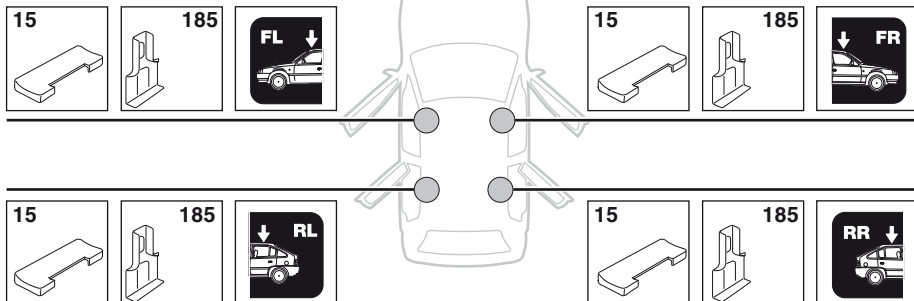

5

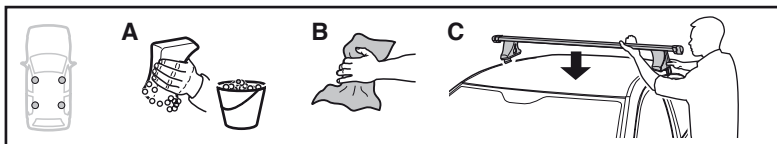 

	X mm	Y mm	X inch	Y inch
HONDA Civic, 4-dr Sedan, 96-00	220 mm	700 mm	8 5/8"	27 1/2"
HONDA Civic Ferio, 4-dr Sedan, 96-99	220 mm	700 mm	8 5/8"	27 1/2"
ACURA EL, 4-dr Sedan, 96-05	220 mm	700 mm	8 5/8"	27 1/2"

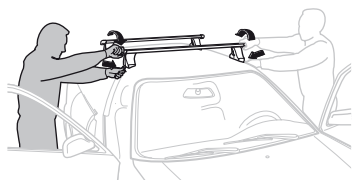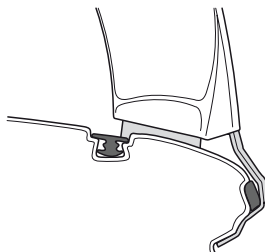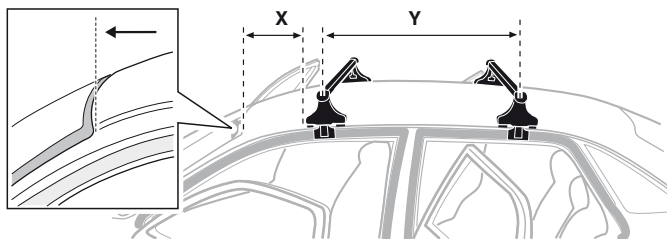   

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelsvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielvelciēt pamišus

LIT Užsukinkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egy mástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ






6





480R/754



     480

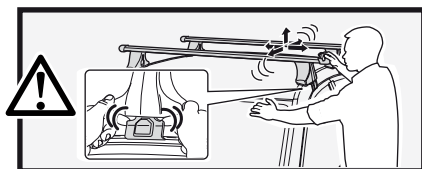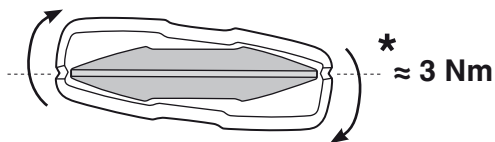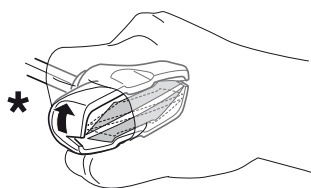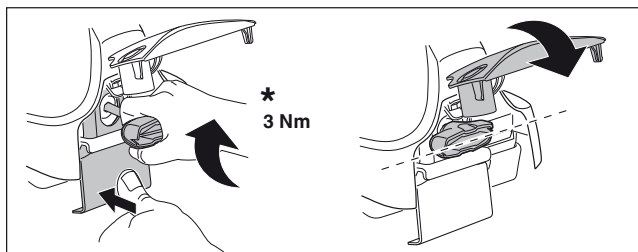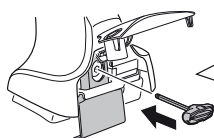

750

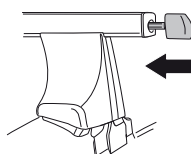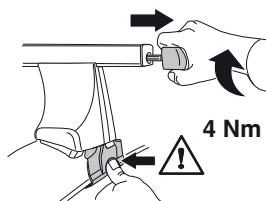  


i




1



 
2

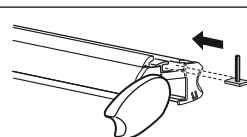


i

 


1

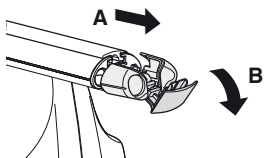 


2

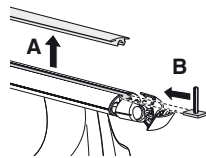 


i





 


1

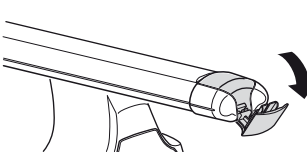 

2

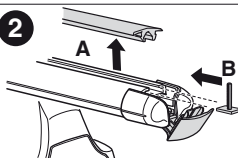 

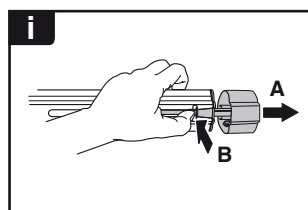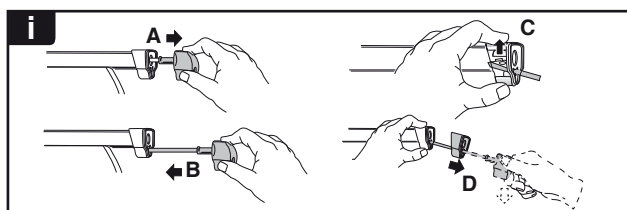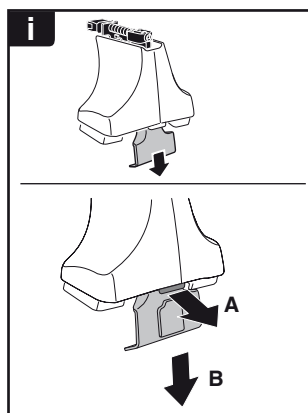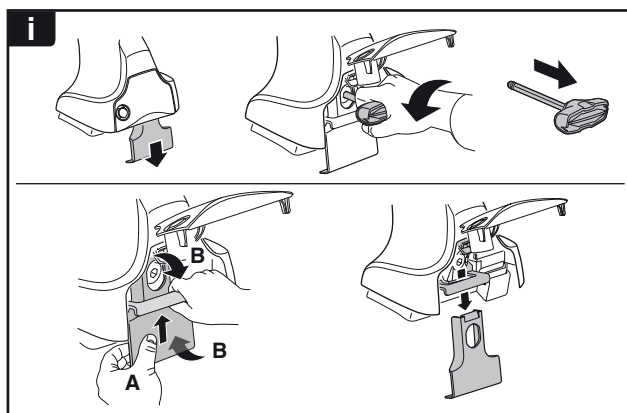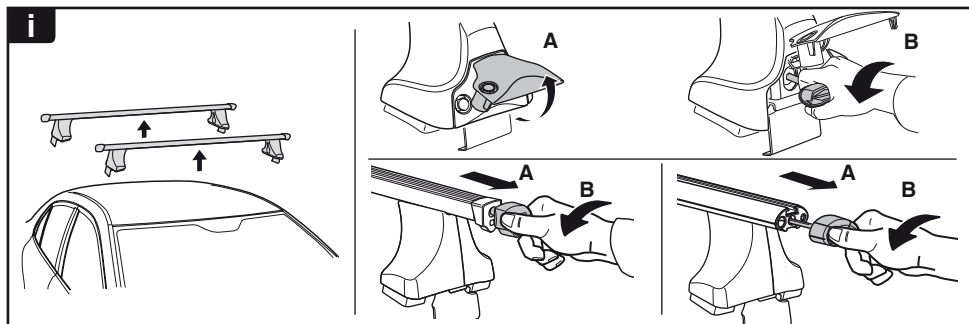     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA