 
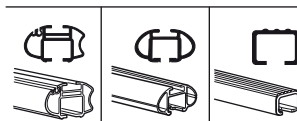 


Kit 1088

 
 
TOYOTA RAV4, 3-dr SUV, 94-99

TOYOTA RAV4, 5-dr SUV, 94-99



480R
754

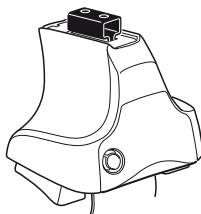

480

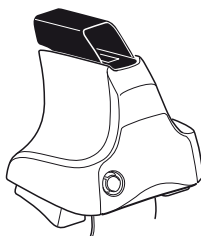

750

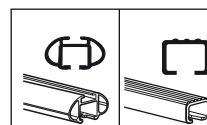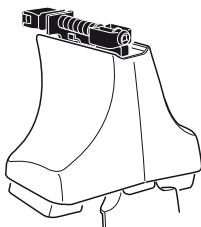  

THULE[®]
SWEDEN

ISO 11154-E

480R/754

x1

x4

x4

x4

480

x1

x4

x4

x4

750

x1

 
x4

x4









◀ 176 x 4



◀ 07 x 4


x 1

    
 
Kit

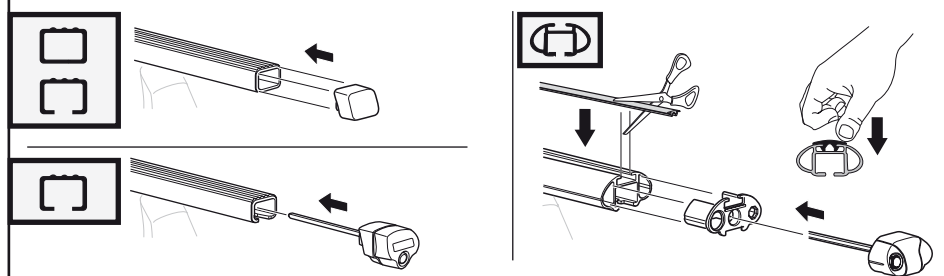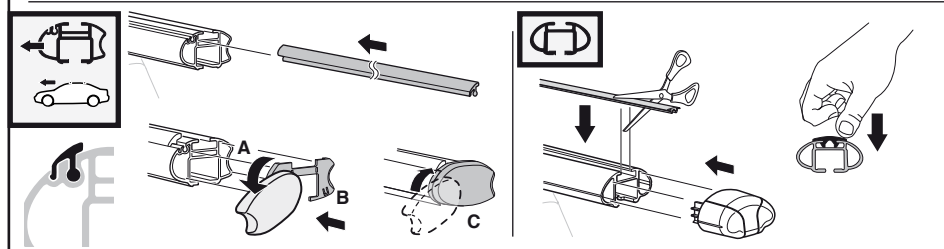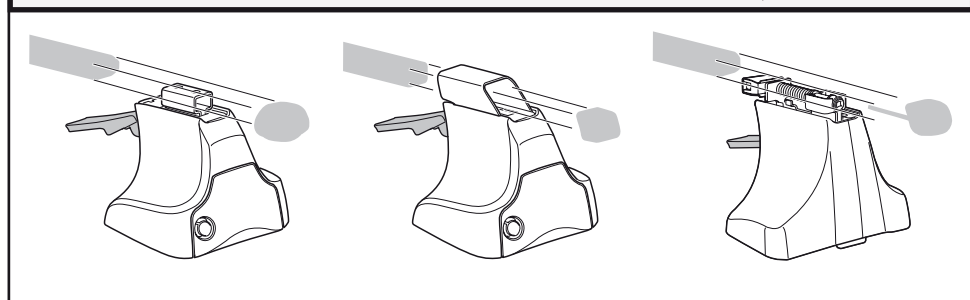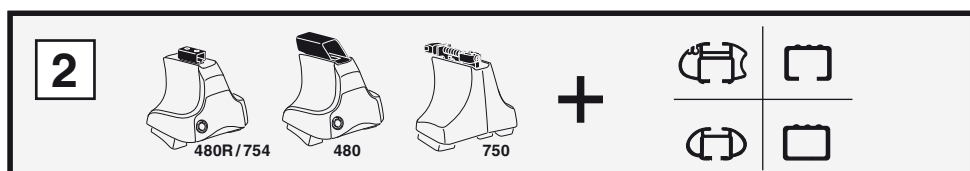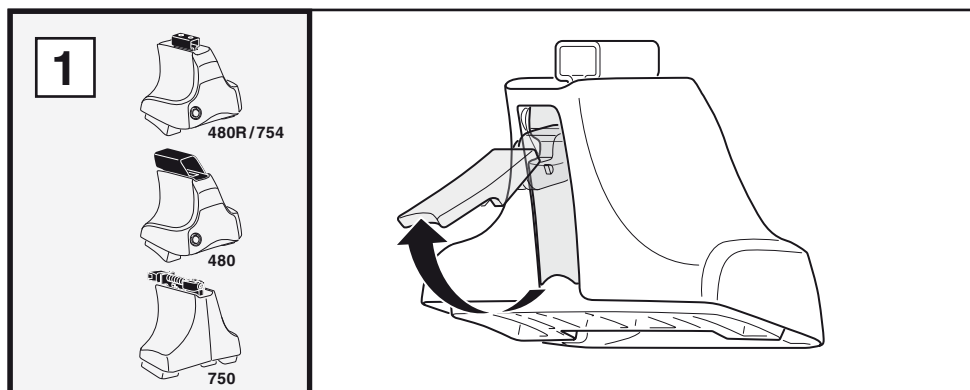

3


 


754

  


750

  1

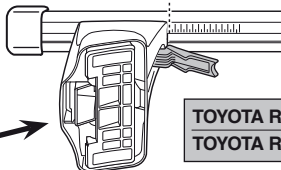


2

 

	X
TOYOTA RAV4, 3-dr SUV, 94-99	26,5
TOYOTA RAV4, 5-dr SUV, 94-99	26,5

 1

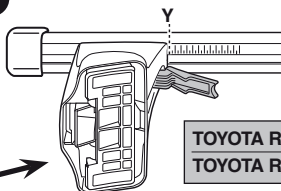

2



	Y
TOYOTA RAV4, 3-dr SUV, 94-99	25,5
TOYOTA RAV4, 5-dr SUV, 94-99	25,5

 


480R




480

1




2

 


	X inch	X mm
TOYOTA RAV4, 3-dr SUV, 94-99	36 1/8"	916 mm
TOYOTA RAV4, 5-dr SUV, 94-99	36 1/8"	916 mm

 1




2

 








	Y inch	Y mm
TOYOTA RAV4, 3-dr SUV, 94-99	35 5/8"	906 mm
TOYOTA RAV4, 5-dr SUV, 94-99	35 5/8"	906 mm

4

 
TOYOTA RAV4, 3-dr SUV, 94-99

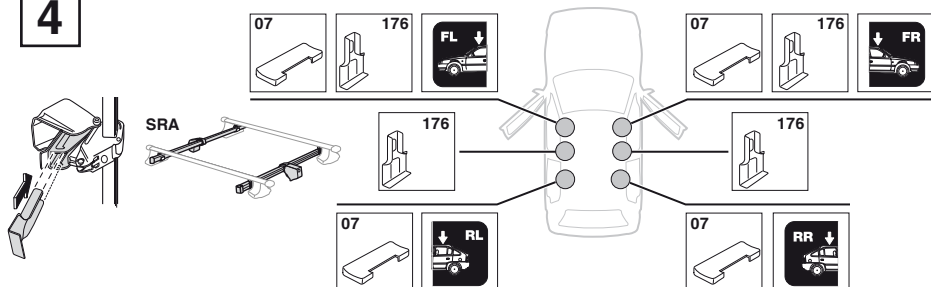


TOYOTA RAV4, 5-dr SUV, 94-99

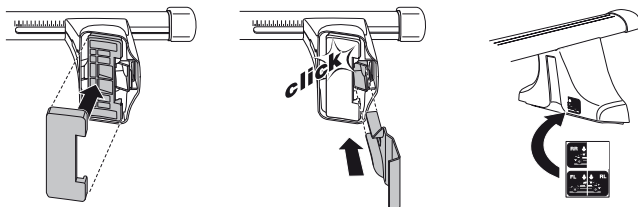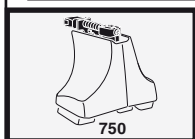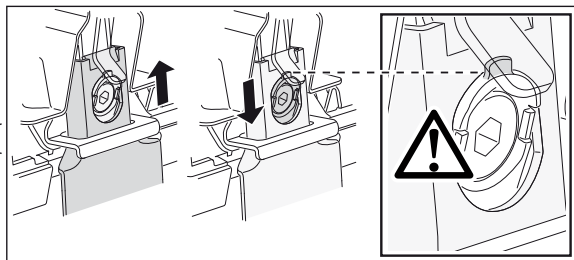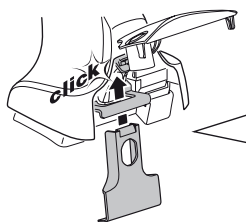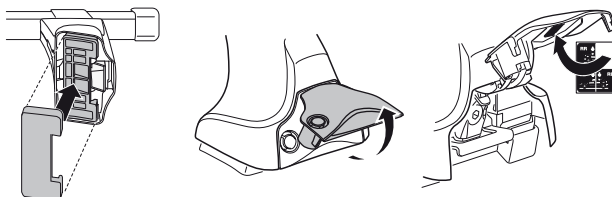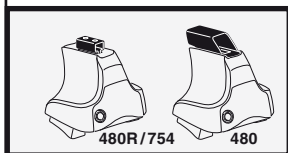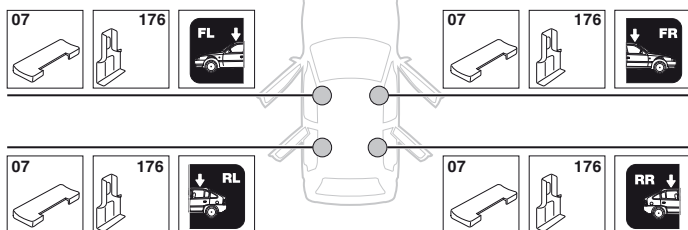       



5

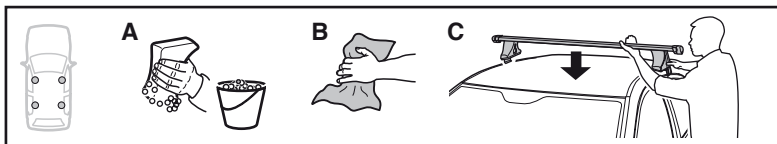 

	X mm	Y mm	X inch	Y inch
TOYOTA RAV4, 3-dr SUV, 94-99	300 mm	700 mm	11 ³ / ₄ "	27 ¹ / ₂ "
TOYOTA RAV4, 5-dr SUV, 94-99	300 mm	700 mm	11 ³ / ₄ "	27 ¹ / ₂ "

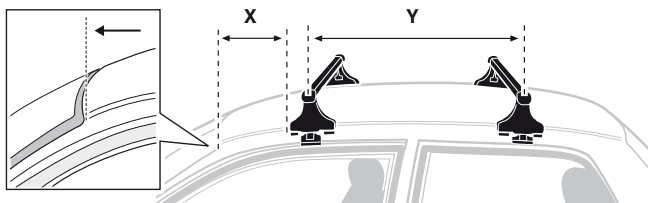 

TOYOTA RAV4, 3-dr SUV, 94-99

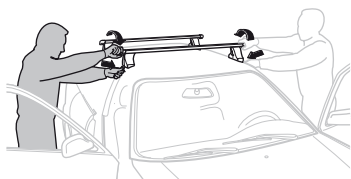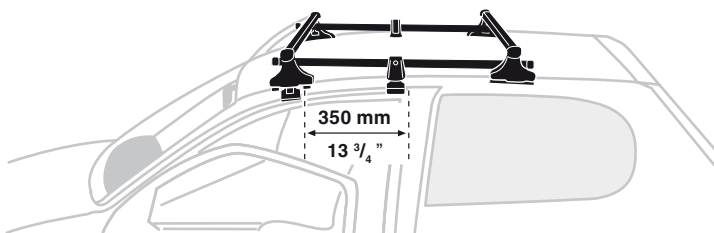  

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciēt pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφιγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ

 
 
 
 
 
6





480R/754



480

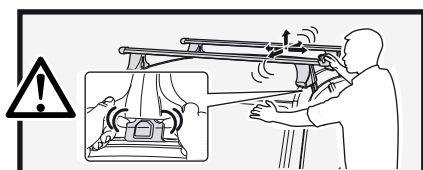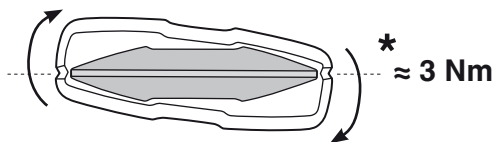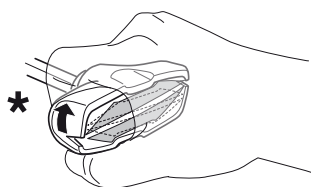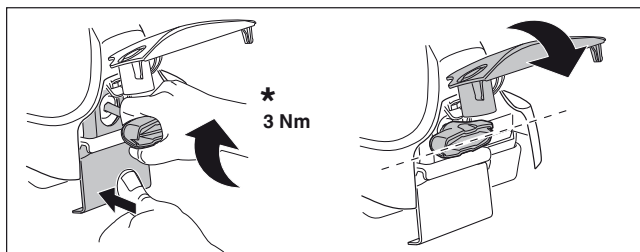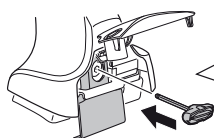

750

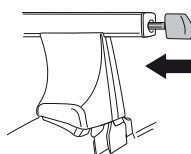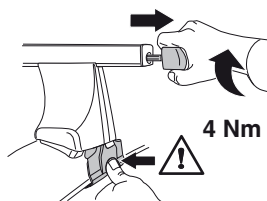  


i




1



 
2

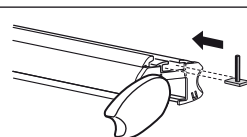


i

 

1

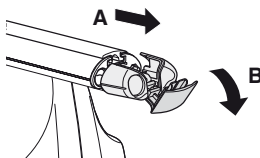 


2

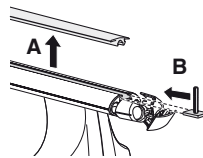 


i








 1

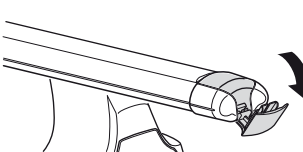

2

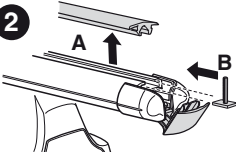 

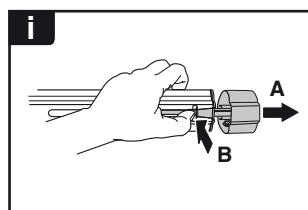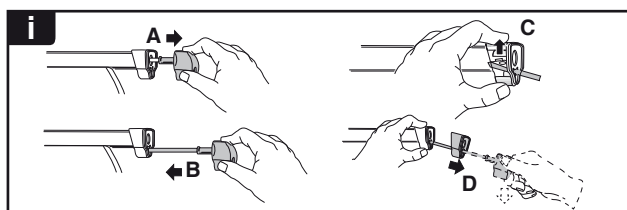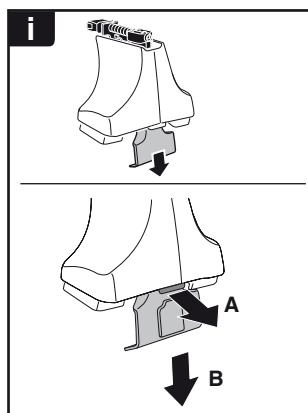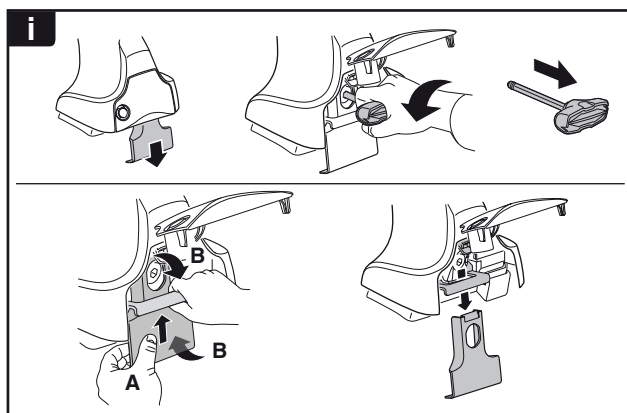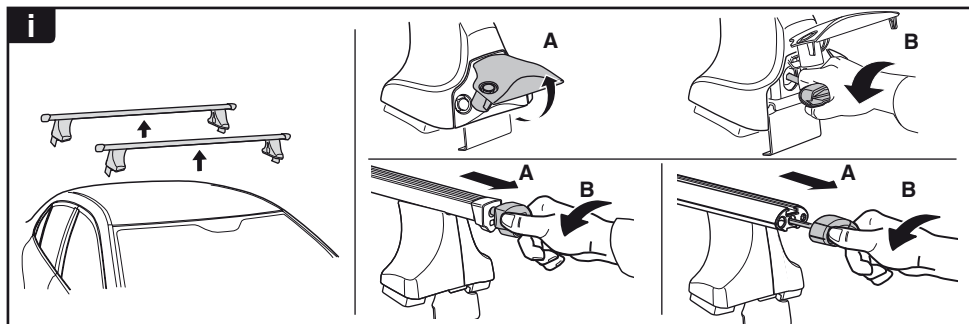     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA