 
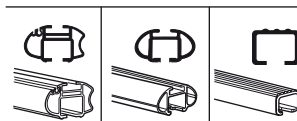 


Kit 1099

 
 
FIAT Doblò, 5-dr Van, 00-03, 04–

FIAT Panda, 5-dr Hatchback, 03–



**480R
754**

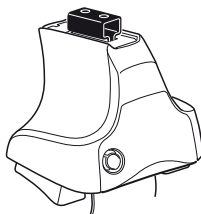

480

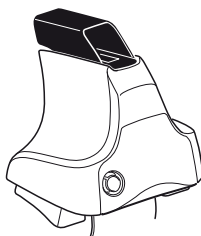

750

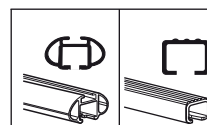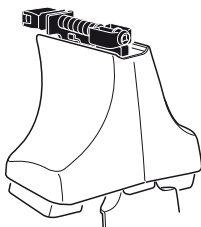  

**Max.
50 kg**
**Max.
110 lbs**

Kit XXXX
instructions

x1

x4

x4

x4

x4

480R/754

x1

x4

x4

x4

x4

480

x1

x4

x4

x4

750

x2 x2 x2 x4	x2	x2 x2 x4 x4	x2 x2 x2	x2
----------------------	----	----------------------	----------------	----

160 x 4

 
 
 
 
 
16 x 4

x 4 M6



x 1 M6

x 1


Kit

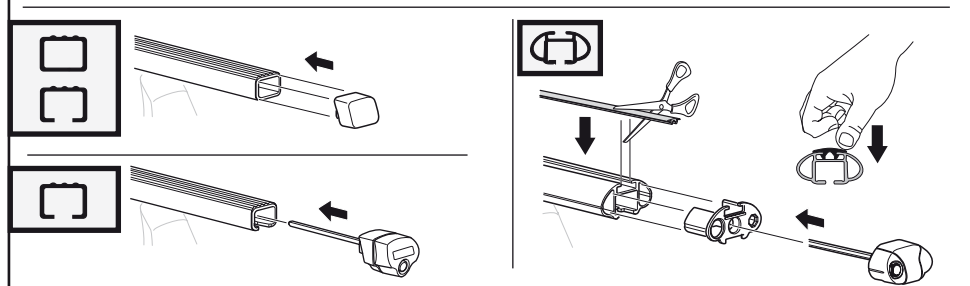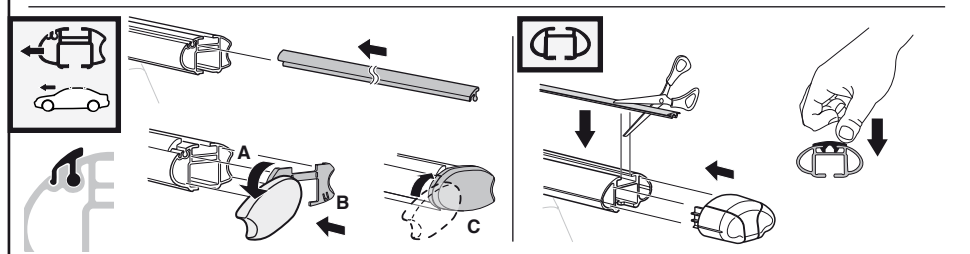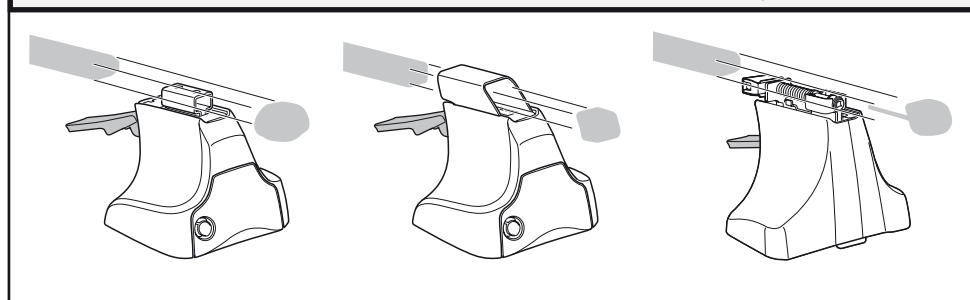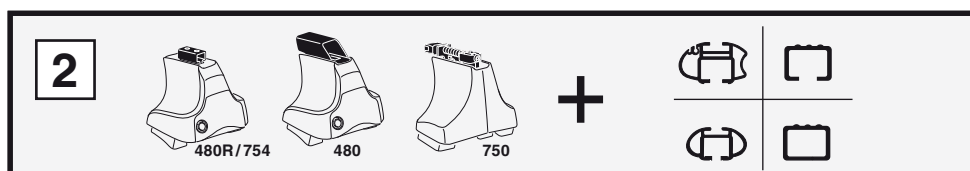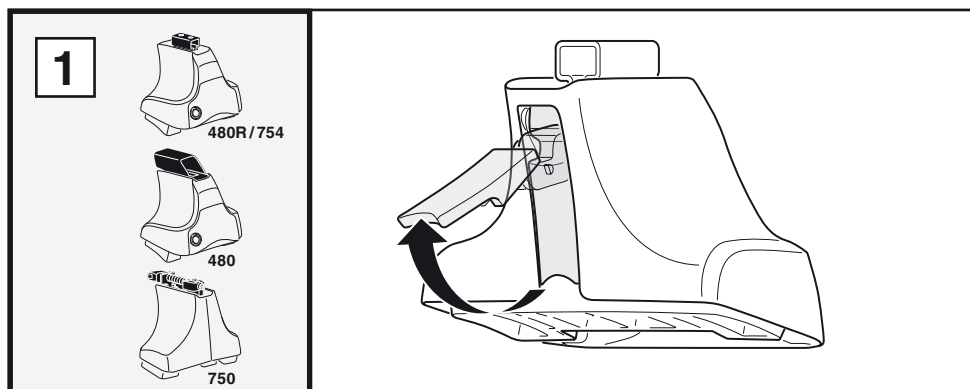


3

  

1

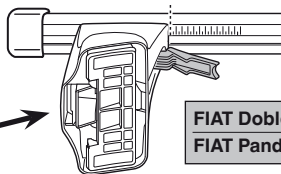 


2

 

	X
FIAT Doblò, 5-dr Van, 00-03, 04-	37,5
FIAT Panda, 5-dr Hatchback, 03-	29

 1

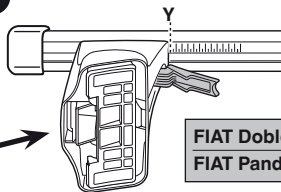

2



	Y
FIAT Doblò, 5-dr Van, 00-03, 04-	33,5
FIAT Panda, 5-dr Hatchback, 03-	26

 


480R




480

1




2

 


	X inch	X mm
FIAT Doblò, 5-dr Van, 00-03, 04-	40 $\frac{3}{8}$ "	1026 mm
FIAT Panda, 5-dr Hatchback, 03-	37 "	941 mm

 1
















2

 


	Y inch	Y mm
FIAT Doblò, 5-dr Van, 00-03, 04-	38 $\frac{7}{8}$ "	986 mm
FIAT Panda, 5-dr Hatchback, 03-	35 $\frac{7}{8}$ "	911 mm

4

            
 
FIAT Doblo, 5-dr Van, 00-03, 04-
FIAT Panda, 5-dr Hatchback, 03-

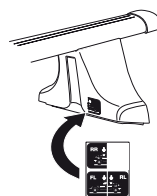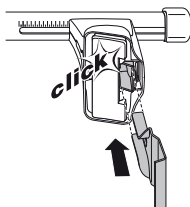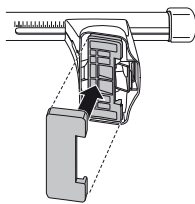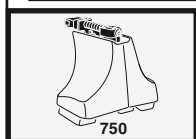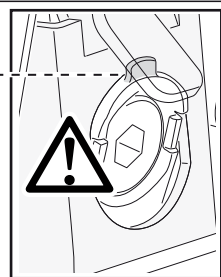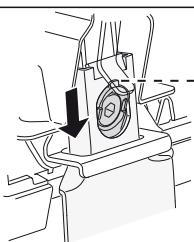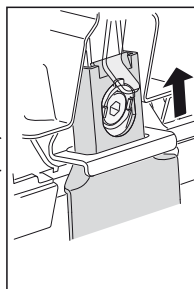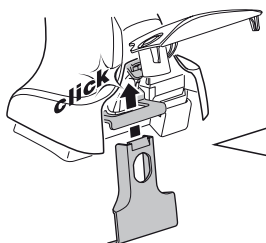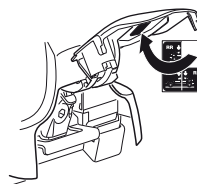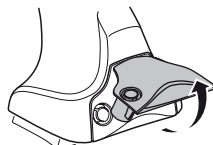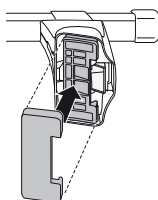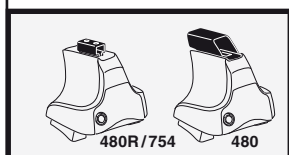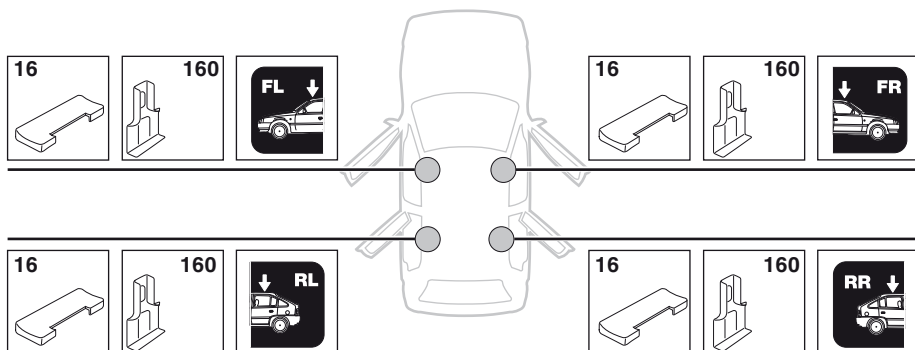

5

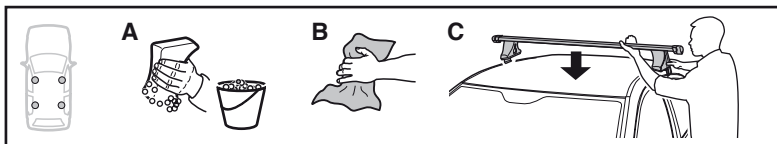 

	X mm	Y mm	X inch	Y inch
FIAT Doblo, 5-dr Van, 00-03, 04-	750 mm	855 mm	29 1/2"	33 5/8"
FIAT Panda, 5-dr Hatchback, 03-	750 mm	1015 mm	29 1/2"	40"

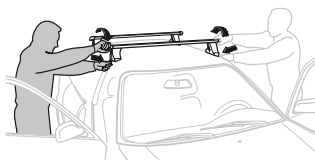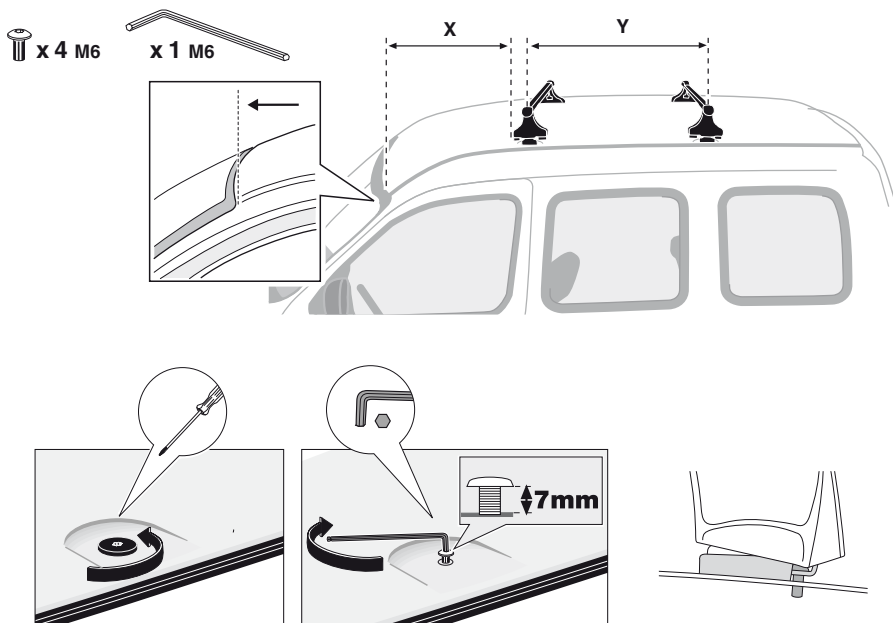  

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apertar alternativamente
PT Aperte alternadamente
S Dra åt växelsvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciot pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťla багаžníka dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egyarástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขึ้นในแบบสลับ






6





480R/754



     480

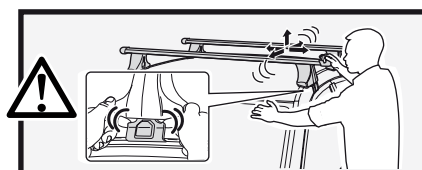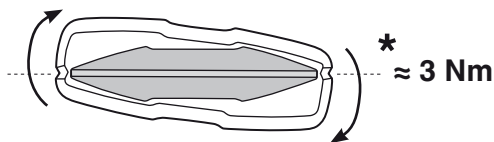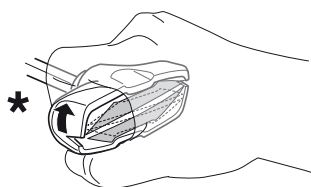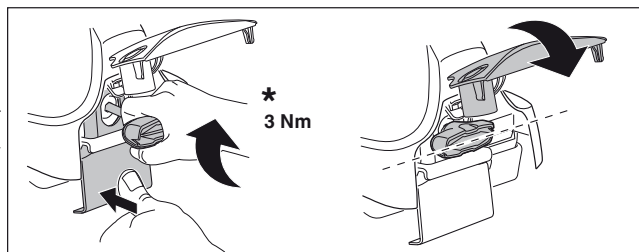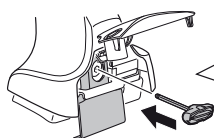


750

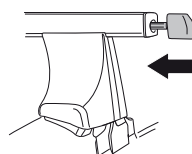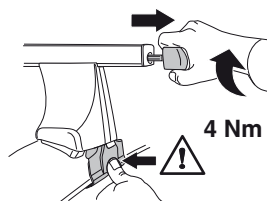  


i



 
1

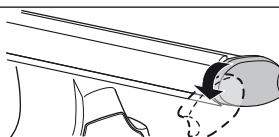


2

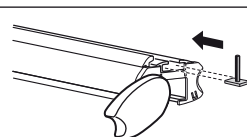 


i

 


1

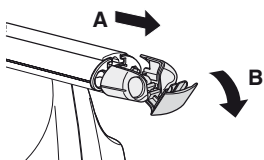 


2

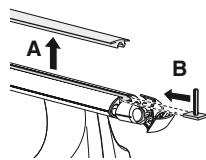 


i





 


1

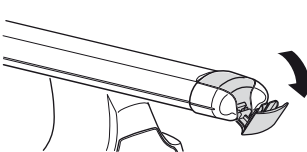 

2

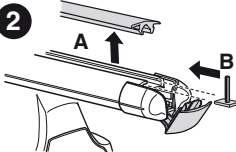 

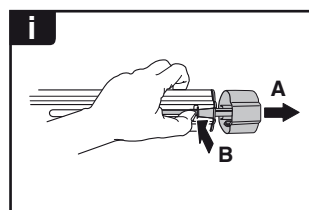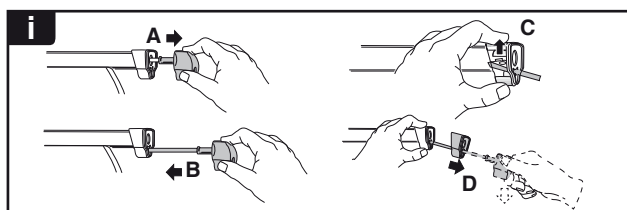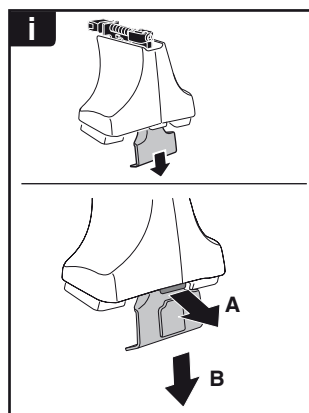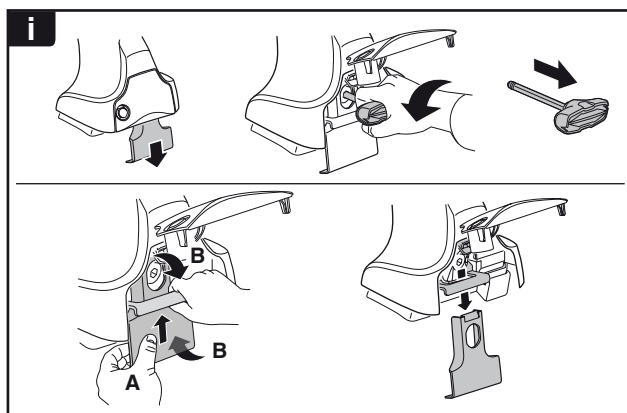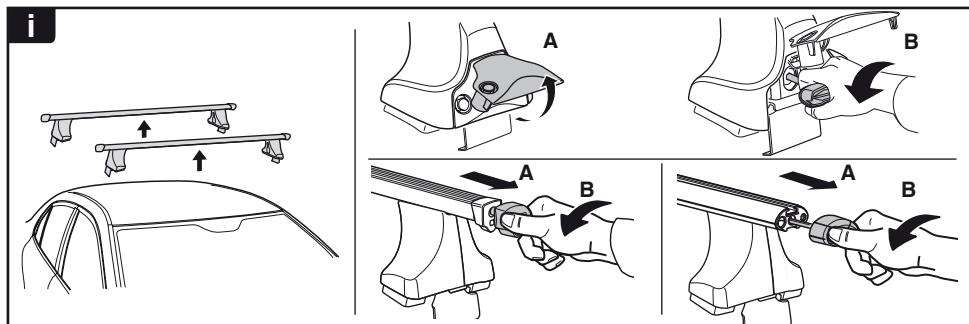     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		