



Kit 1114

HYUNDAI Sonata, 4-dr Sedan, 98-00, 01-03


HYUNDAI Sonata, 4-dr Sedan, 04

HYUNDAI Sonica, 4-dr Sedan, 01-05

 
 
**480R
754**

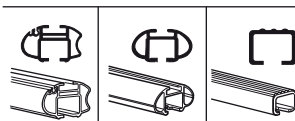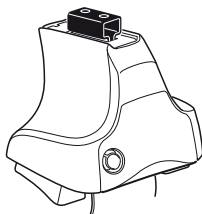

480

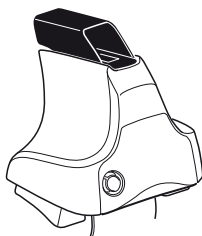 

750




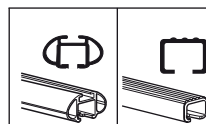 
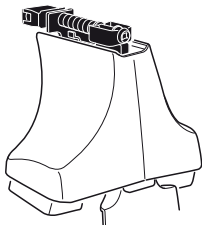 


THULE[®]
SWEDEN


ISO 11154-E

**Max.
75kg**
**Max.
165 lbs**

    
 
Kit

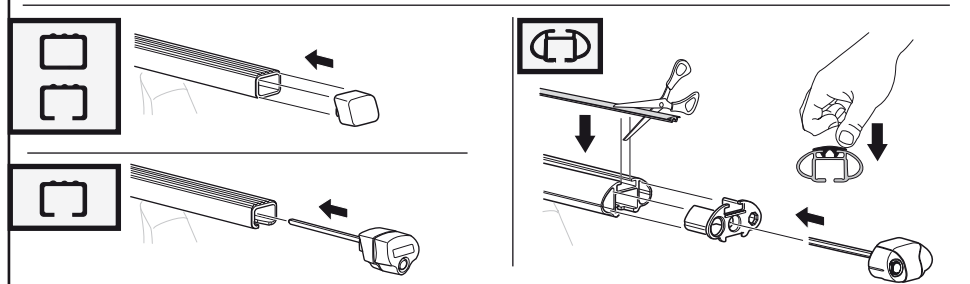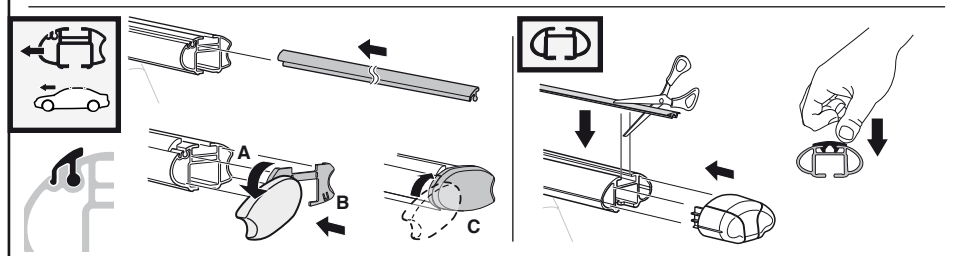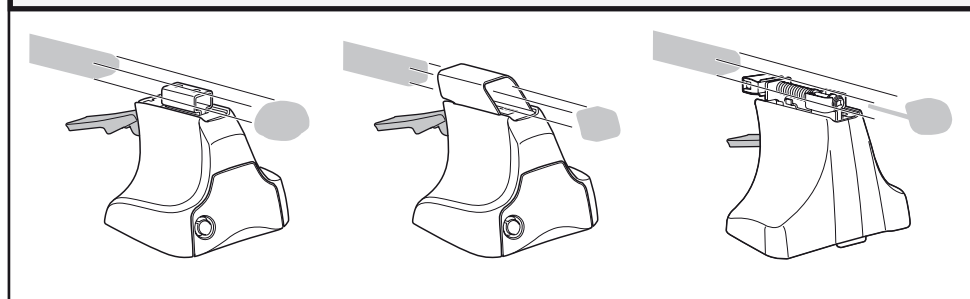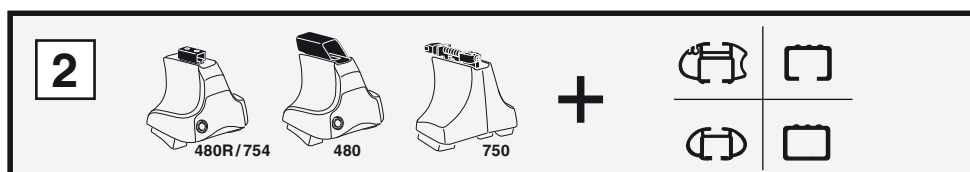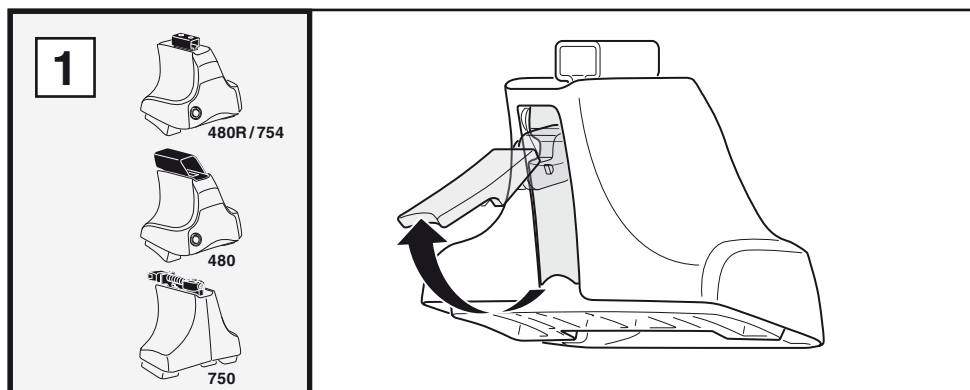

3

 



754

  


750



  1

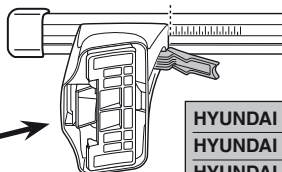


2

 

	X
HYUNDAI Sonata, 4-dr Sedan, 98-00, 01-03	38
HYUNDAI Sonata, 4-dr Sedan, 04	38
HYUNDAI Sonica, 4-dr Sedan, 01-05	38

 1

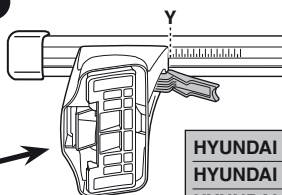

2



	Y
HYUNDAI Sonata, 4-dr Sedan, 98-00, 01-03	35,5
HYUNDAI Sonata, 4-dr Sedan, 04	36,5
HYUNDAI Sonica, 4-dr Sedan, 01-05	36,5

 


480R



480

1




2




	X inch	X mm
HYUNDAI Sonata, 4-dr Sedan, 98-00, 01-03	40 ⁵ / ₈ "	1031 mm
HYUNDAI Sonata, 4-dr Sedan, 04	40 ⁵ / ₈ "	1031 mm
HYUNDAI Sonica, 4-dr Sedan, 01-05	40 ⁵ / ₈ "	1031 mm

 1



2

 













	Y inch	Y mm
HYUNDAI Sonata, 4-dr Sedan, 98-00, 01-03	39 ⁵ / ₈ "	1006 mm
HYUNDAI Sonata, 4-dr Sedan, 04	40 "	1016 mm
HYUNDAI Sonica, 4-dr Sedan, 01-05	40 "	1016 mm

4


HYUNDAI Sonata, 4-dr Sedan, 98-00, 01-03

HYUNDAI Sonata, 4-dr Sedan, 04

         
 
 
 
HYUNDAI Sonica, 4-dr Sedan, 01-05

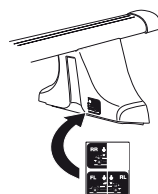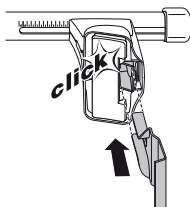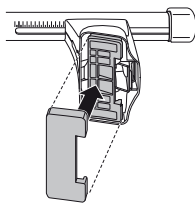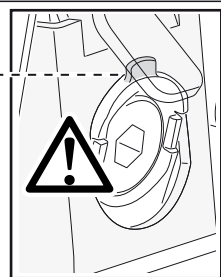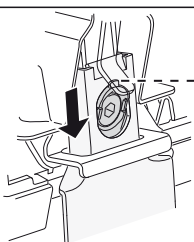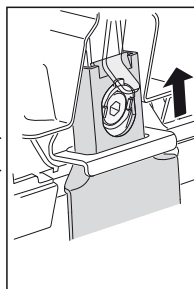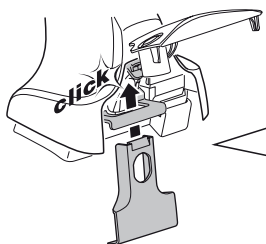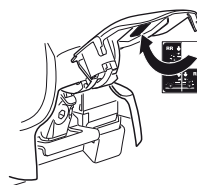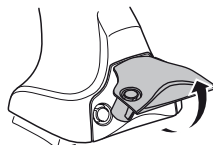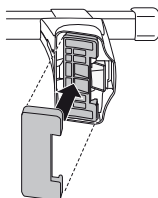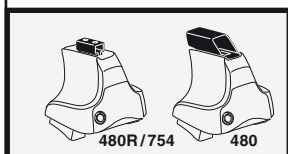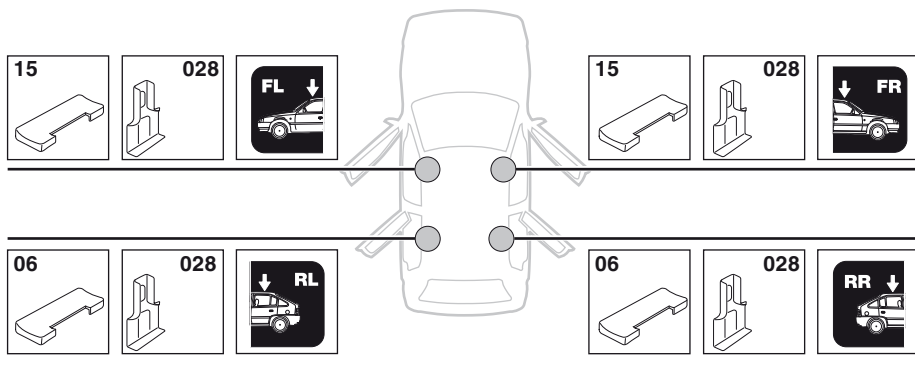

5

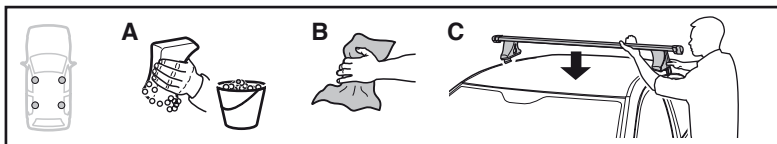 

	X mm	Y mm	X inch	Y inch
HYUNDAI Sonata , 4-dr Sedan, 98-00, 01-03	250 mm	650 mm	9 7/8"	25 5/8"
HYUNDAI Sonata , 4-dr Sedan, 04	250 mm	650 mm	9 7/8"	25 5/8"
HYUNDAI Sonica , 4-dr Sedan, 01-05	250 mm	650 mm	9 7/8"	25 5/8"

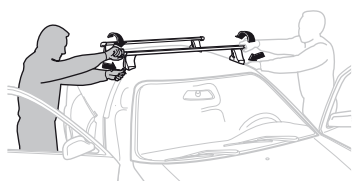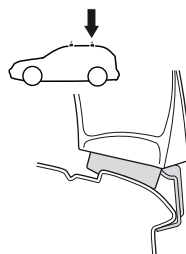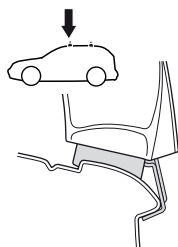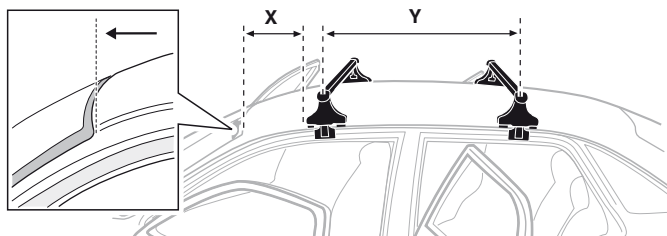    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Serrare alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciot pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ

 
 
 
 
 
6





480R/754



480

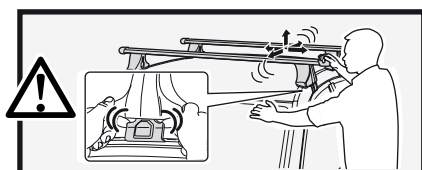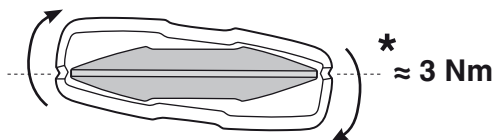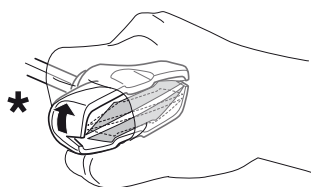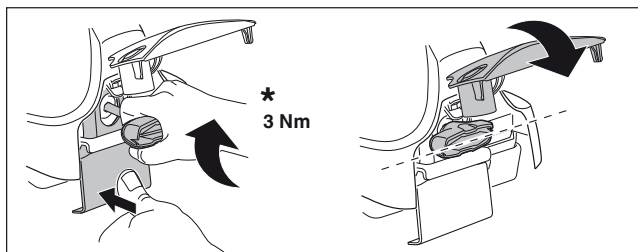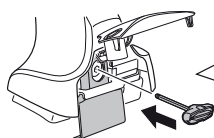

750

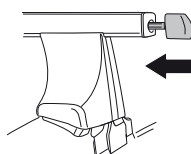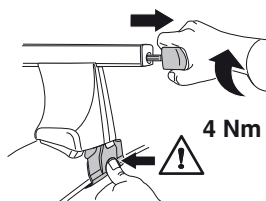  


i




1



 
2

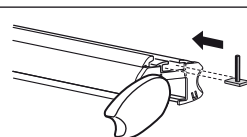


i

 


1

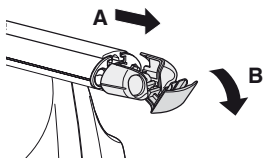 


2

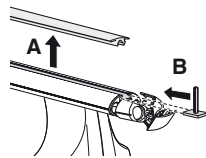 


i





 


1

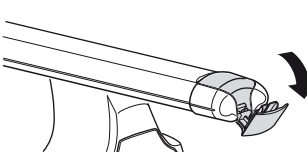 

2

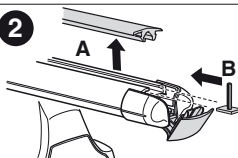 

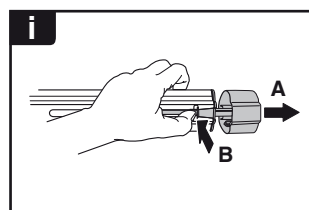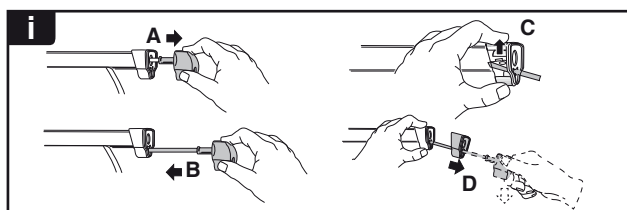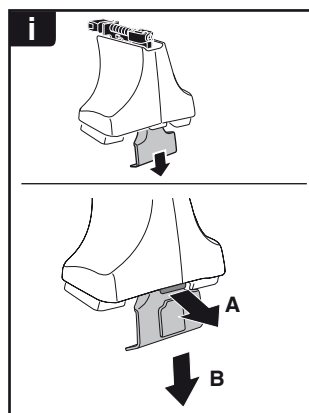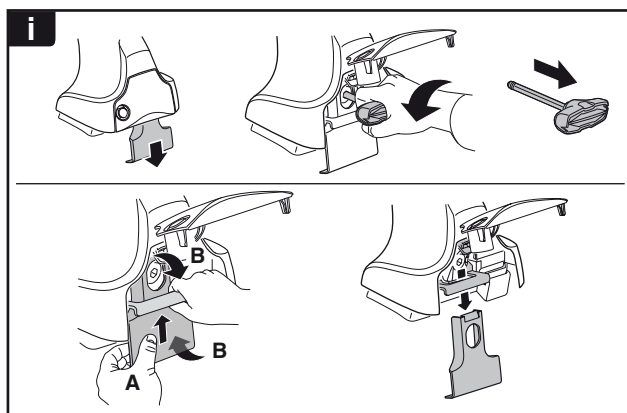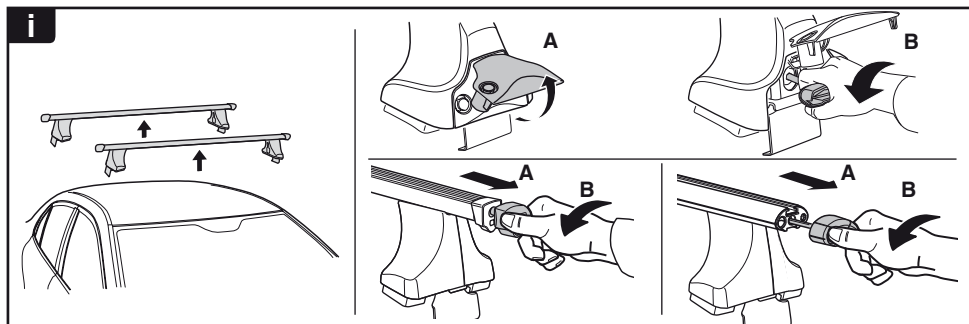     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		