 
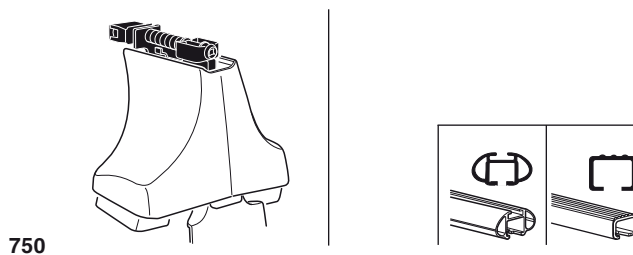 
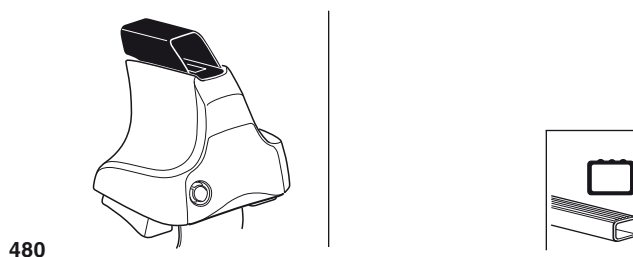 


Kit 1264

TOYOTA Corolla, 3-dr Hatchback, 02-04, 05-06

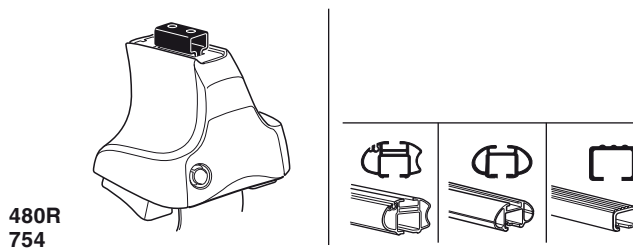


ISO 11154-E


THULE[®]
SWEDEN


 $\text{xx kg} + 7 \text{ kg} / 15,4 \text{ lbs} =$
 $\text{xx lbs} + 3 \text{ kg} / 6,6 \text{ lbs} =$

   
Max. 60 kg
Max. 132 lbs

 



 

80 km/h 50 Mph
 130 km/h 80 Mph
 40 km/h 25 Mph
 0 km/h Mph





 


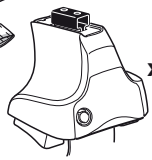
 




x1 x4 x4 x4

 
480R/754

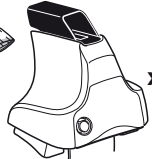

x1 x4 x4 x4

 
480

 
 
 


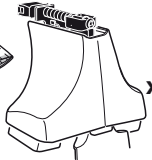


 
 
 
 
 
 
 
x1 x4 x4 x4

750








  x2  x2  x2  x4	  x2	  x2  x2  x4  x4	  x2  x2	  x2
--	---	--	---	---












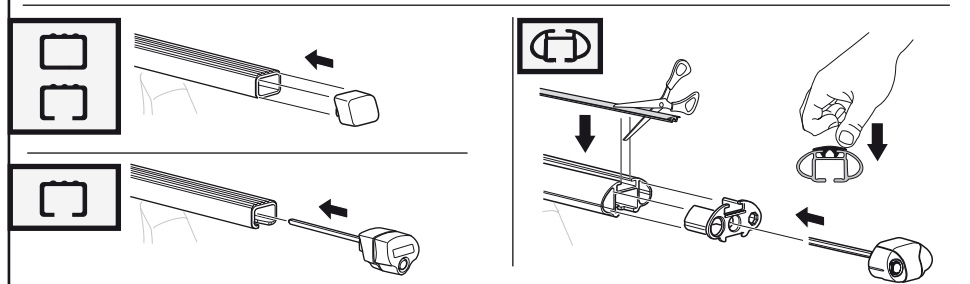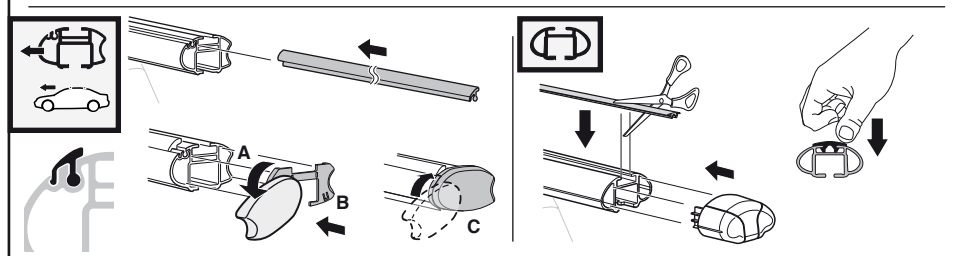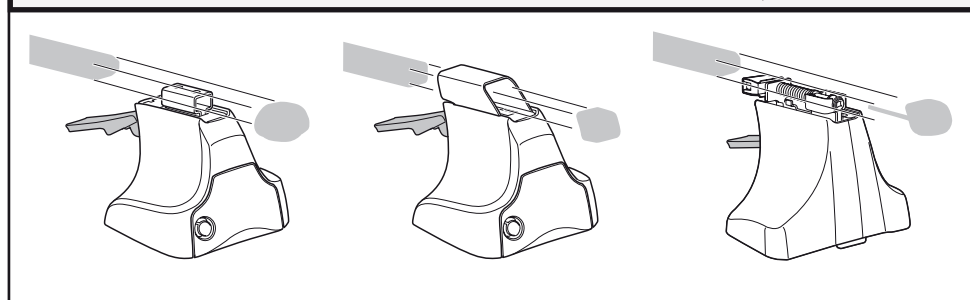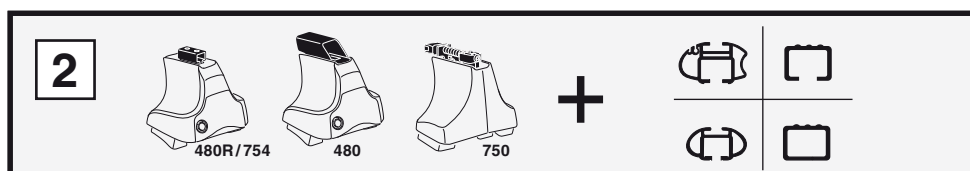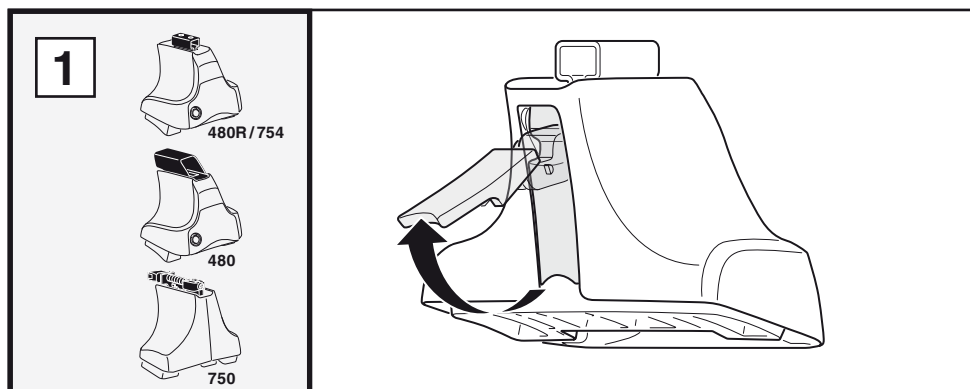     

x4 x2 x2

  
 
Kit



3



  1

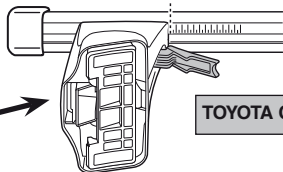



2



TOYOTA Corolla, 3-dr Hatchback, 02-04, 05-06

X
31,5

  1

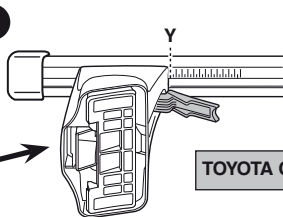

2



TOYOTA Corolla, 3-dr Hatchback, 02-04, 05-06

Y
34,5

 


480R




480

1



2

 

TOYOTA Corolla, 3-dr Hatchback, 02-04, 05-06

 
X inch

X mm


38 "

966 mm

1



2

 

TOYOTA Corolla, 3-dr Hatchback, 02-04, 05-06

Y inch

Y mm

 
 
 
 
 
 
 
39 1/4 "

996 mm


4

TOYOTA Corolla, 3-dr Hatchback, 02-04, 05-06




SRA

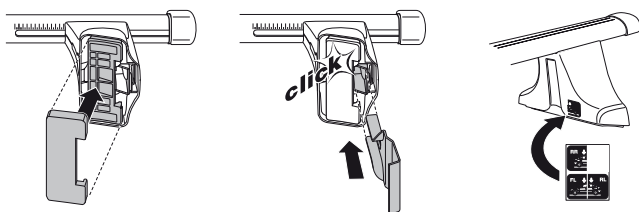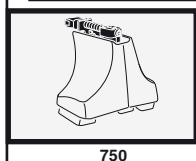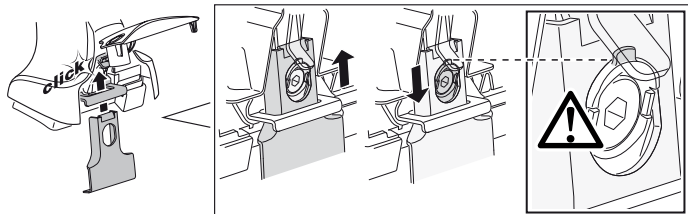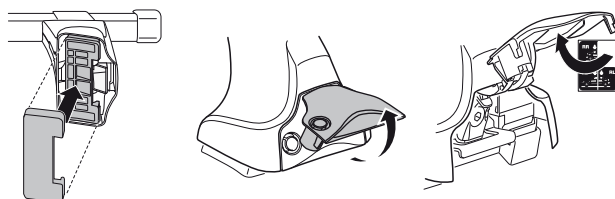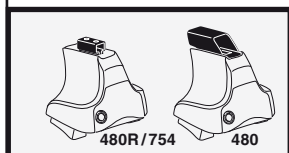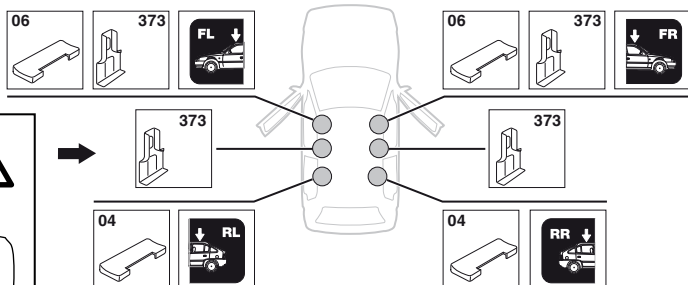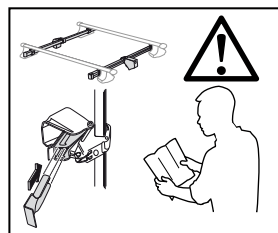

5

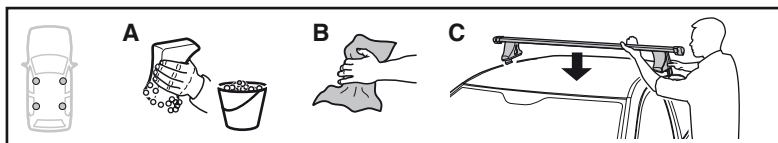 


	X mm	Y mm	Z mm	X inch	Y inch	Z inch
TOYOTA Corolla, 3-dr Hatchback, 02-04, 05-06	280 mm	700 mm	355 mm	11 "	27 1/2 "	14 "

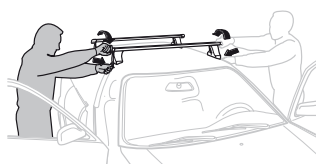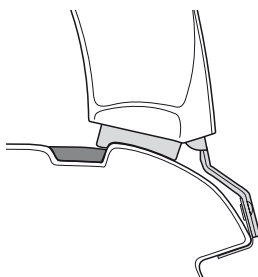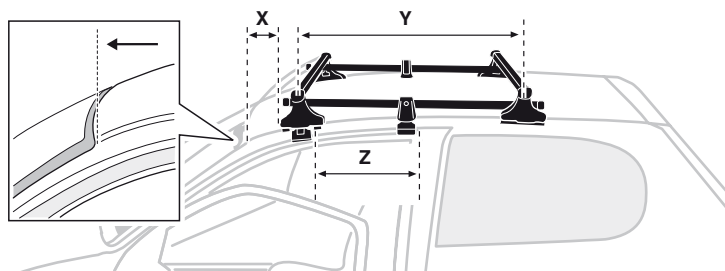   

GB/US	Tighten alternately
D	Die Schrauben abwechselnd anziehen
F	Serrer alternativement chaque côté
NL	Afwisselend aan de linker- en de rechterkant aandraaien
I	Alternare il serraggio delle viti
E	Apretar alternativamente
PT	Aperte alternadamente
S	Dra åt växelsvis
FIN	Kierrä vuorotellen
EST	Pinguldage vaheldumisi
LAT	Pievelciēt pamišus
LIT	Užsukinėkite pakaitomis
PL	Śruby dokręcaj naprzemiennie
RU	Затягивайте попеременно

CZ	Pokřeřta багажника dokřeřaj dokřeřaj napřezmiennie.
SK	Dofahujte striedavo
SLO	Privijajte izmenično.
HR	Naizmjeno zategnite
HU	Egymástól függetlenül szorítandó
GR	Σφιγγετε εναλλάξ
TR	Dönüşümlü sıkın
中文	交替拧紧
한국어	번갈아 가며 조이십시오.
日本語	交互に締め付けてください。
ไทย	ขันในแบบสลับ





 
6





480R/754



     480

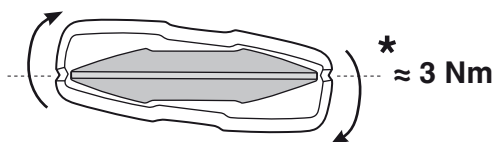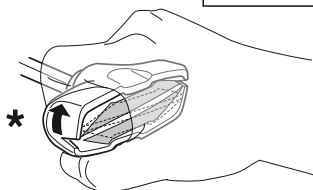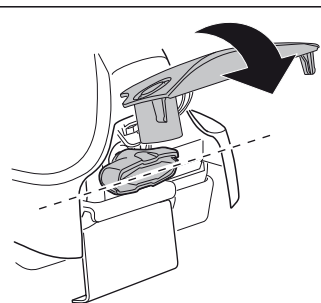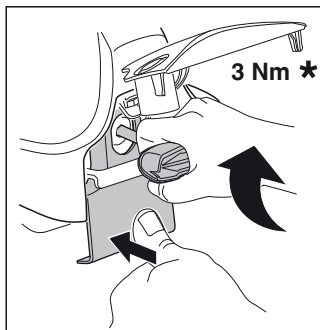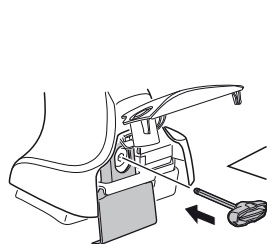


750

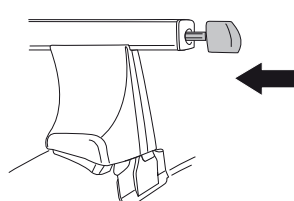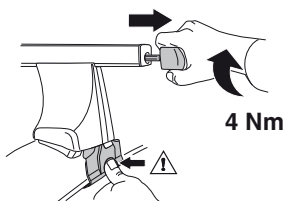  


i



 
1

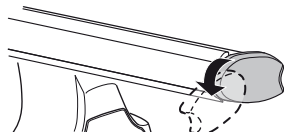


2

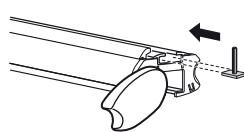 


i

 

1

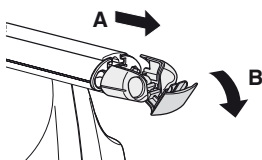 


2

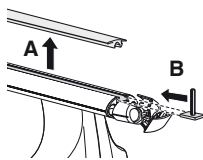 


i








 1

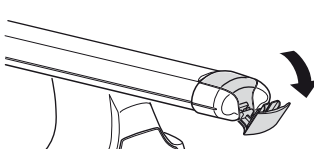

2

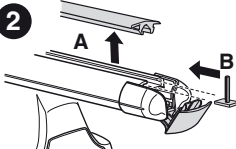 

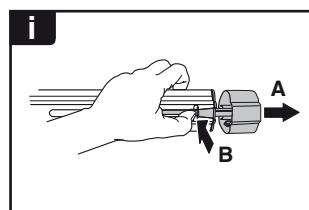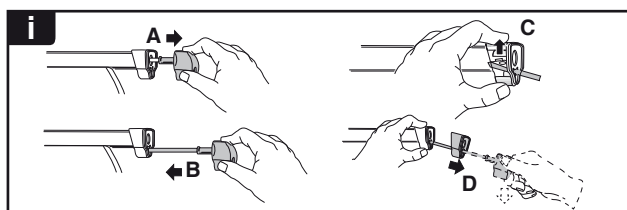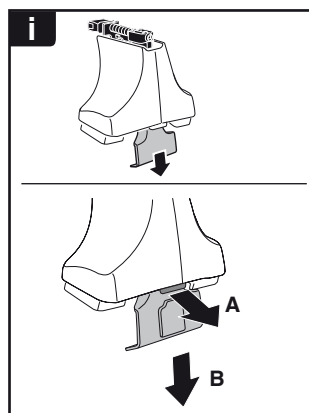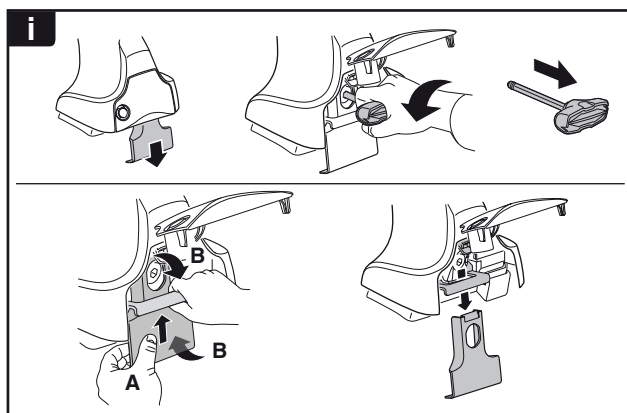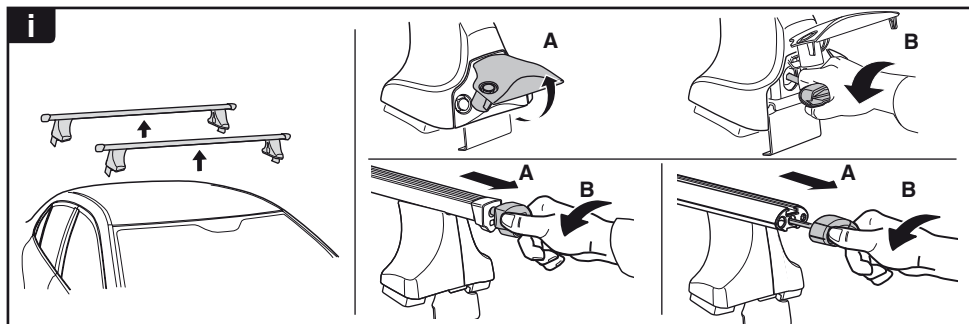     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		