 
 


Kit 1298

 
 
LEXUS RX (Mk II), 5-dr SUV, 03-09

TOYOTA Harrier (Mk II), 5-dr SUV, 03-09



**480R
754**

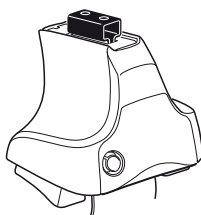

480

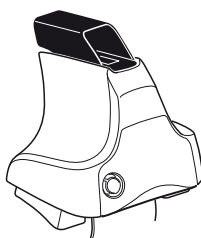

750

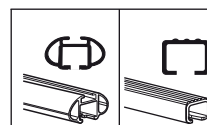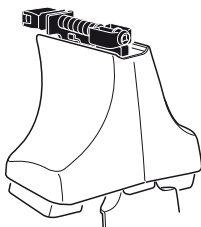  

THULE[®]
SWEDEN

ISO 11154-E



 
 
 
 
 
 
 
				
  x2  x2  x2  x4	  x2	  x2  x2  x4  x4	  x2  x2	  x2


 
Diagram showing the assembly of the base plate. The base plate is attached to the frame using four corner brackets (568, 569, 570) and two side brackets (06, 46). The quantities for each part are listed next to them: 568 (x 2), 569 (x 1), 570 (x 1), 06 (x 2), and 46 (x 2). A small icon of the assembled unit is shown in the bottom right corner.

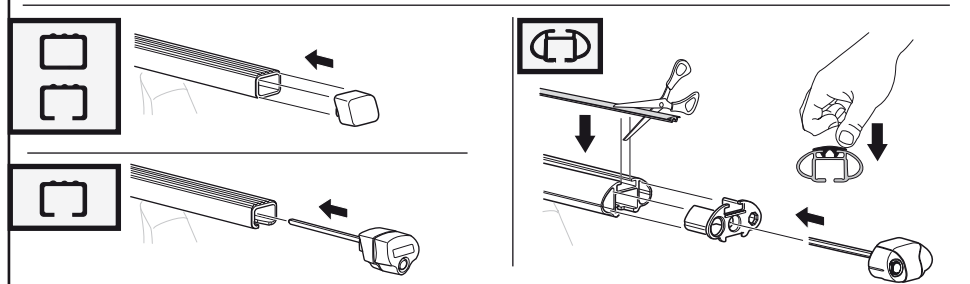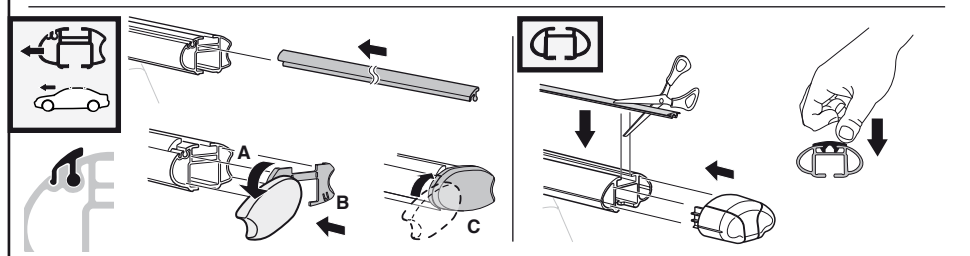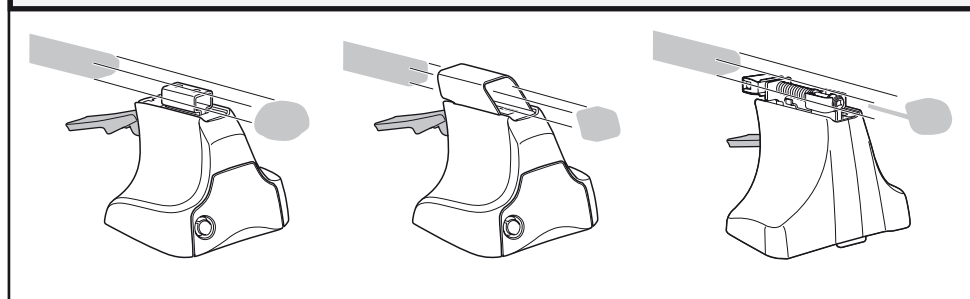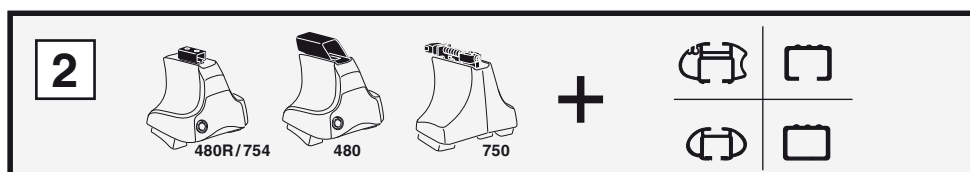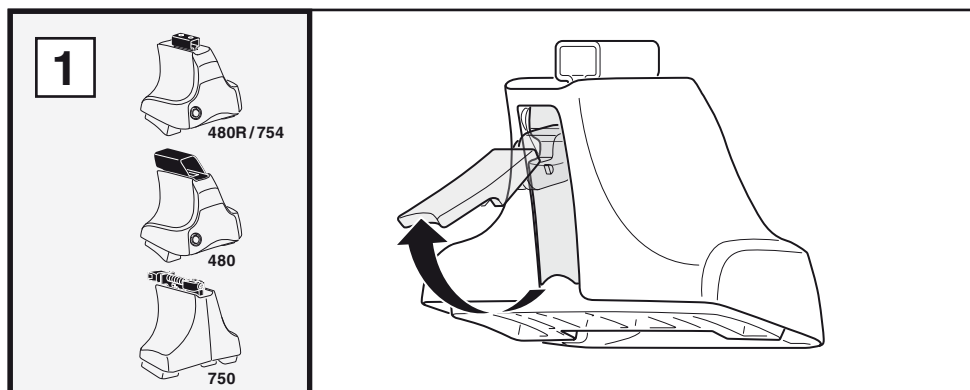

3

 



754

  


750



  1

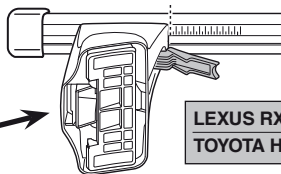


2

 


	X
LEXUS RX (Mk II), 5-dr SUV, 03-09	36
TOYOTA Harrier (Mk II), 5-dr SUV, 03-09	36

 1

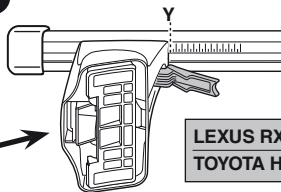

2

 

	Y
LEXUS RX (Mk II), 5-dr SUV, 03-09	35,5
TOYOTA Harrier (Mk II), 5-dr SUV, 03-09	35,5

 


480R



480

1




2




	X inch	X mm
LEXUS RX (Mk II), 5-dr SUV, 03-09	39 ³ / ₄ "	1011 mm
TOYOTA Harrier (Mk II), 5-dr SUV, 03-09	39 ³ / ₄ "	1011 mm

 1



2













 


	Y inch	Y mm
LEXUS RX (Mk II), 5-dr SUV, 03-09	39 ⁵ / ₈ "	1006 mm
TOYOTA Harrier (Mk II), 5-dr SUV, 03-09	39 ⁵ / ₈ "	1006 mm


4

LEXUS RX (Mk II), 5-dr SUV, 03-09

          
 
 
 
TOYOTA Harrier (Mk II), 5-dr SUV, 03-09

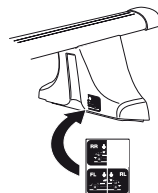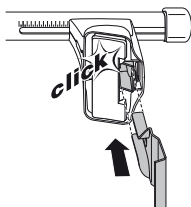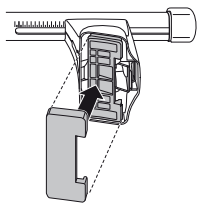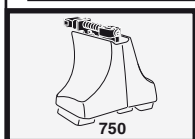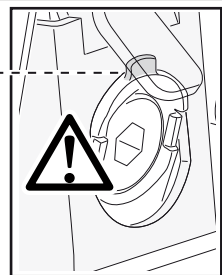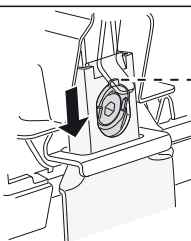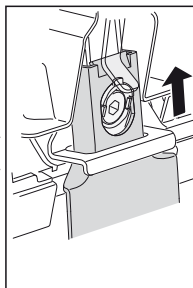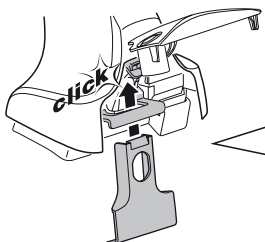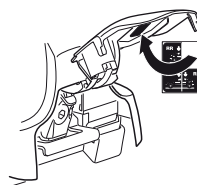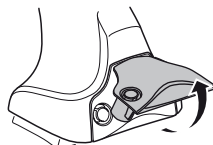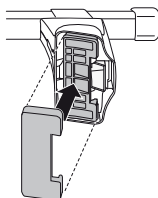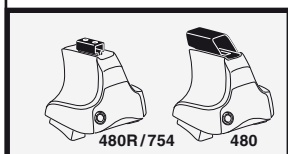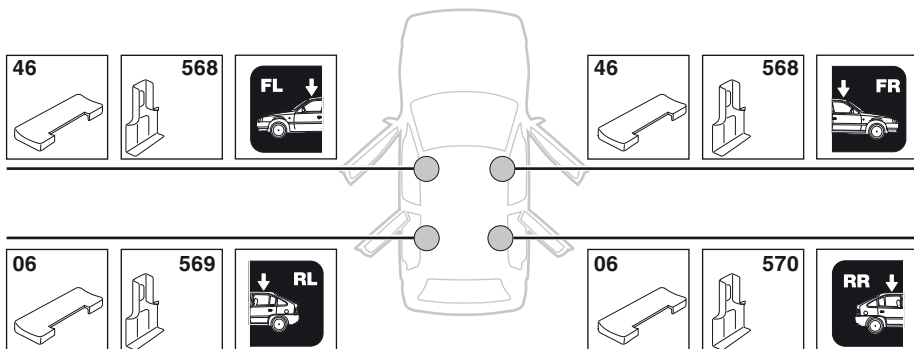

5

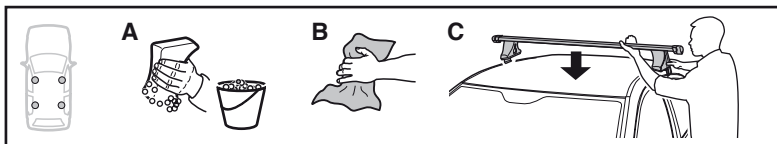 

	X mm	Y mm	X inch	Y inch
LEXUS RX (Mk II), 5-dr SUV, 03-09	215 mm	660 mm	8 1/2"	26"
TOYOTA Harrier (Mk II), 5-dr SUV, 03-09	215 mm	660 mm	8 1/2"	26"

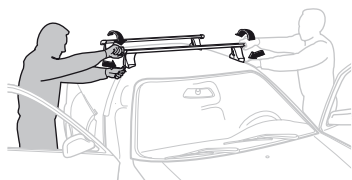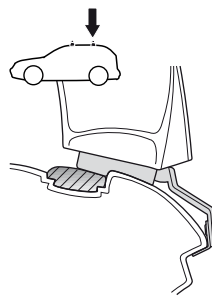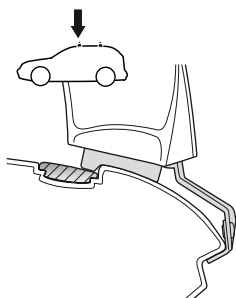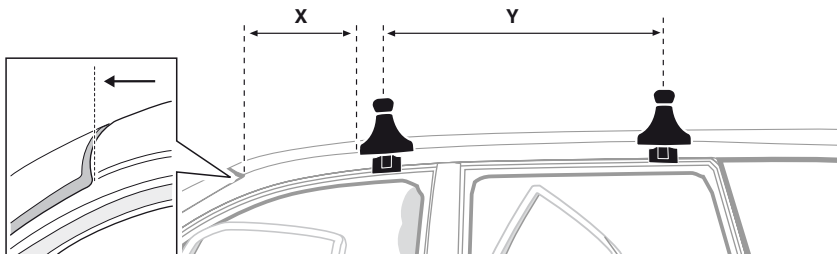    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apretar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciēt pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ


6







480R/754








 480

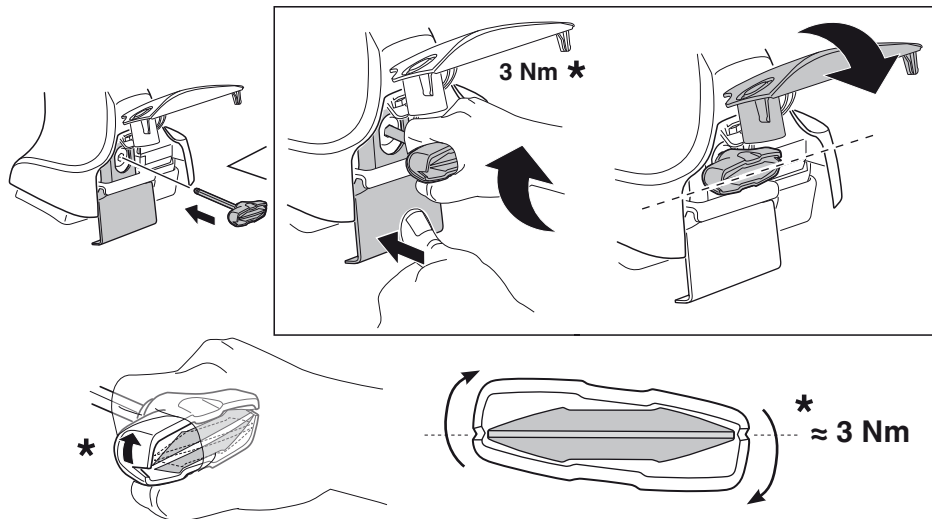

750

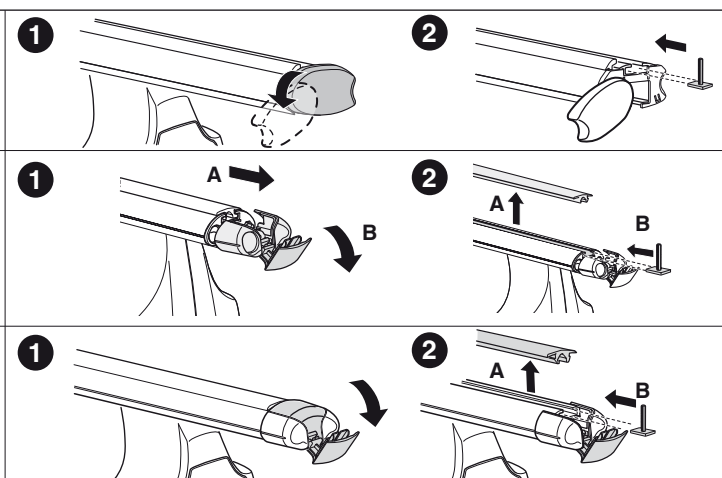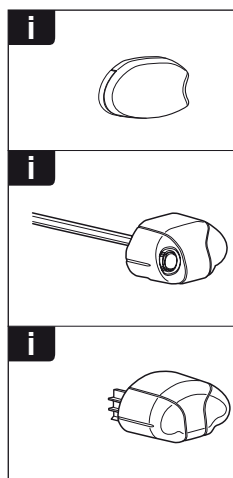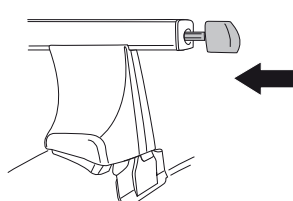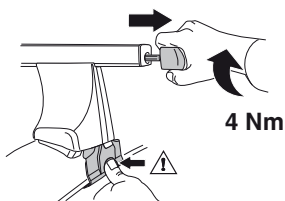    

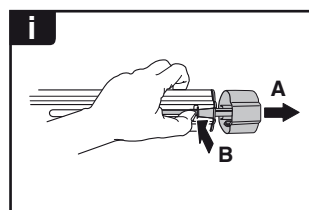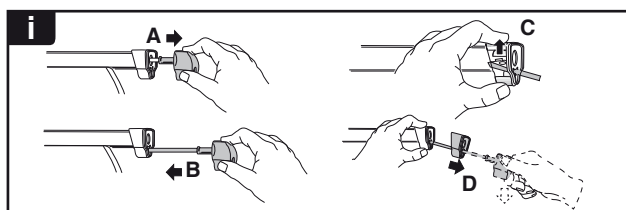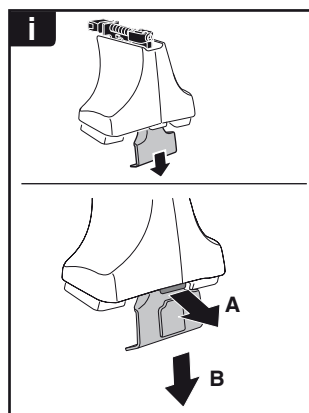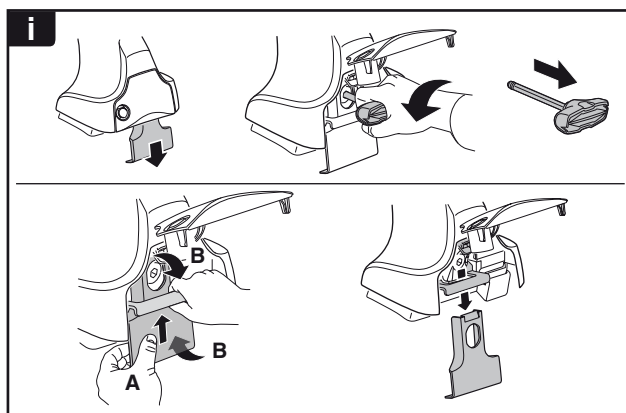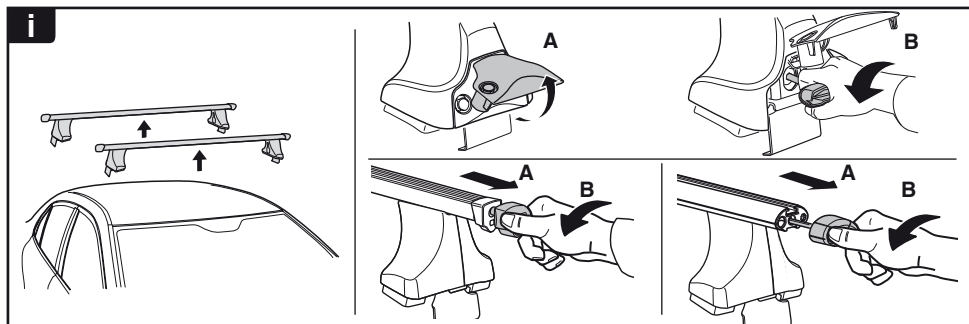     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		544 (x4)
		596 (x6)
		588 (x8)
NA		510 (x10)
EUR		452 (x12)
ASIA		