 
 


Kit 1384

 
TOYOTA Estima, 5-dr MPV, 06–

TOYOTA Tarago (MK.II), 5-dr MPV, 06– (AU)



480R
754

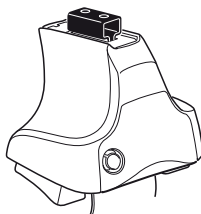

480

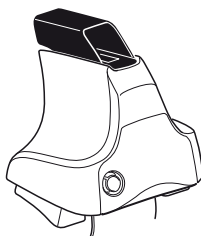

750

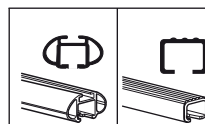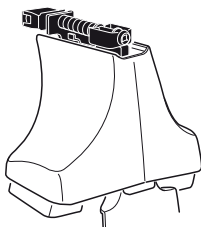  

THULE[®]
SWEDEN

ISO 11154-E

**Max.
75kg**
**Max.
165 lbs**

Kit XXXX
instructions

480R/754
x1
x4
x4
x4

480
x1
x4
x4
x4

750
x1
x4
x4

x2	x2	x2	x2	x2
x2	x2	x2	x2	x2
x2	x2	x2	x2	x2
x4	x4	x4	x4	x4

769 x2

770 x2

172 x4

x1

Kit

1



 
480R/754



480



750

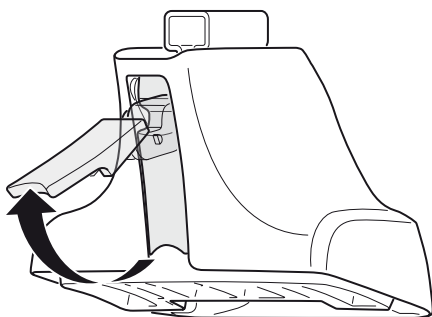

2



480R/754

 
 
 
 
 
 
 
 
 
 
 
 
 
 


480




750


+

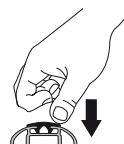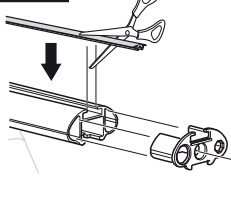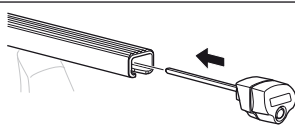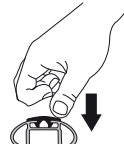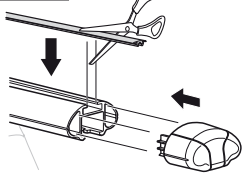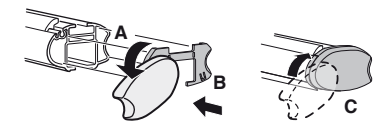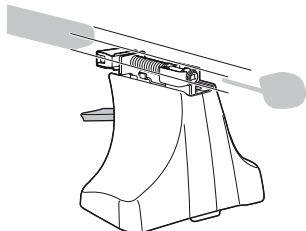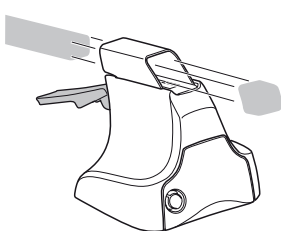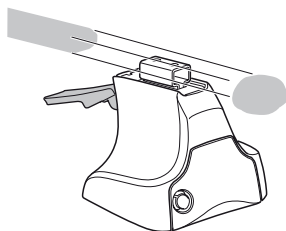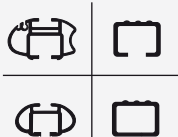

3

 



754

 


750



  1

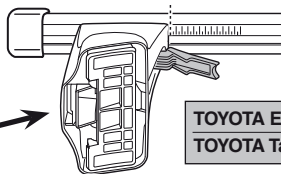


2

 

X

TOYOTA Estima, 5-dr MPV, 06–	36,5
TOYOTA Tarago (MK.II), 5-dr MPV, 06– (AU)	36,5

 1

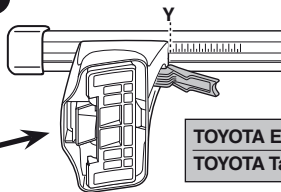

2



Y

TOYOTA Estima, 5-dr MPV, 06–	33,5
TOYOTA Tarago (MK.II), 5-dr MPV, 06– (AU)	33,5

 


480R



480

1




2



X inch X mm

TOYOTA Estima, 5-dr MPV, 06–	40"	1016 mm
TOYOTA Tarago (MK.II), 5-dr MPV, 06– (AU)	40"	1016 mm

 1



2









Y inch Y mm


TOYOTA Estima, 5-dr MPV, 06–	38 7/8"	986 mm
TOYOTA Tarago (MK.II), 5-dr MPV, 06– (AU)	38 7/8"	986 mm

4

   
 
 
 
TOYOTA Estima, 5-dr MPV, 06–
TOYOTA Tarago (MK.II), 5-dr MPV, 06– (AU)

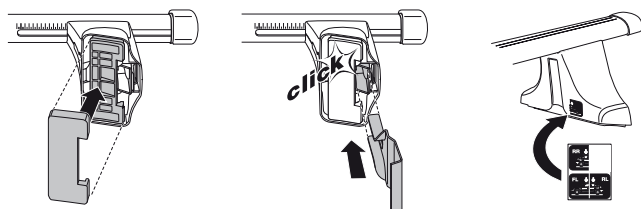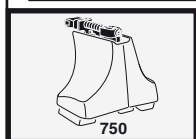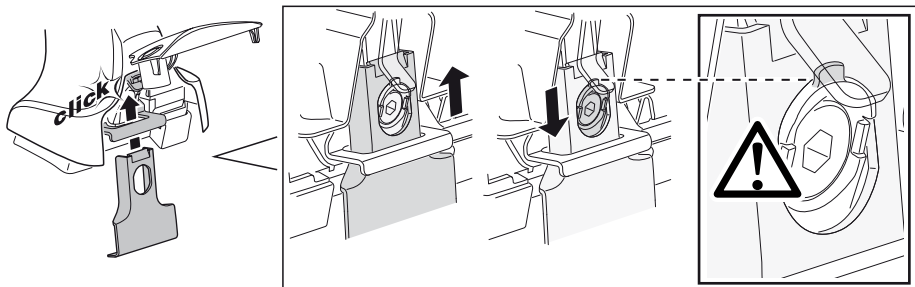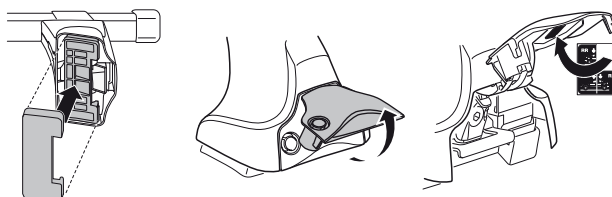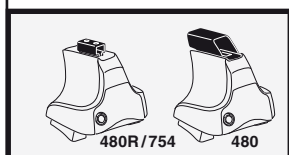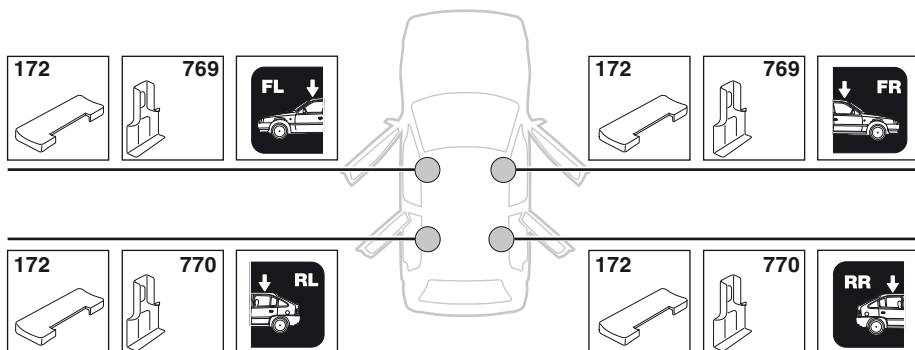

5

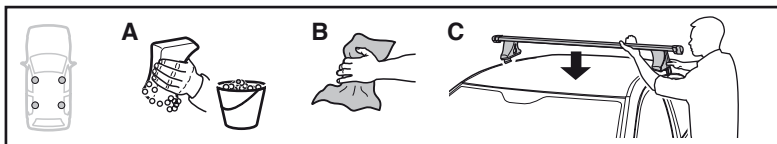 

	X mm	Y mm	X inch	Y inch
TOYOTA Estima, 5-dr MPV, 06–	735 mm	710 mm	28 ⁷ / ₈ "	28 "
TOYOTA Tarago (MK.II), 5-dr MPV, 06– (AU)	735 mm	710 mm	28 ⁷ / ₈ "	28 "

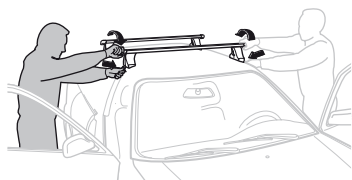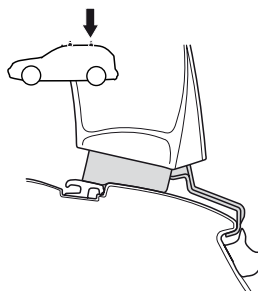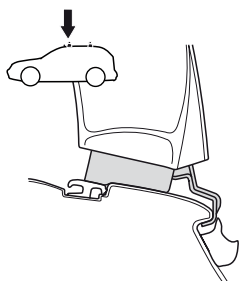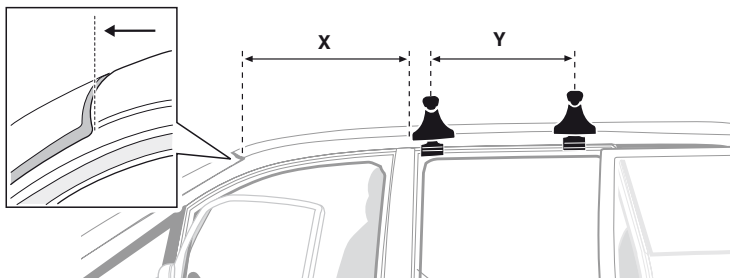    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apretar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pievelciēt pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ


6







480R/754








 480

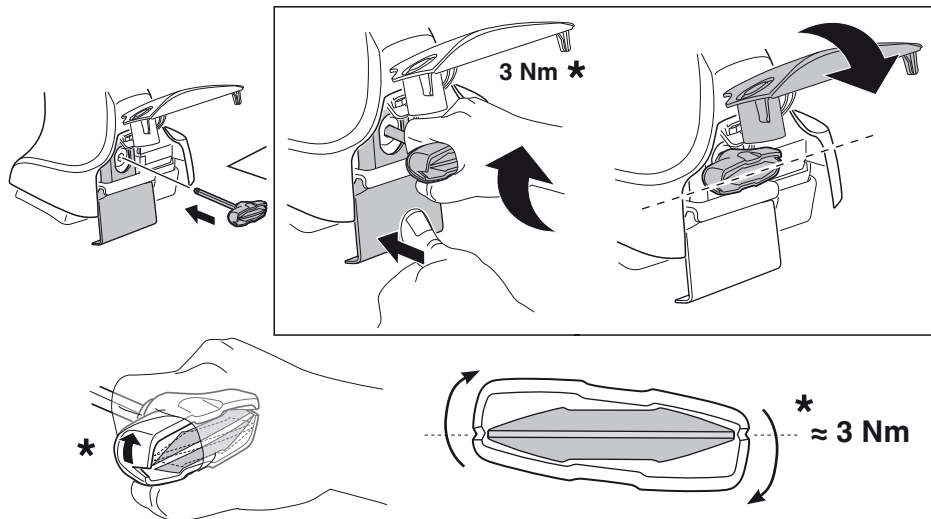

750

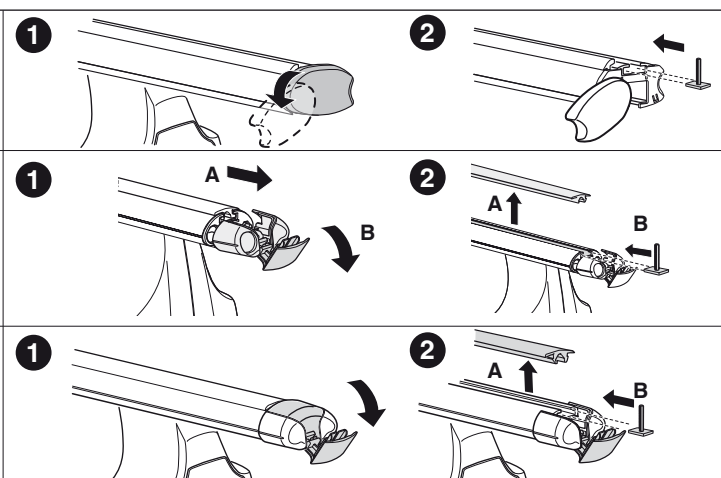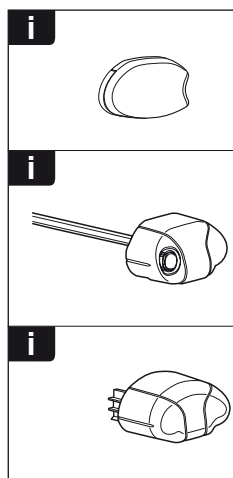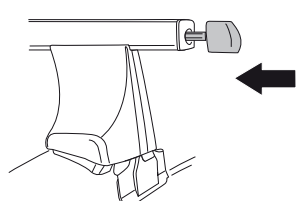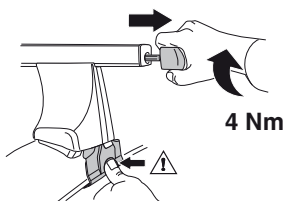    

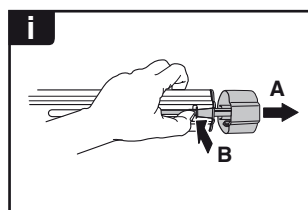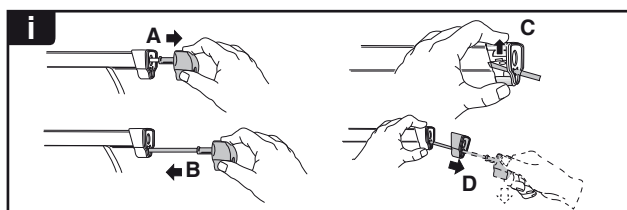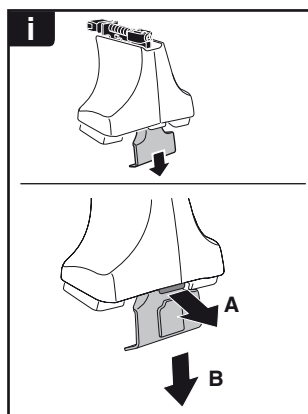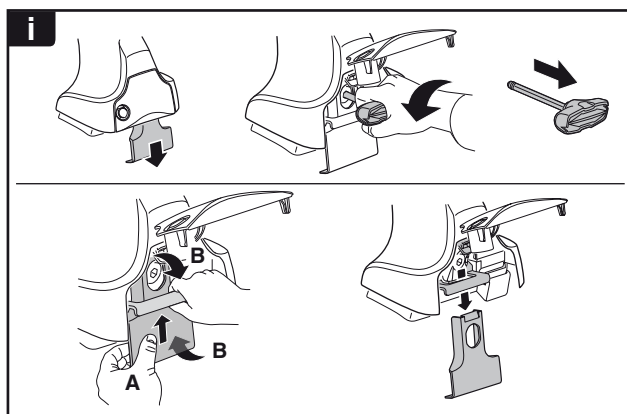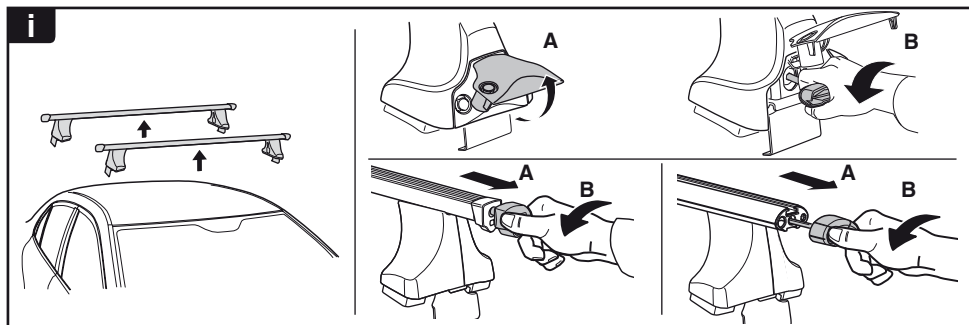     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		