 
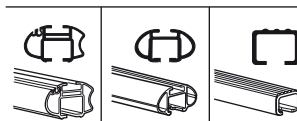 


Kit 1390

 
 
NISSAN Serena, 5-dr MPV, 05–

SUZUKI Landy, 5-dr MPV, 07–



**480R
754**

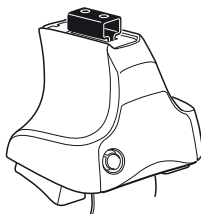

480

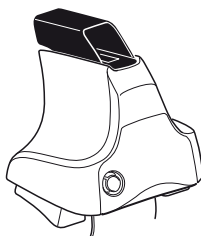

750

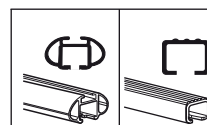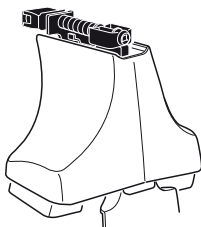  

THULE[®]
SWEDEN

ISO 11154-E

**Max.
50 kg**
**Max.
110 lbs**

Kit XXXX
instructions

x1

x4

x4

x4

x4

480R/754

x1

x4

x4

x4

x4

480

x1

x4

x4

x4

750






x2 x2 x2 x4	x2	x2 x2 x4 x4	x2 x2 x2	x2
----------------------	----	----------------------	----------------	----

758 x4


220 x4

x1

     
Kit

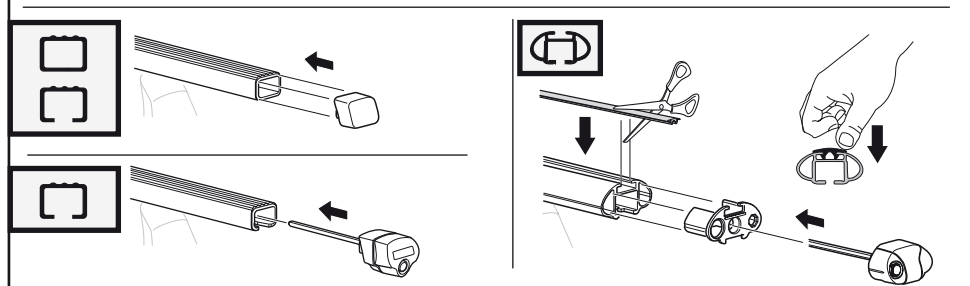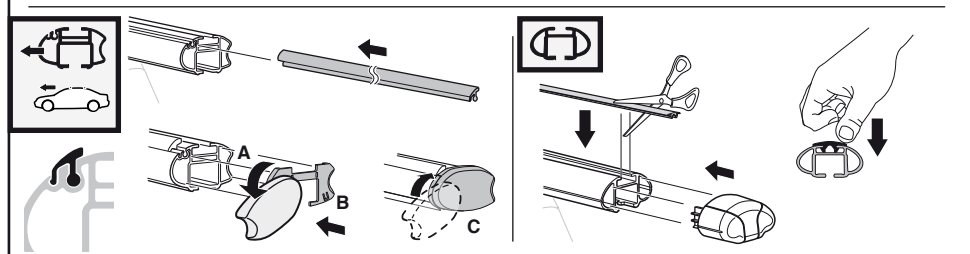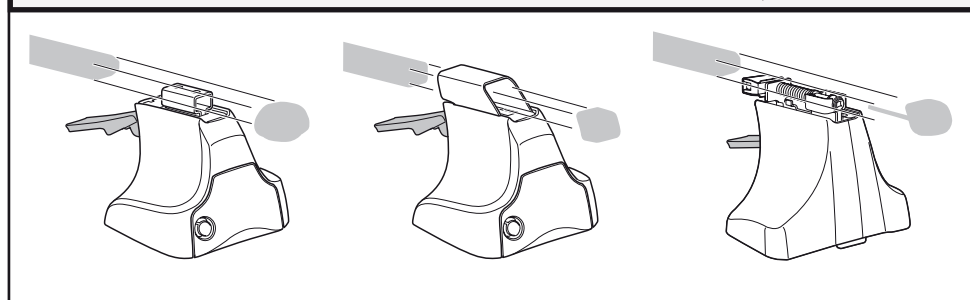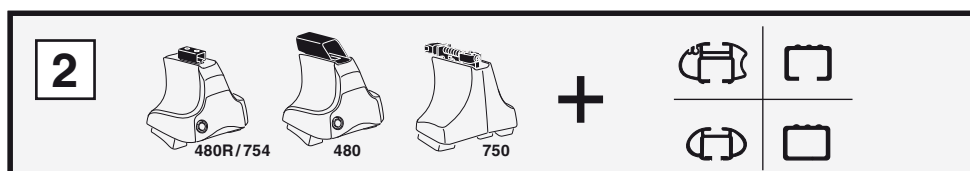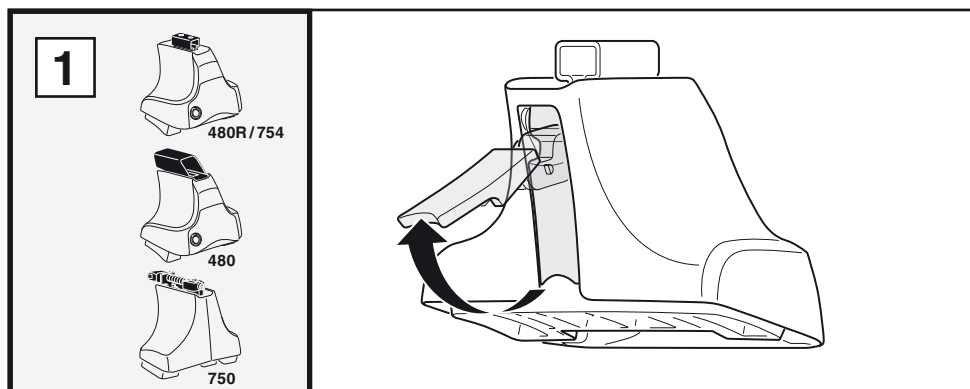

3


 


754

 


750

  1

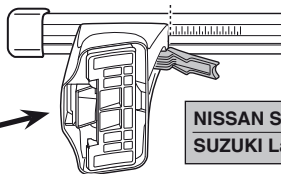


2

 

X	
NISSAN Serena, 5-dr MPV, 05–	42,5
SUZUKI Landy, 5-dr MPV, 07–	42,5

 1

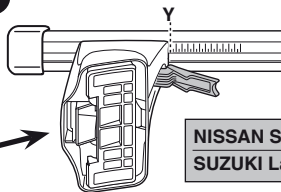

2



Y	
NISSAN Serena, 5-dr MPV, 05–	41,5
SUZUKI Landy, 5-dr MPV, 07–	41,5

 


480R



480

1




2




	X inch	X mm
NISSAN Serena, 5-dr MPV, 05–	42 ³ / ₈ "	1076 mm
SUZUKI Landy, 5-dr MPV, 07–	42 ³ / ₈ "	1076 mm

 1
















2

 


	Y inch	Y mm
NISSAN Serena, 5-dr MPV, 05–	42"	1066 mm
SUZUKI Landy, 5-dr MPV, 07–	42"	1066 mm

4

         
 
 
 
 
NISSAN Serena, 5-dr MPV, 05–
SUZUKI Landy, 5-dr MPV, 07–

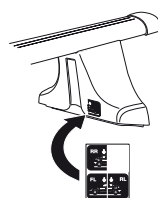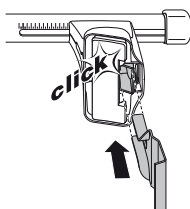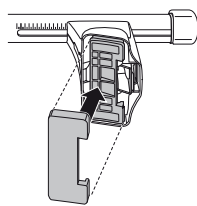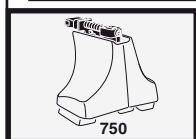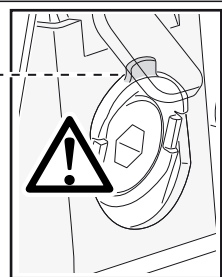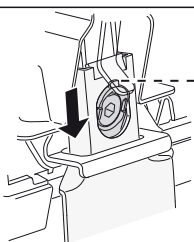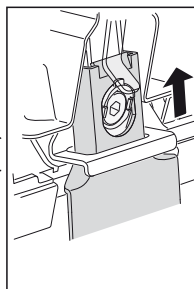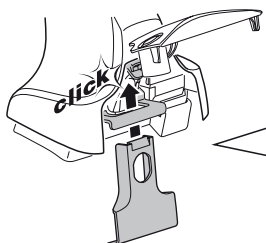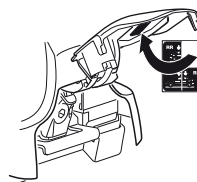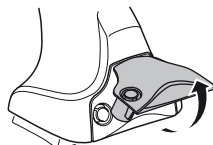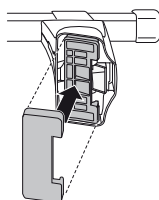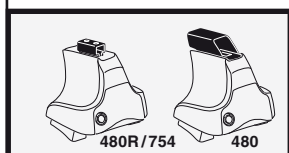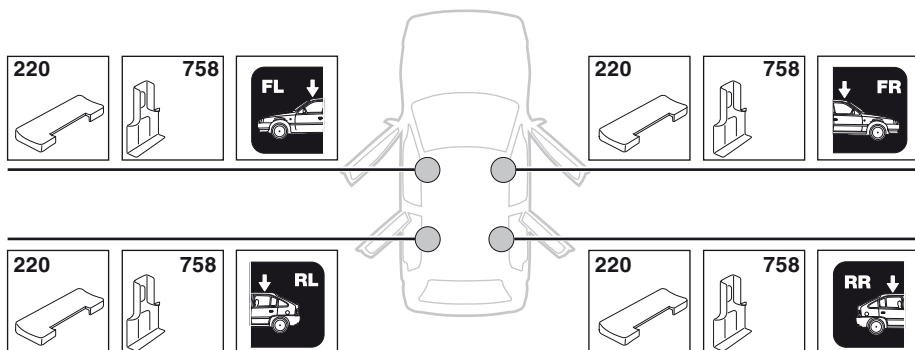

5

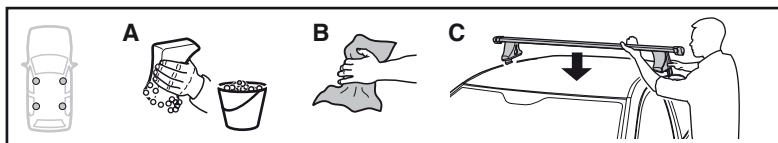 


	X mm	Y mm	X inch	Y inch
NISSAN Serena, 5-dr MPV, 05–	835 mm	635 mm	32 ⁷ / ₈ "	25 "
SUZUKI Landy, 5-dr MPV, 07–	835 mm	635 mm	32 ⁷ / ₈ "	25 "

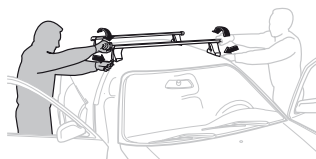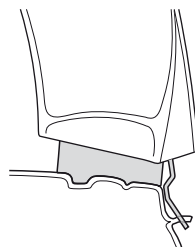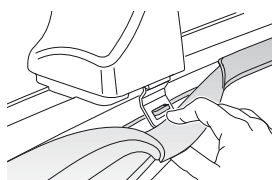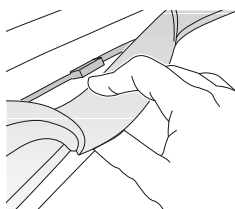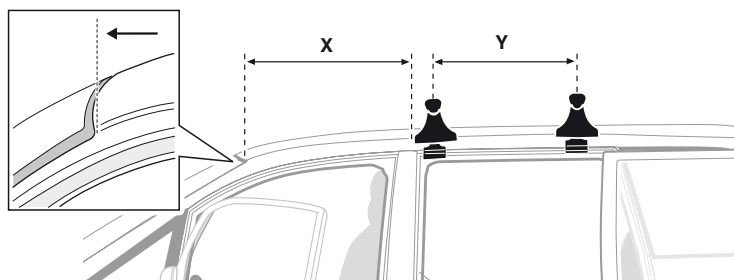     

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťta багажníka dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφιγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ขันในแบบสลับ

 
6







480R/754








 480

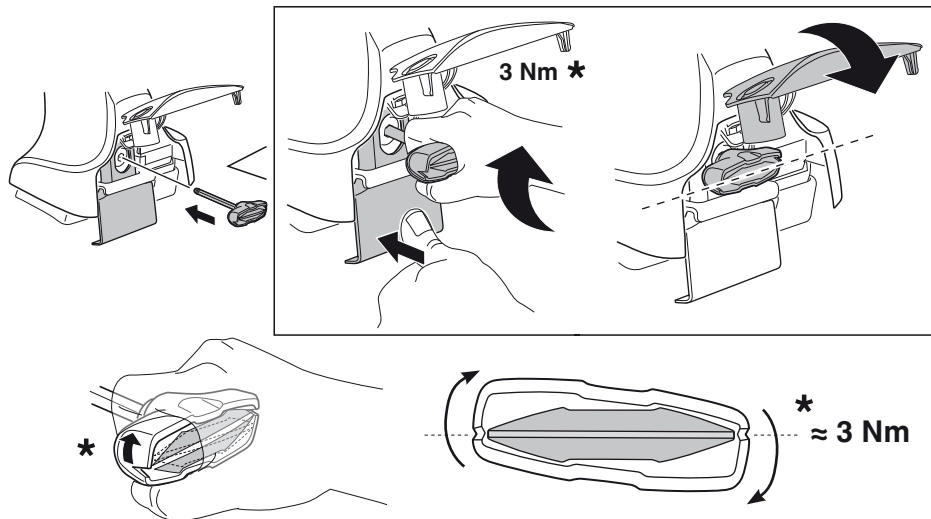

750

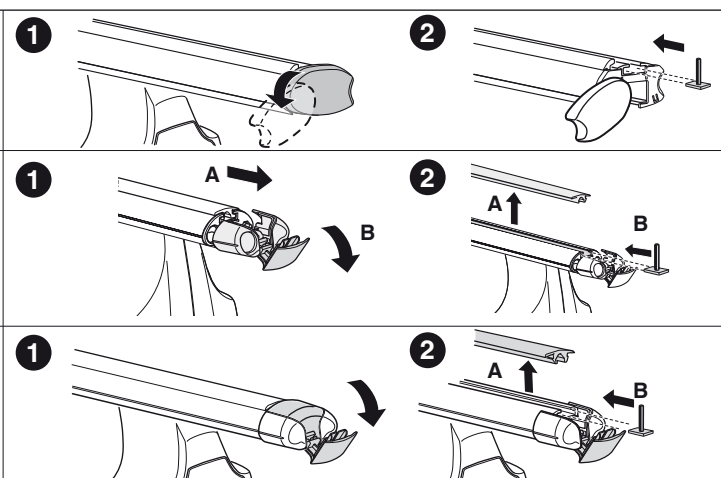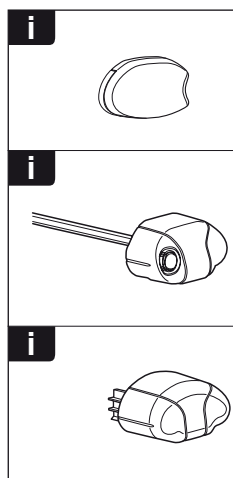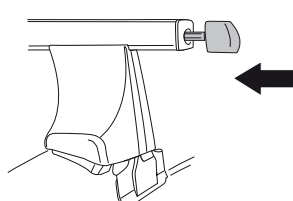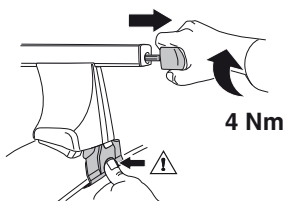    

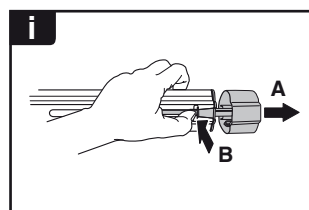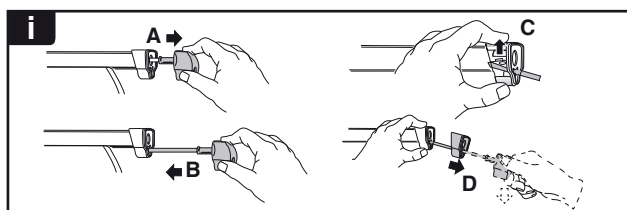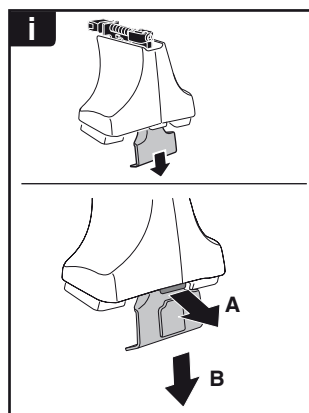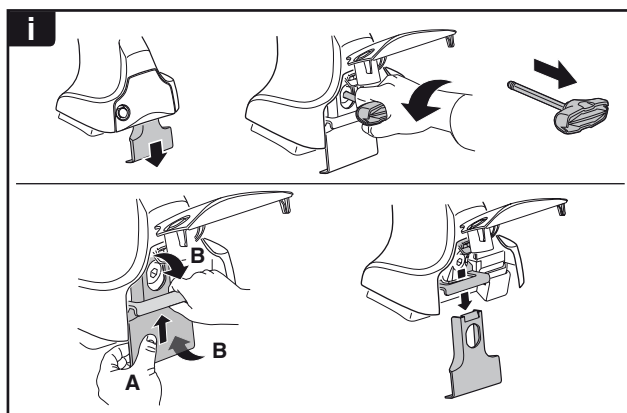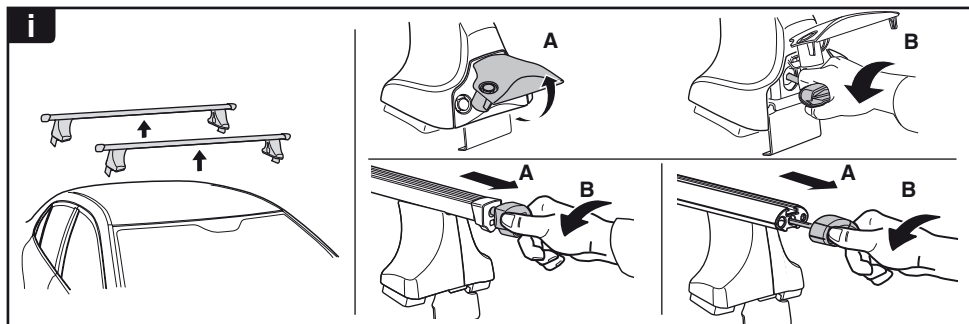     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		