 
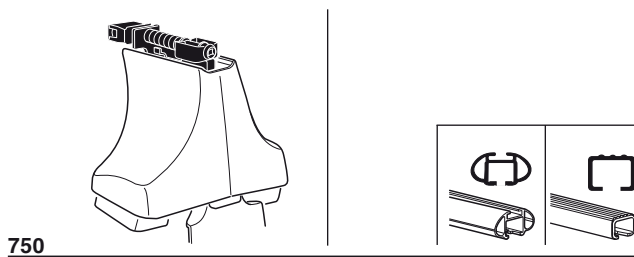 
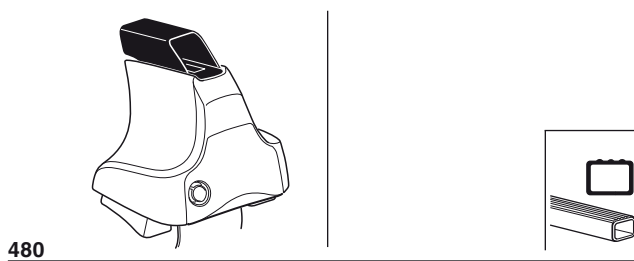 


Kit 1400

MITSUBISHI L200 (KB4T), 4-dr Double Cab, 05–
 MITSUBISHI Triton (KB4T), 4-dr Double Cab, 05–

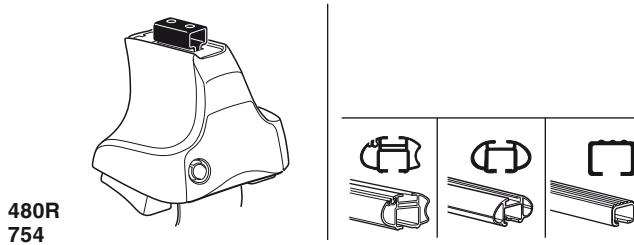

**Max.
50 kg**
**Max.
110 lbs**

80 km/h 130 km/h
 50 Mph 80 Mph
 40 km/h 25 Mph
 0
 km/h
 Mph

Kit XXXX
 instructions
 THULE

x1 x4 x4 x4

480R/754

x1 x4 x4 x4

480

x1 x4 x4 x4

 
 
 
 
 
750

x2 x2 x2 x4 x4 x2 x2 x2 x2 x2


Kit

722 x1 723 x1 733 x2 178 x2 180 x2



x1

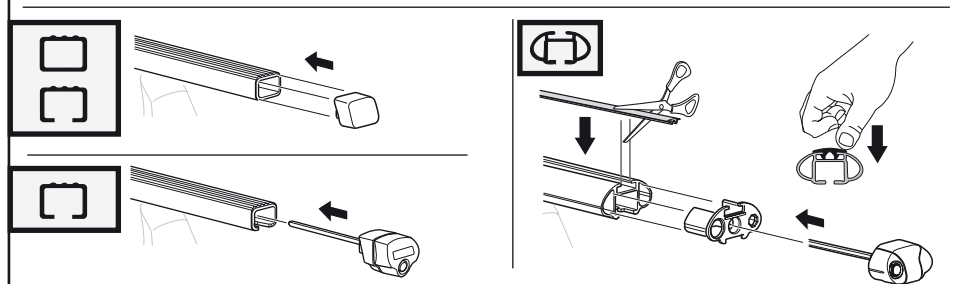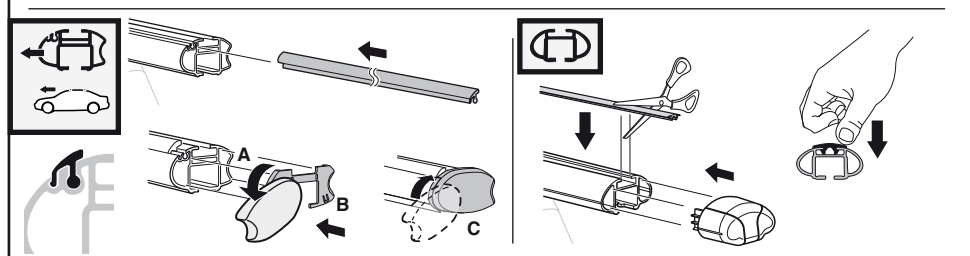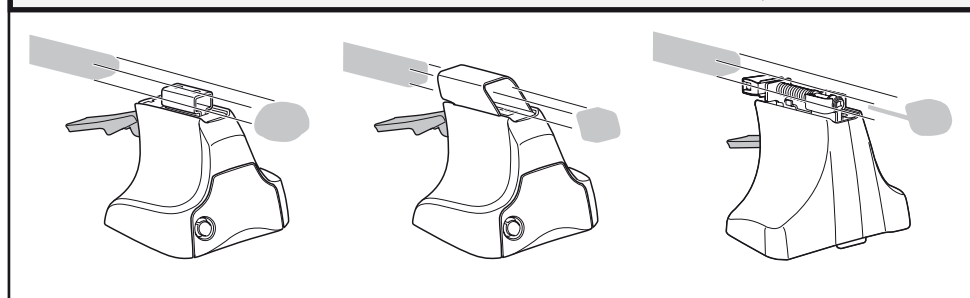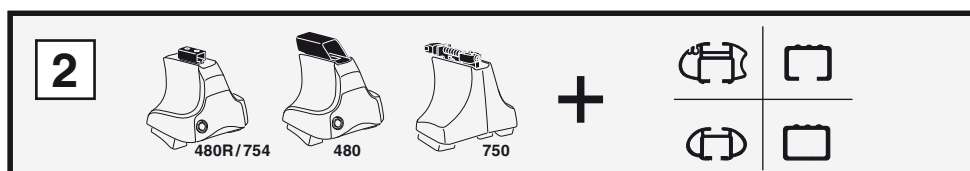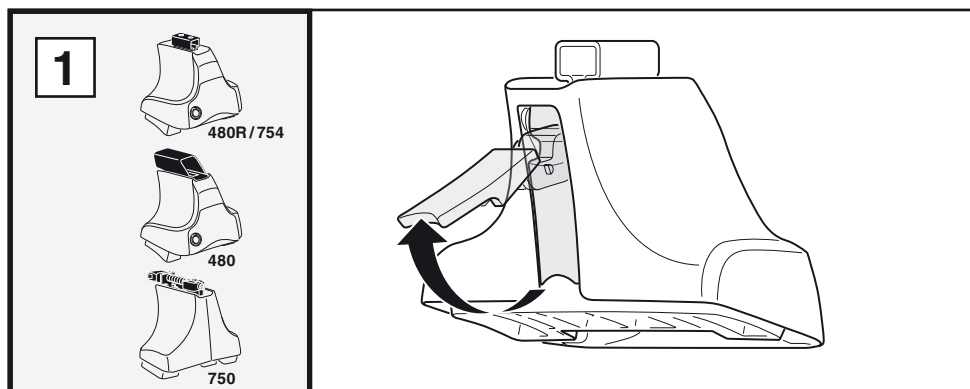

3

 



754

  


750



  1

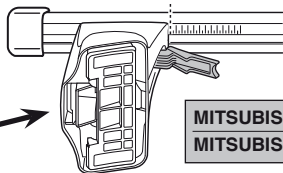


2

 

X

MITSUBISHI L200 (KB4T), 4-dr Double Cab, 05-	40
MITSUBISHI Triton (KB4T), 4-dr Double Cab, 05-	40

 1

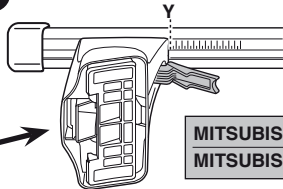

2



Y

MITSUBISHI L200 (KB4T), 4-dr Double Cab, 05-	34,5
MITSUBISHI Triton (KB4T), 4-dr Double Cab, 05-	34,5

 


480R



480

1



2




X inch


X mm

MITSUBISHI L200 (KB4T), 4-dr Double Cab, 05-	41 ³ / ₈ "	1051 mm
MITSUBISHI Triton (KB4T), 4-dr Double Cab, 05-	41 ³ / ₈ "	1051 mm

 1



2

 













Y inch

Y mm


MITSUBISHI L200 (KB4T), 4-dr Double Cab, 05-	39 ¹ / ₄ "	996 mm
MITSUBISHI Triton (KB4T), 4-dr Double Cab, 05-	39 ¹ / ₄ "	996 mm

4

         
 
 
 
MITSUBISHI L200 (KB4T), 4-dr Double Cab, 05–
MITSUBISHI Triton (KB4T), 4-dr Double Cab, 05–

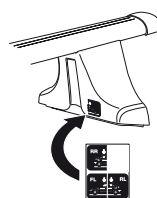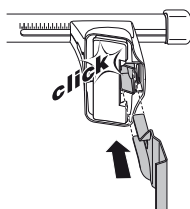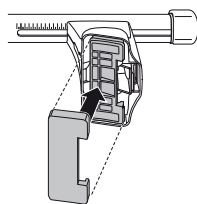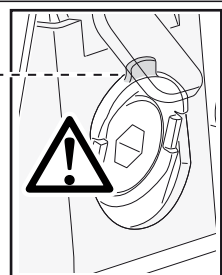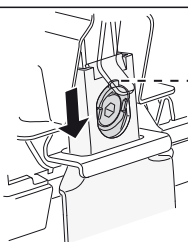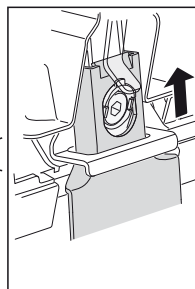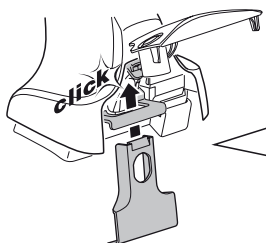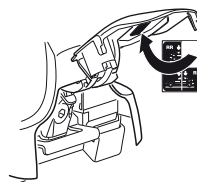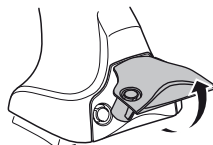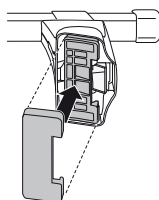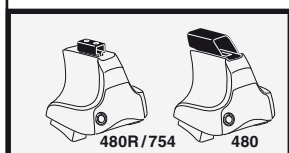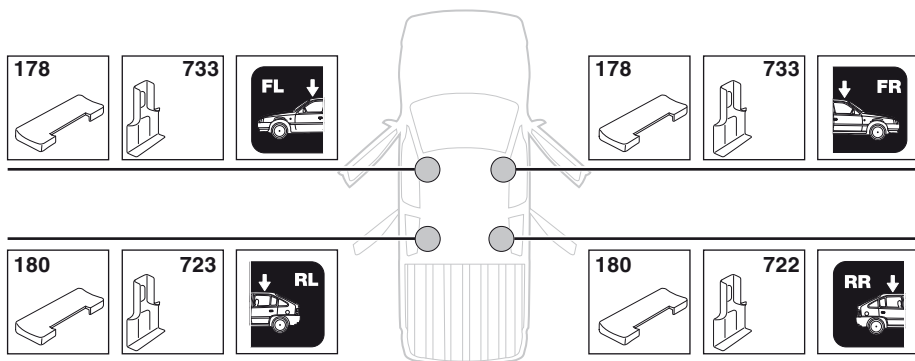

5

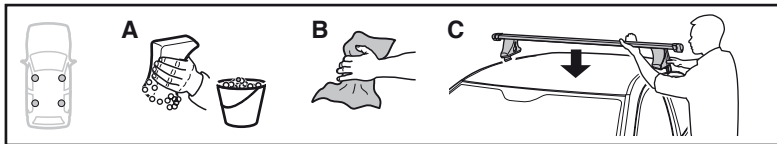 

	X mm	Y mm	X inch	Y inch
MITSUBISHI L200 (KB4T), 4-dr Double Cab, 05–	350 mm	800 mm	13 ³/₄ "	31 ¹/₂ "
MITSUBISHI Triton (KB4T), 4-dr Double Cab, 05–	350 mm	800 mm	13 ³/₄ "	31 ¹/₂ "

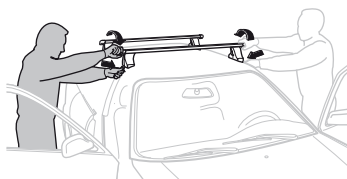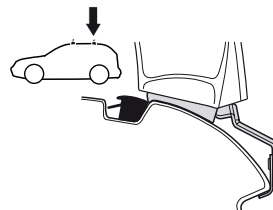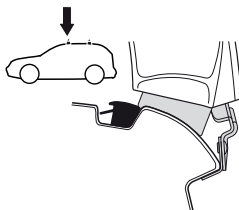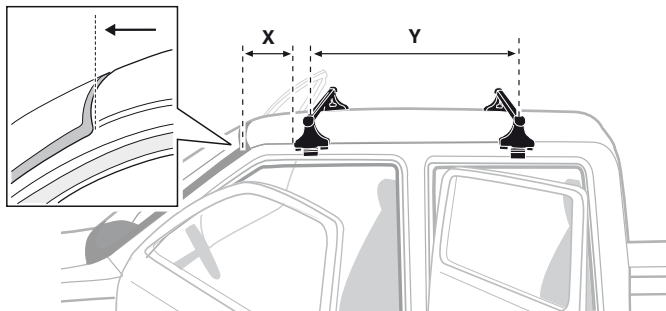    

GB/US Tighten alternately

D Die Schrauben abwechselnd anziehen

F Serrer alternativement chaque côté

NL Afwisselend aan de linker- en de rechterkant aandraaien

I Alternare il serraggio delle viti

E Apretar alternativamente

PT Aperte alternadamente

S Dra åt växelvis

FIN Kierrä vuorotellen

EST Pinguldage vaheldumisi

LAT Pielvelciēt pamišus

LIT Užsukinėkite pakaitomis

PL Śruby dokręcaj naprzemiennie

RU Затягивайте попеременно

CZ Pokręťte багаžníka dokręcaj dokręcaj naprzemiennie.

SK Doťahujte striedavo

SLO Privijajte izmenično.

HR Naizmjenično zategnite

HU Egymástól függetlenül szorítandó

GR Σφίγγετε εναλλάξ

TR Dönüşümlü sıkın

 
中文 交替拧紧

한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

ไทย ขันในแบบสลับ



6






480R/754








  480

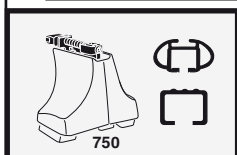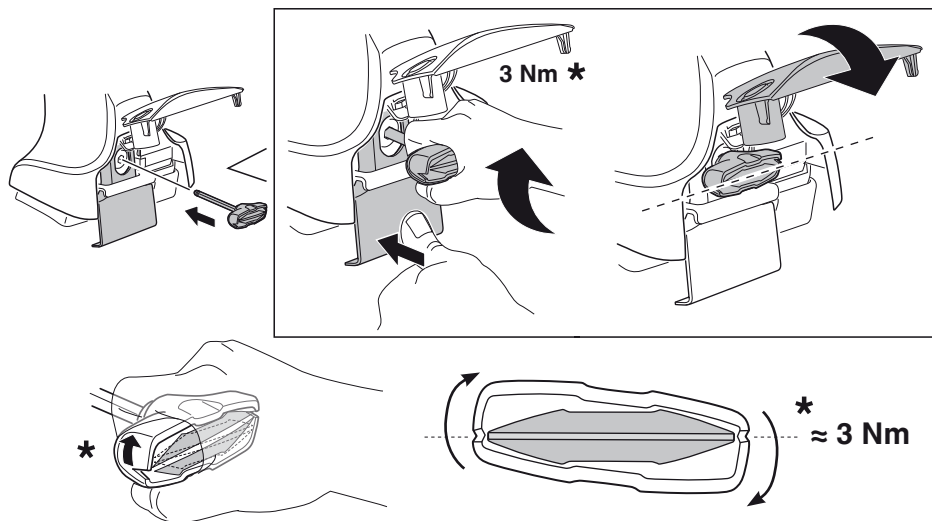

750

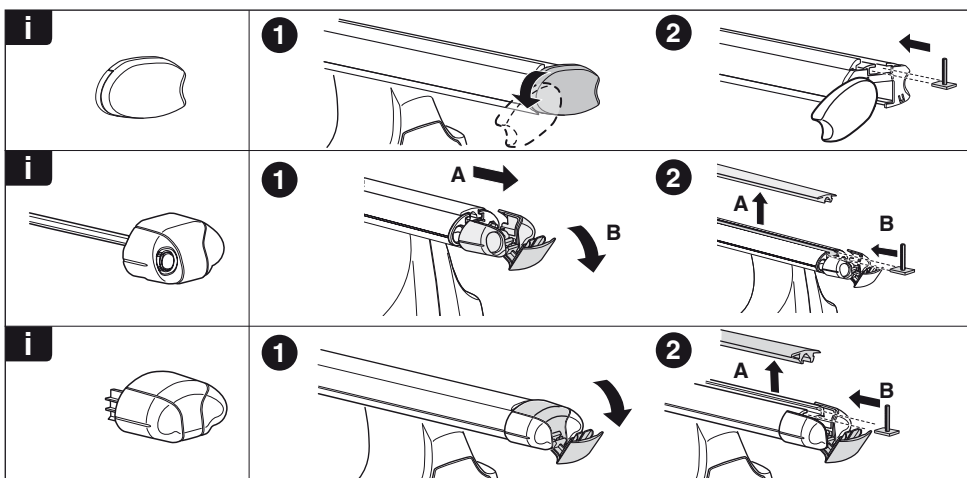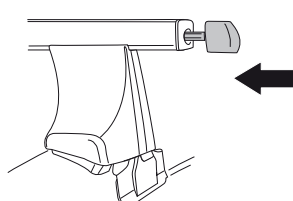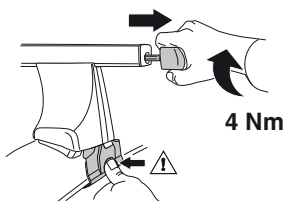   

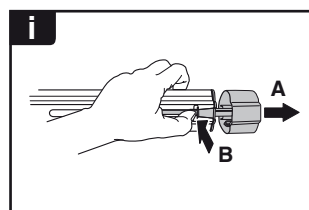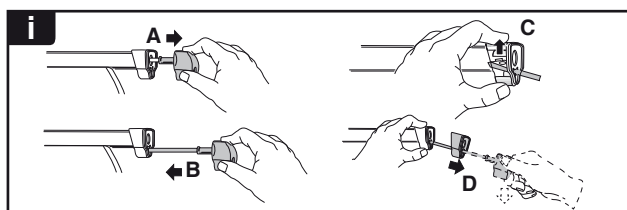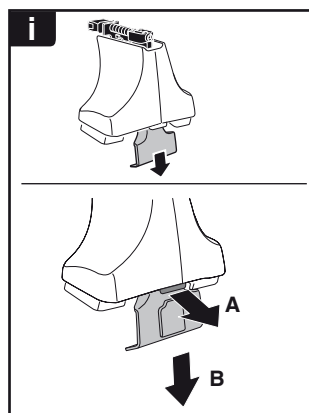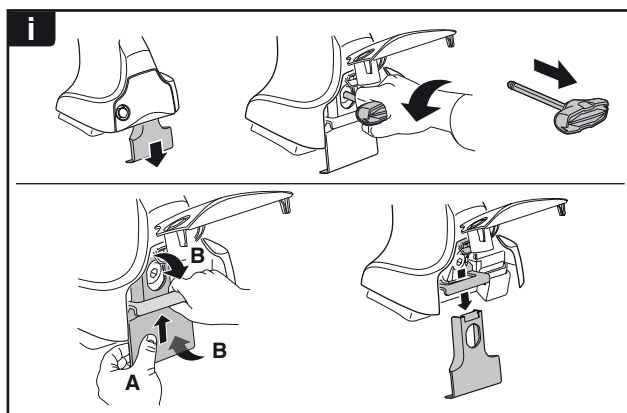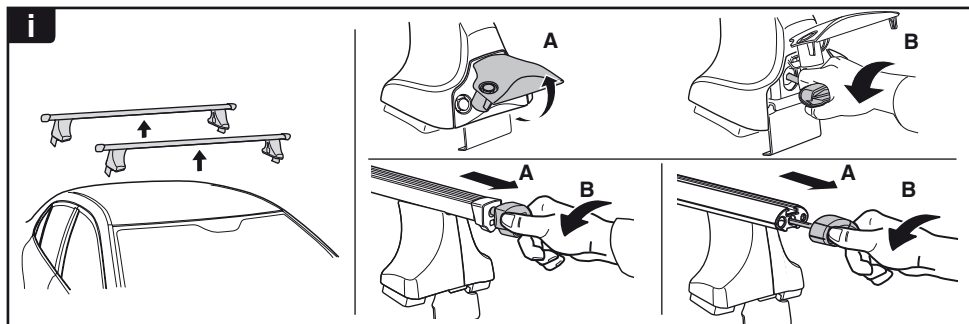     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA