 
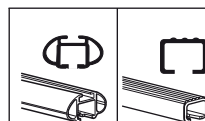 
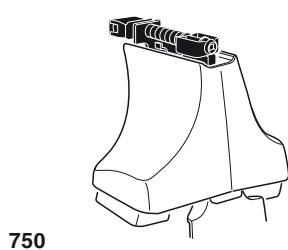 
 
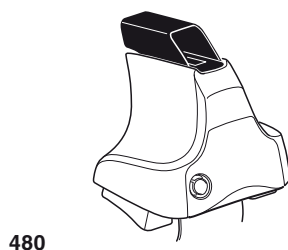 
 


Kit 1401

MITSUBISHI L200 (KB4T), 2-dr Crew Cab, 05–
MITSUBISHI Triton (KB4T), 2-dr Crew Cab, 05–

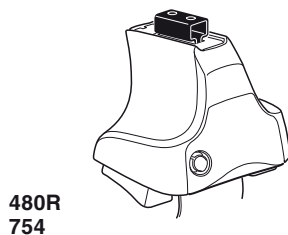

THULE[®]
 SWEDEN

ISO 11154-E

480R/754

x1

x4

x4

480

x1

x4

 
 
 
x4

750

x1

x4

x4

   x2  x2  x2  x4	  x2	  x2  x2  x4  x4	  x2  x2	  x2
--	---	--	---	---

Kit

 
 
 
 
 
619 x2

788 x2


178 x2

180 x2



618 x1

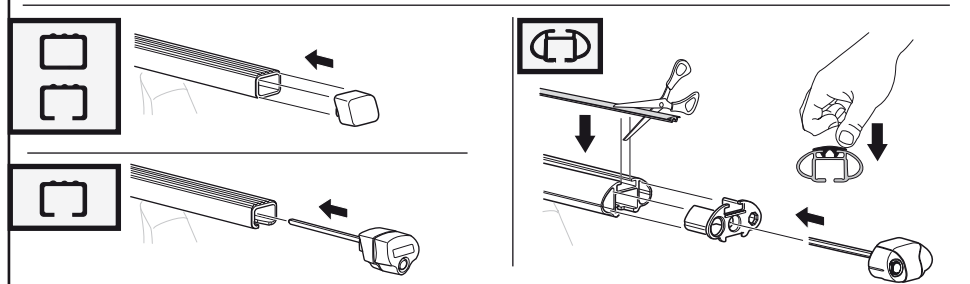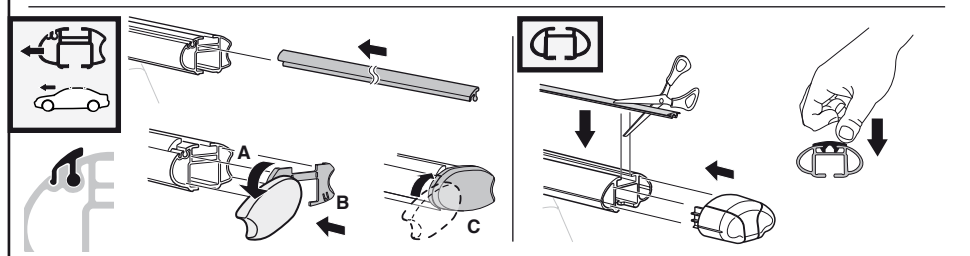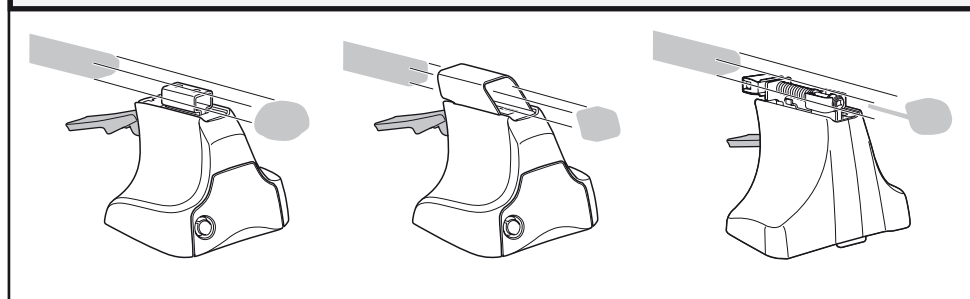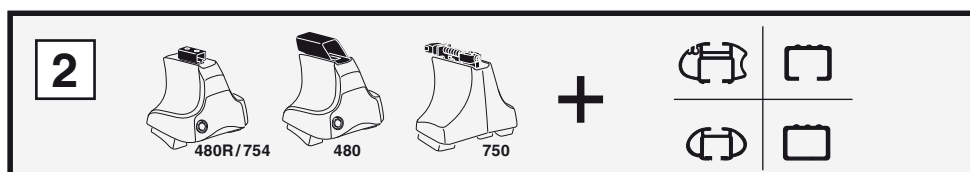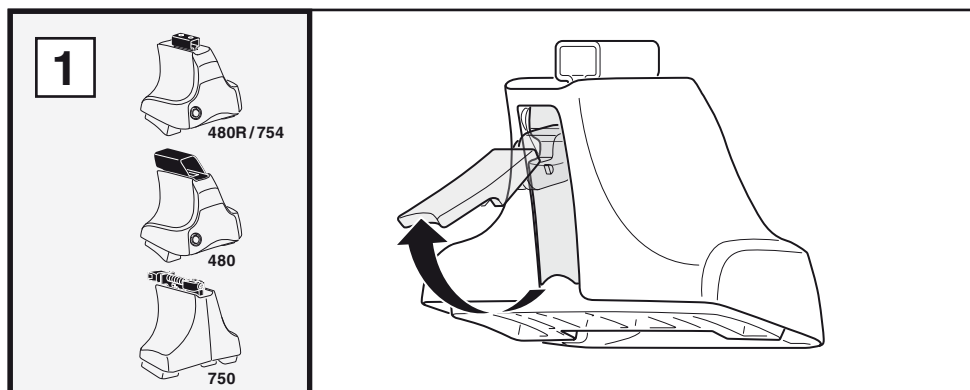

3


 


754

  


750

  1

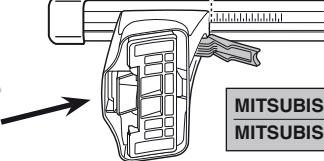

2

 


X

MITSUBISHI L200 (KB4T), 2-dr Crew Cab, 05-
MITSUBISHI Triton (KB4T), 2-dr Crew Cab, 05-

41

 1

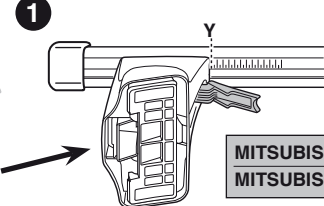

2



Y

MITSUBISHI L200 (KB4T), 2-dr Crew Cab, 05-
MITSUBISHI Triton (KB4T), 2-dr Crew Cab, 05-

35,5

 


480R



480

1



2



X inch

 
X mm

MITSUBISHI L200 (KB4T), 2-dr Crew Cab, 05-
MITSUBISHI Triton (KB4T), 2-dr Crew Cab, 05-

41 3/4"

1061 mm

1



2



Y inch

Y mm

 
 
 
 
 
 
 
 
 
 
 
 
 
MITSUBISHI L200 (KB4T), 2-dr Crew Cab, 05-
MITSUBISHI Triton (KB4T), 2-dr Crew Cab, 05-

39 5/8"


1006 mm

4




MITSUBISHI L200 (KB4T), 2-dr Crew Cab, 05–
MITSUBISHI Triton (KB4T), 2-dr Crew Cab, 05–

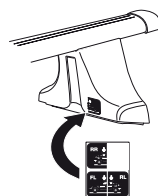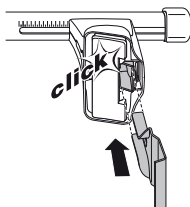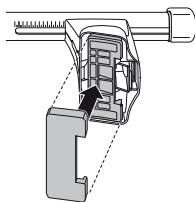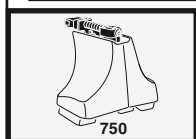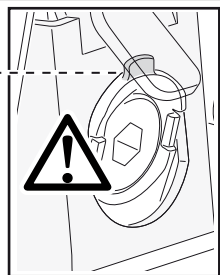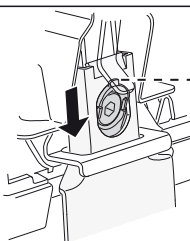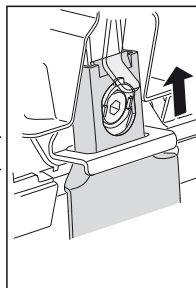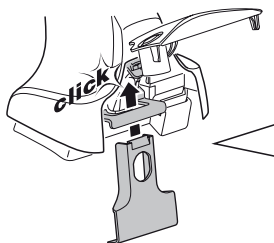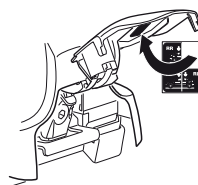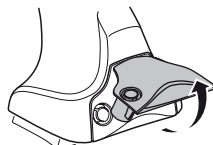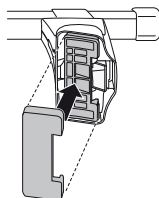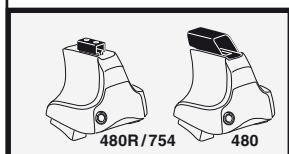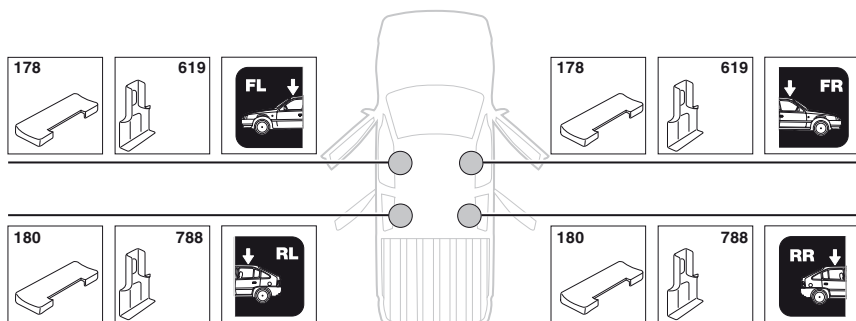

5

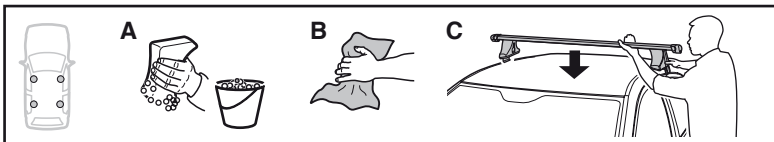 


	X mm	Y mm	X inch	Y inch
MITSUBISHI L200 (KB4T), 2-dr Crew Cab, 05–	265 mm	620 mm	10 $\frac{3}{8}$"	24 $\frac{3}{8}$"
MITSUBISHI Triton (KB4T), 2-dr Crew Cab, 05–	265 mm	620 mm	10 $\frac{3}{8}$"	24 $\frac{3}{8}$"

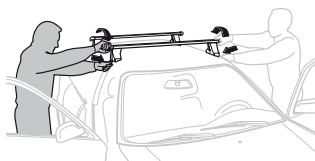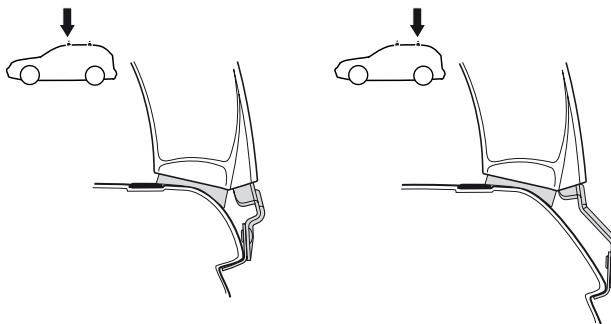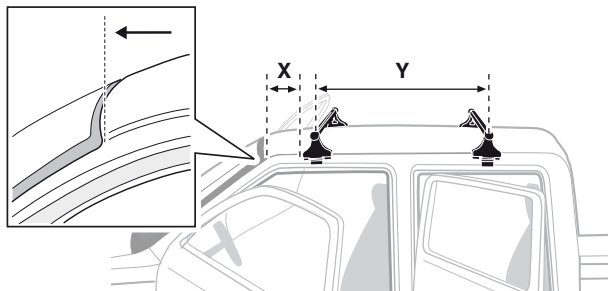   

GB/US	Tighten alternately	CZ	Pokřetla bagazníka dokřećaj dokřećaj napřezemennie.
D	Die Schrauben abwechselnd anziehen	SK	Dofahujte striedavo
F	Serrer alternativement chaque côté	SLO	Privijajte izmenično.
NL	Afwisselend aan de linker- en de rechterkant aandraaien	HR	Naizmjenično zategnite
I	Alternare il serraggio delle viti	HU	Egymástól függetlenül szorítandó
E	Serrare alternativamente	GR	Σφιγγετε εναλλάξ
PT	Aperte alternadamente	TR	Dönüşümlü sıkın
S	Dra åt växelvis	中文	交替拧紧
FIN	Kierrä vuorotellen	한국어	번갈아 가며 조이십시오.
EST	Pinguldage vaheldumisi	日本語	交互に締め付けてください。
LAT	Pievēlciēt pamišus	ไทย	ขันในแบบสลับ
LIT	Užsukinėkite pakaitomis		
PL	Śruby dokręćaj naprzemiennie		
RU	Затягивайте попеременно		


 
6





480R/754



  
480

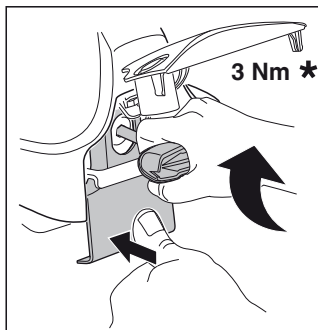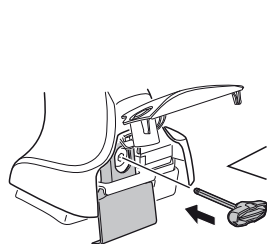

3 Nm *

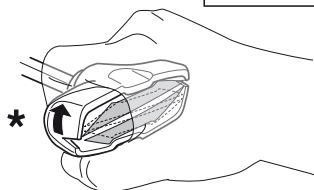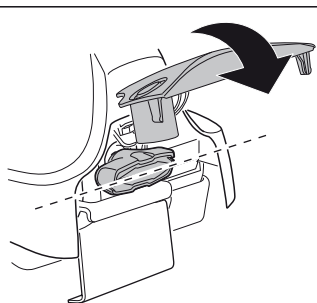  


*

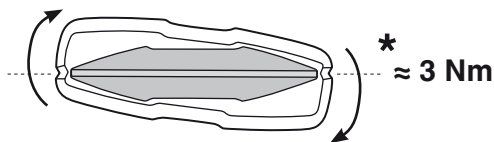 



* $\approx 3 \text{ Nm}$



 
750

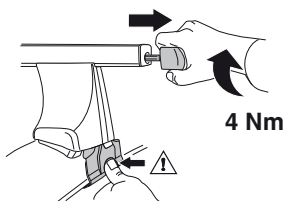


4 Nm

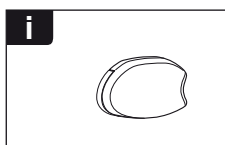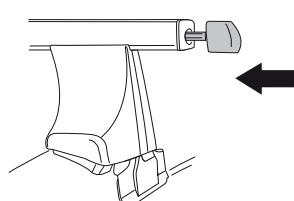  


i

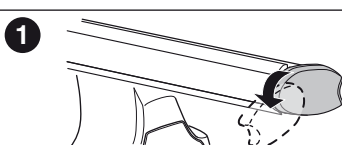 


1

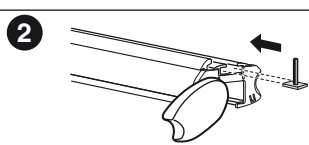 


2

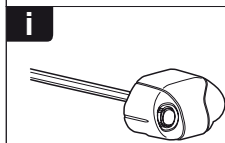 


i

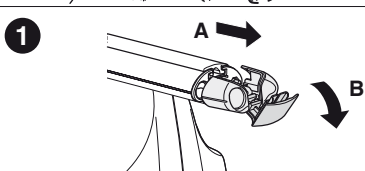 


1

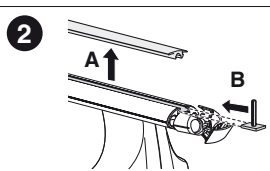 


2

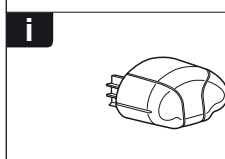 






i

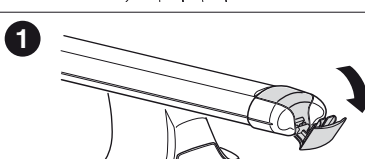 

1

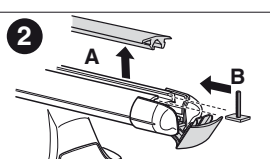 

2

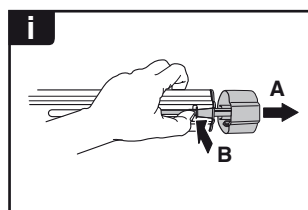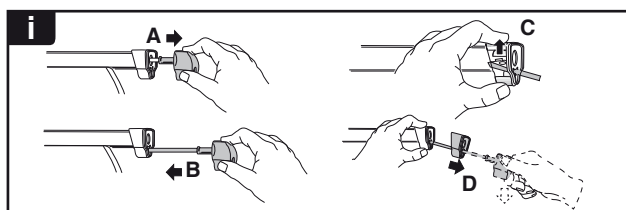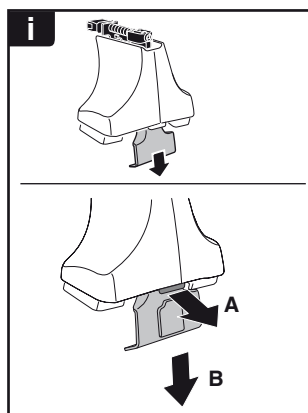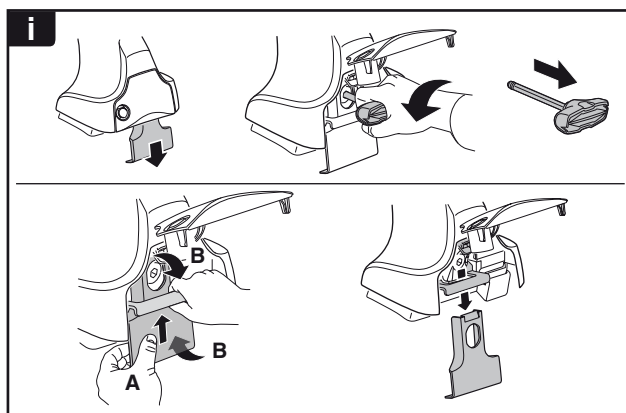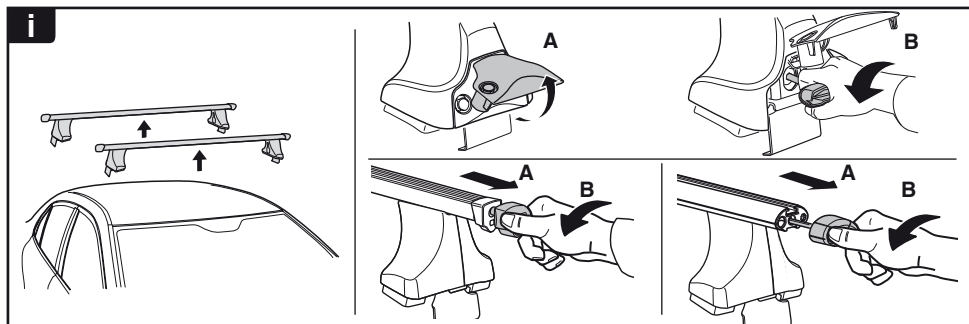     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

		(x4)
		(x6)
		(x8)
NA		(x10)
EUR		(x12)
ASIA		