 
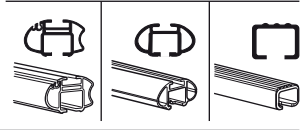 




Kit 1408

NISSAN King Cab, 2-dr Single Cab, 05-
NISSAN King Cab, 4-dr Crew Cab, 05-
NISSAN Navara, 4-dr Crew Cab, 05-



480R
754

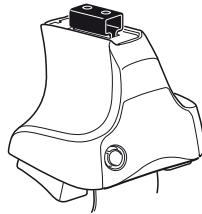

  480

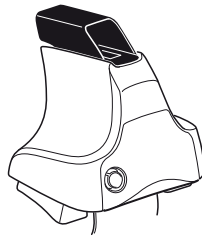

750

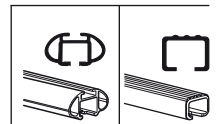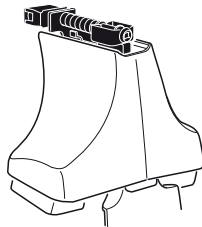  

xx kg
 xx lbs + 7 kg
 15,4 lbs = **Max. 30 kg**
Max. 66 lbs

80 km/h 50 Mph
 130 km/h 80 Mph
 40 km/h 25 Mph
km/h Mph

THULE
 + **Kit XXXX**
instructions

x4
480R/754 x4

x4
480 x4

x4
750 x4

x2	x2	x2	x2	x2
x2	x2	x2	x2	x2
x2	x2	x4	x2	x2
x4		x4		

 
771 x4

174 x4


x1

Kit






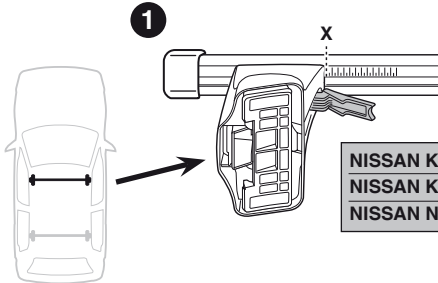



	X
NISSAN King Cab, 2-dr Single Cab, 05-	46,5
NISSAN King Cab, 4-dr Crew Cab, 05-	46,5
NISSAN Navara, 4-dr Crew Cab, 05-	46,5

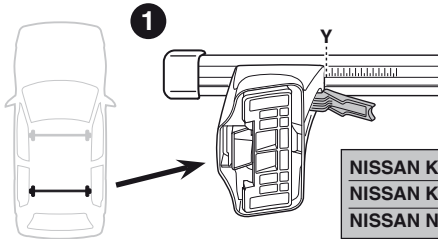 















	Y
NISSAN King Cab, 2-dr Single Cab, 05-	-
NISSAN King Cab, 4-dr Crew Cab, 05-	45
NISSAN Navara, 4-dr Crew Cab, 05-	45

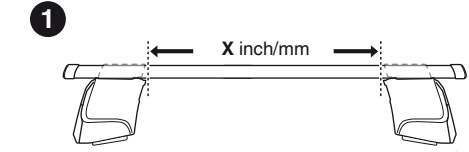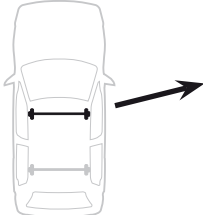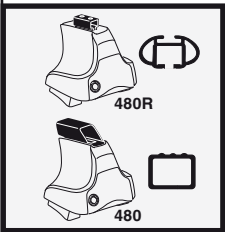   


	X inch	X mm
NISSAN King Cab, 2-dr Single Cab, 05-	43 ⁷ / ₈ "	1116 mm
NISSAN King Cab, 4-dr Crew Cab, 05-	43 ⁷ / ₈ "	1116 mm
NISSAN Navara, 4-dr Crew Cab, 05-	43 ⁷ / ₈ "	1116 mm

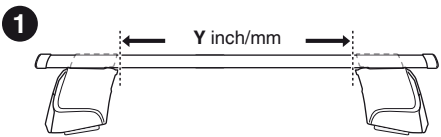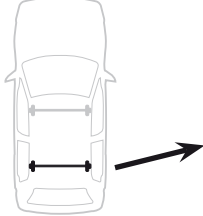  

	Y inch	Y mm
NISSAN King Cab, 2-dr Single Cab, 05-	-	-
NISSAN King Cab, 4-dr Crew Cab, 05-	43 ³ / ₈ "	1101 mm
NISSAN Navara, 4-dr Crew Cab, 05-	43 ³ / ₈ "	1101 mm

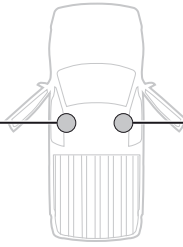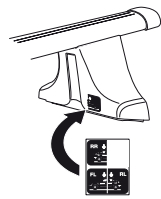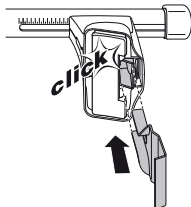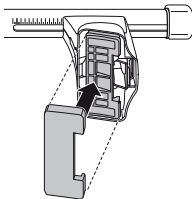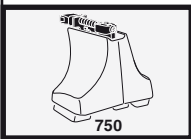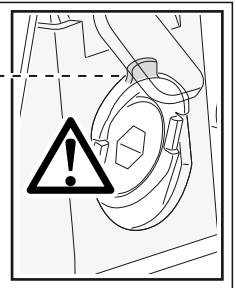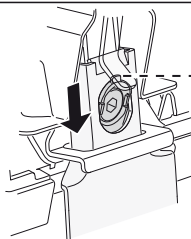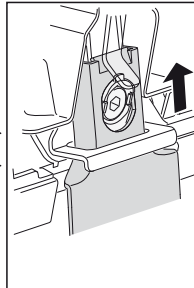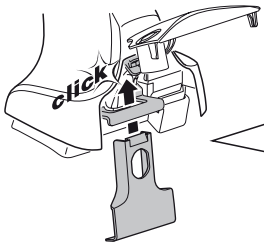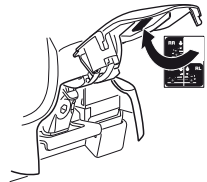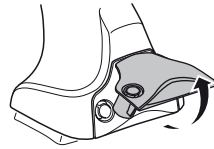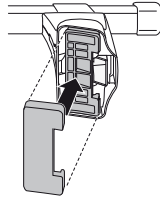            
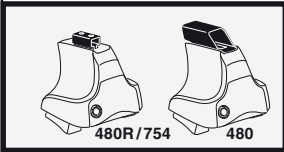 
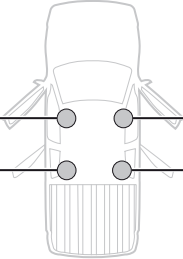 
4**NISSAN King Cab, 2-dr Single Cab, 05-****NISSAN King Cab, 4-dr Crew Cab, 05-****NISSAN Navara, 4-dr Crew Cab, 05-**

5




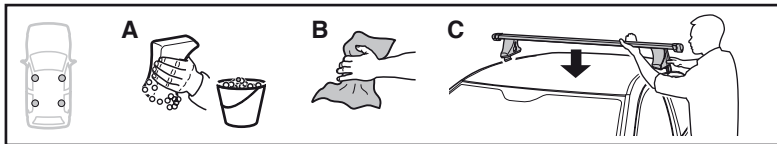


	X mm	Y mm	X inch	Y inch
NISSAN King Cab, 2-dr Single Cab, 05-	260 mm	-	10 1/4"	-
NISSAN King Cab, 4-dr Crew Cab, 05-	260 mm	750 mm	10 1/4"	29 1/2"
NISSAN Navara, 4-dr Crew Cab, 05-	260 mm	750 mm	10 1/4"	29 1/2"

   NISSAN King Cab, 2-dr Single Cab, 05-

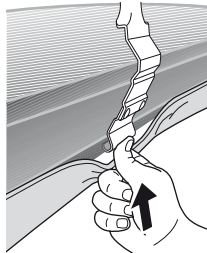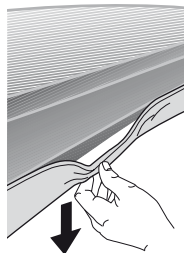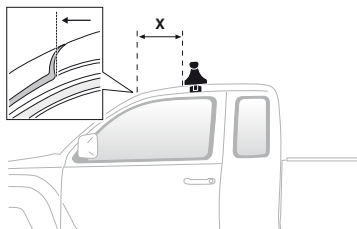

    NISSAN King Cab, 4-dr Crew Cab, 05- NISSAN Navara, 4-dr Crew Cab, 05-

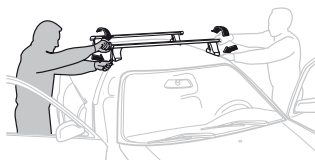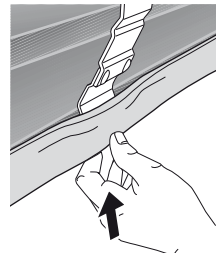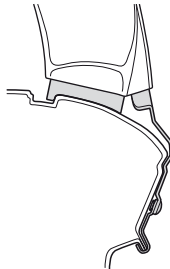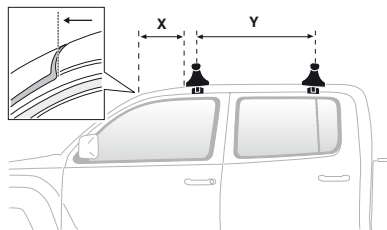

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamišus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťta bagażnika dokręcaj dokręcaj naprzemiennie.
SK Doťahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenično zategnite
HU Egymástól függetlenül szorítandó
GR Σφίγγετε εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ชั้้นในแบบสลับ

 

6




480R/754




480

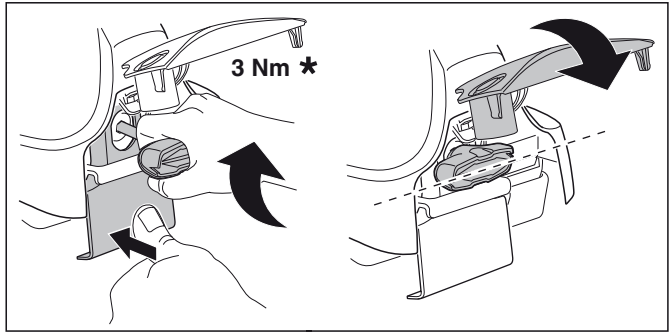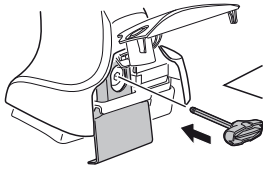

3 Nm *

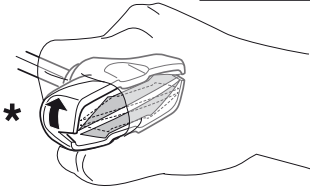 


*

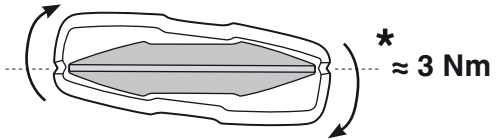 





* ≈ 3 Nm







 750

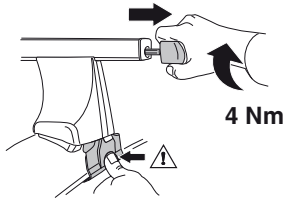


4 Nm

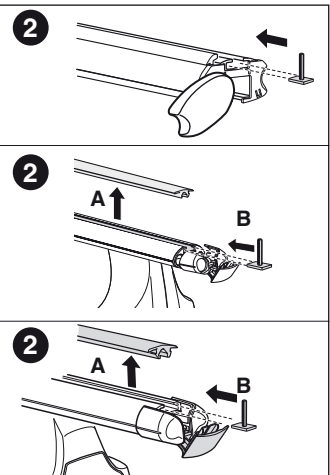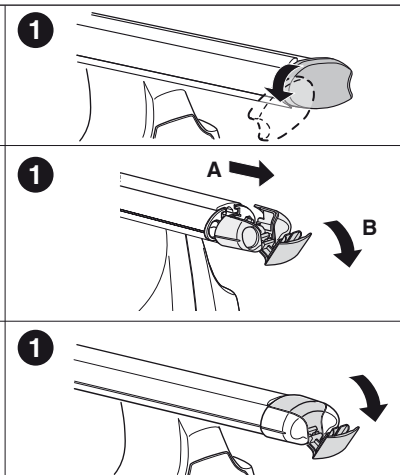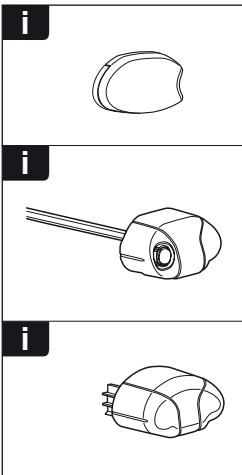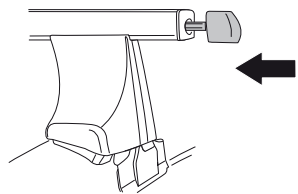    


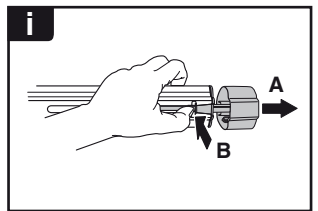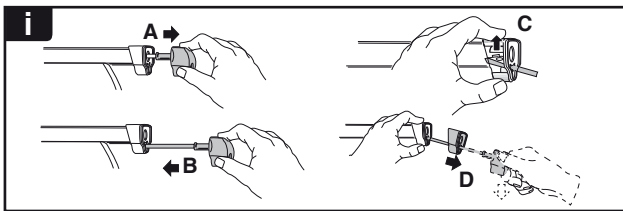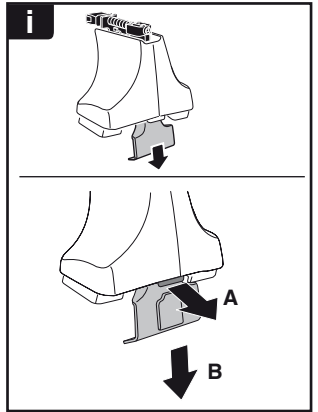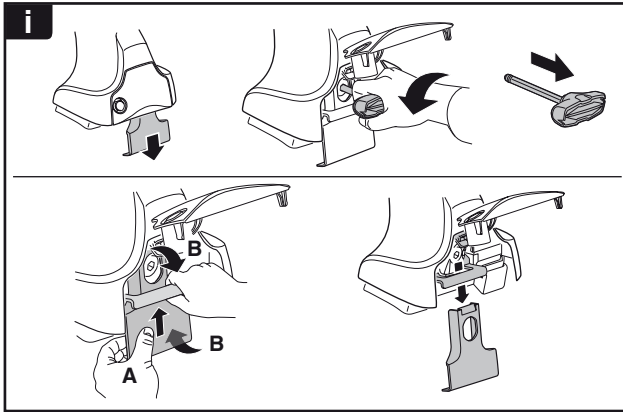   

THULE
SWEDEN
**ONE
KEY
SYSTEM**

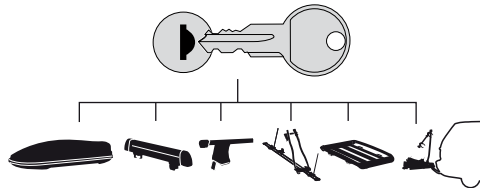 

 - 544 (x4)
- 596 (x6)
- 588 (x8)
- NA 510 (x10)
- EUR 452 (x12)
- ASIA

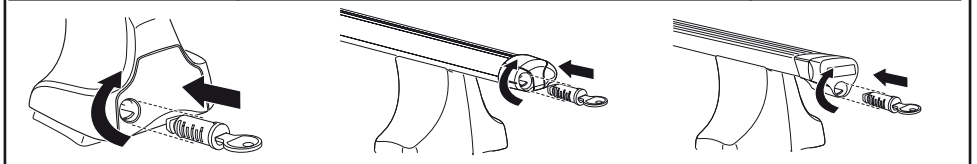

WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com
customer.service@thule.com

www.thule.com