 
 


Kit 1500

 
 
LANCIA Delta, 5-dr Hatchback, 08-*

* with normal roof



**480R
754**

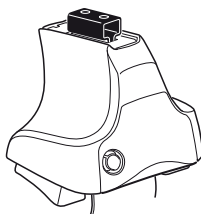

480

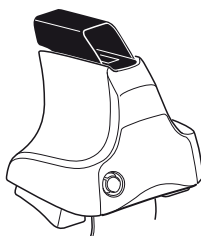

750

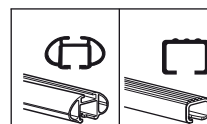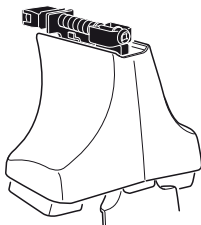  

480R/754

x1

x4

x4

480

x1

x4

 
 
 
x4

750

x1

x4

x4

  x2  x2  x2  x2  x4	  x2	  x2  x2  x4  x4	  x2  x2	  x2
---	---	--	---	---

Kit

1000 x 2

1003 x 1

1004 x 1

300 x 1

301 x 1

323 x 2

Control panel (x 1)

1



 
480R/754



480



750

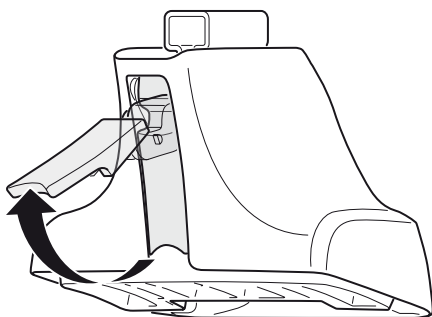

2



480R/754

 
 
 
 
 
 
 
 
 
 
 
 


480






750



+

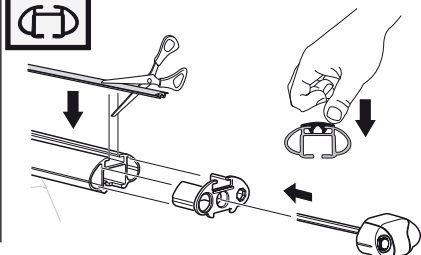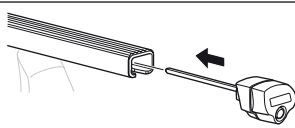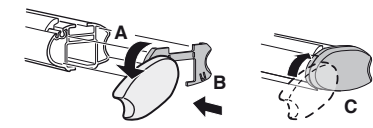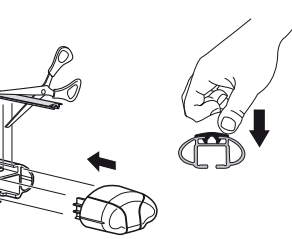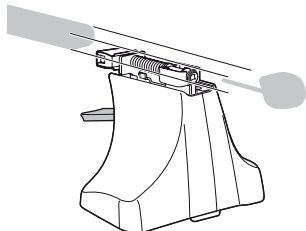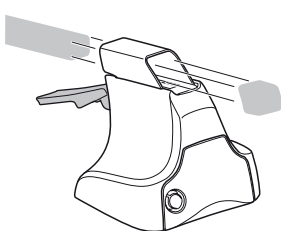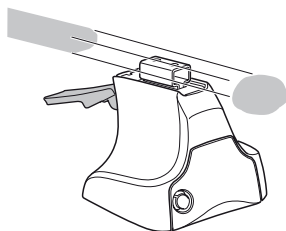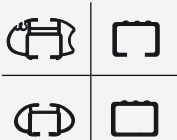

3

   

1

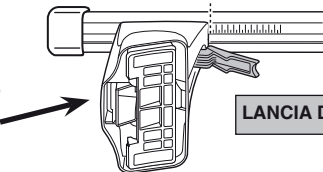  

2

 


LANCIA Delta, 5-dr Hatchback, 08-

X

41

1

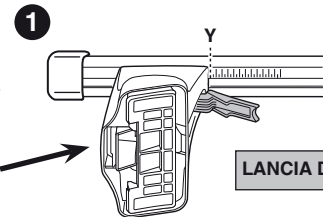

2



LANCIA Delta, 5-dr Hatchback, 08-

Y

31,5

 


480R




480

1



2

 

LANCIA Delta, 5-dr Hatchback, 08-

 
X inch

X mm


41 3/4"

1061 mm

1



2

 

LANCIA Delta, 5-dr Hatchback, 08-

Y inch

Y mm

38"

966 mm

4

LANCIA Delta, 5-dr Hatchback, 08-

300



1003



301



1004



323



 
1000



323










1000






480R/754



       
480

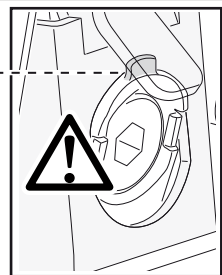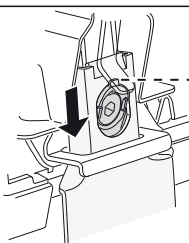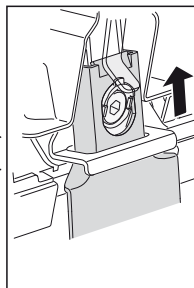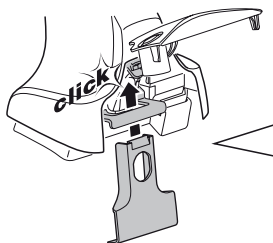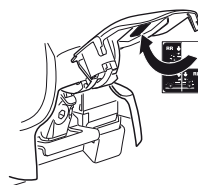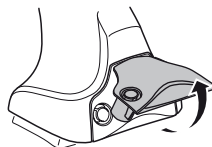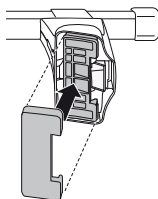





750

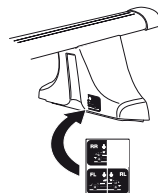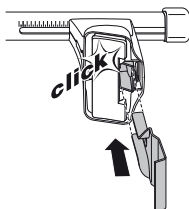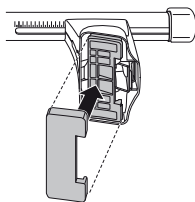   

5

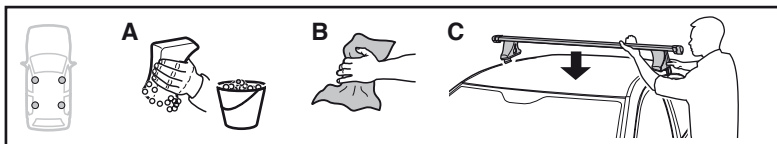 


	X mm	Y mm	X inch	Y inch
LANCIA Delta, 5-dr Hatchback, 08–	155 mm	850 mm	6 1/8"	33 1/2"

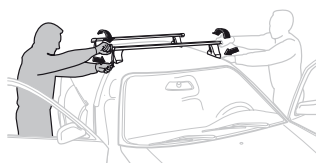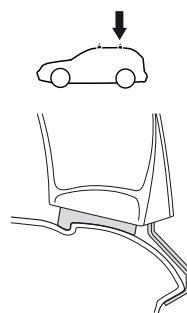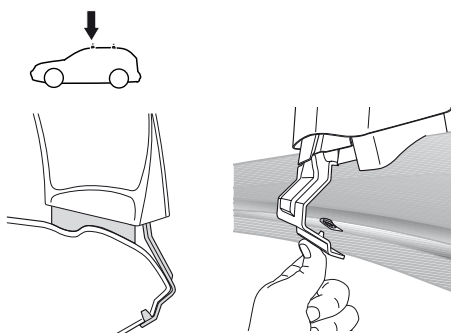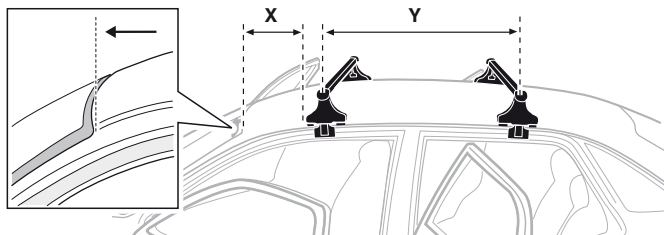    

GB/US Tighten alternately
D Die Schrauben abwechselnd anziehen
F Serrer alternativement chaque côté
NL Afwisselend aan de linker- en de rechterkant aandraaien
I Alternare il serraggio delle viti
E Apretar alternativamente
PT Aperte alternadamente
S Dra åt växelvis
FIN Kierrä vuorotellen
EST Pinguldage vaheldumisi
LAT Pievelciēt pamīšus
LIT Užsukinėkite pakaitomis
PL Śruby dokręcaj naprzemiennie
RU Затягивайте попеременно

CZ Pokręťte багажníka dokręcaj dokręcaj naprzemiennie.
SK Dofahujte striedavo
SLO Privijajte izmenično.
HR Naizmjenočno zategnite
HU Egymástól függetlenül szorítandó
GR Σφιγγεται εναλλάξ
TR Dönüşümlü sıkın
中文 交替拧紧
한국어 번갈아 가며 조이십시오.
日本語 交互に締め付けてください。
ไทย ขั้นในแบบสลับ


 
6





480R/754








  480

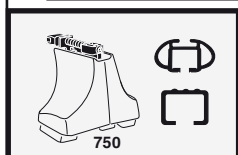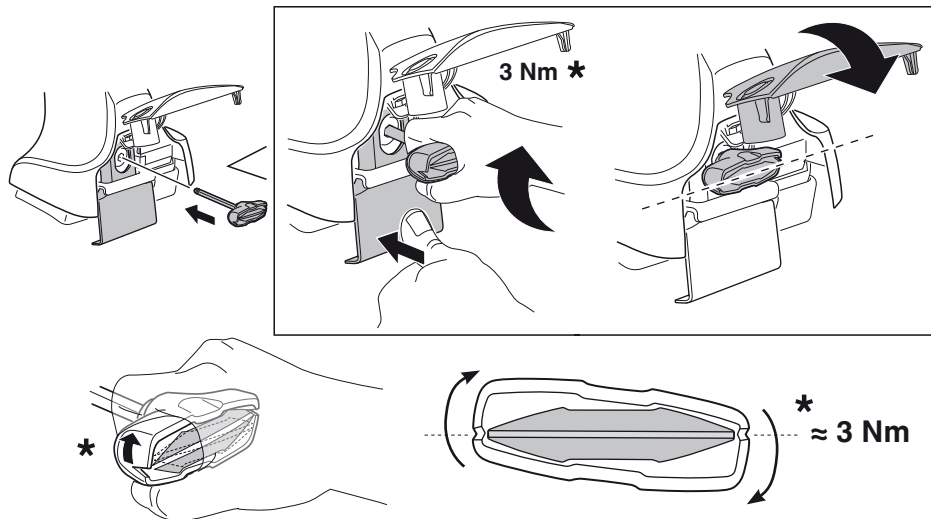

750

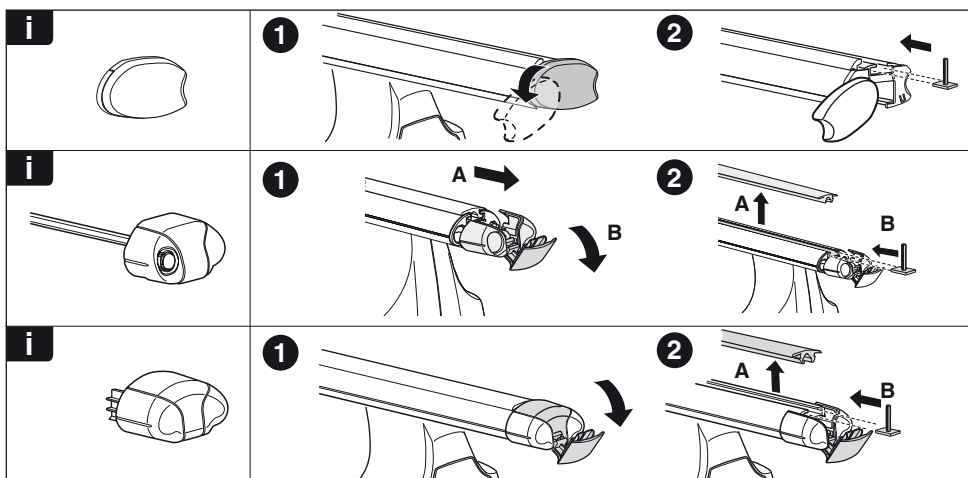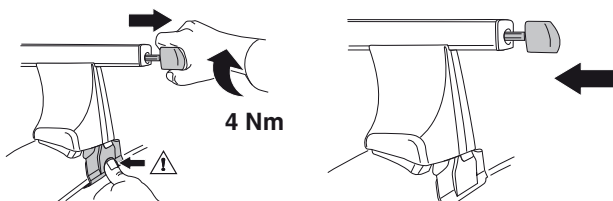  

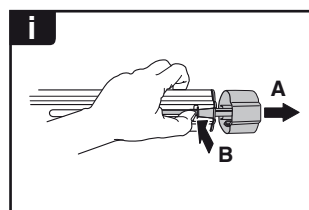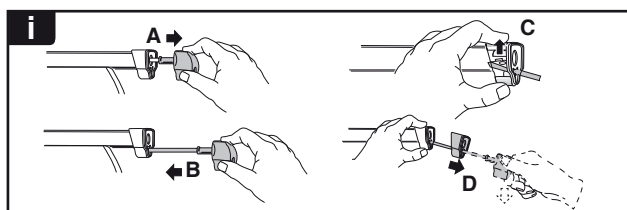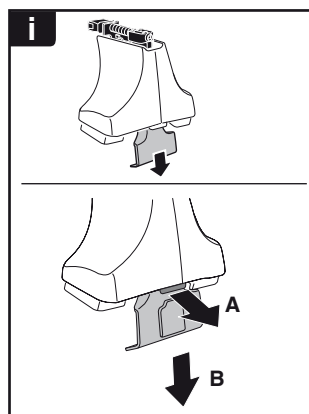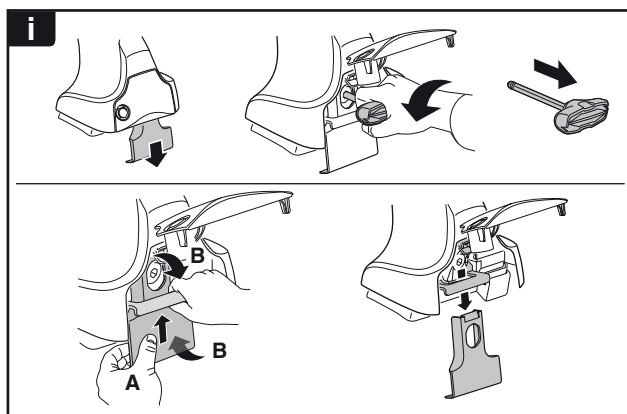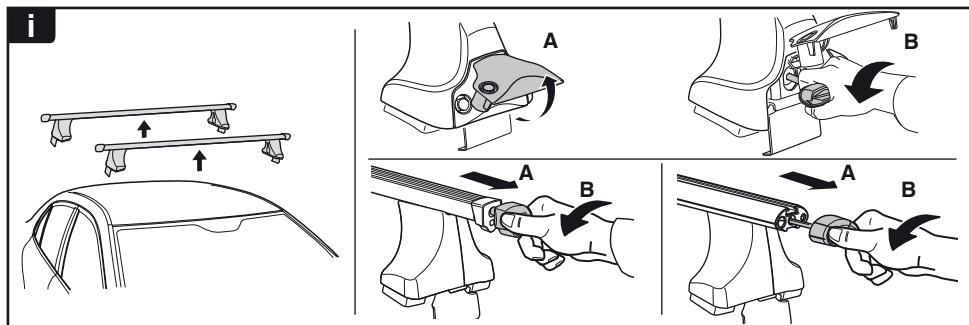     

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

596 (x6)

588 (x8)

NA 510 (x10)

EUR 452 (x12)

ASIA