

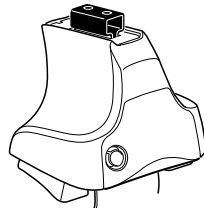


# Kit 1583


HONDA Stepwgn, 5-dr MPV, 09–

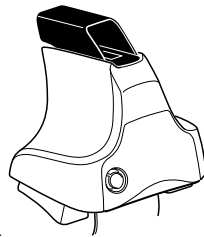

480R Rapid Traverse  
754 Rapid System

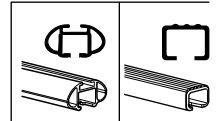


480 Traverse

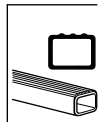




1

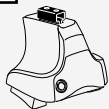


480R Rapid Traverse  
754 Rapid System



480 Traverse

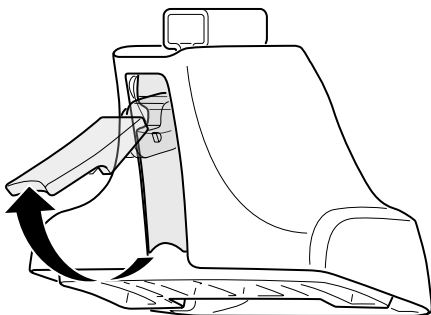

2









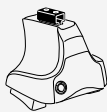


480R Rapid Traverse  
754 Rapid System




480 Traverse

+

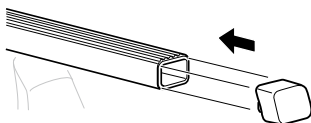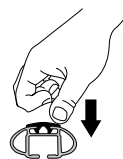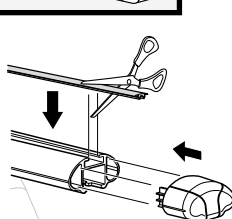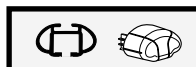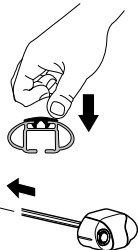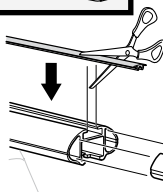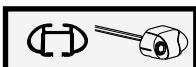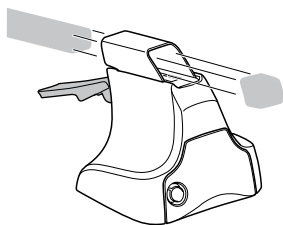
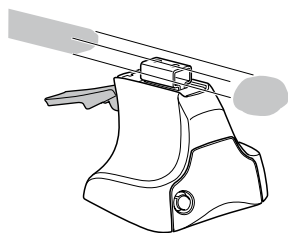


**3**

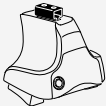


754 Rapid System

**1**

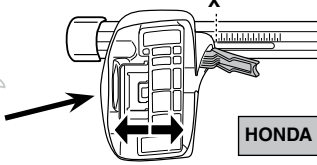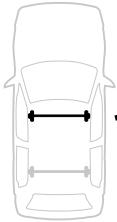

**2**


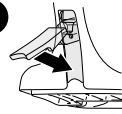


HONDA Stepwgn, 5-dr MPV, 09-


X

51

**1**

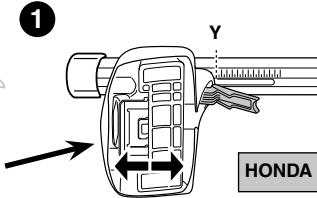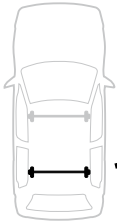

**2**

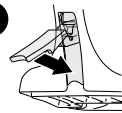

HONDA Stepwgn, 5-dr MPV, 09-

Y

47,5




480R Rapid Traverse




480 Traverse

**1**

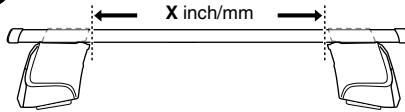

**2**

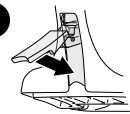

HONDA Stepwgn, 5-dr MPV, 09-


X inch

X mm


45  $\frac{3}{4}$ "

1161 mm

**1**

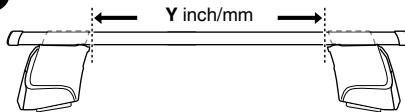

**2**

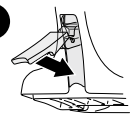

HONDA Stepwgn, 5-dr MPV, 09-


Y inch

Y mm

44  $\frac{3}{8}$ "

1126 mm

4






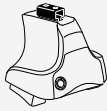


480R Rapid Traverse  
754 Rapid System



480 Traverse




HONDA Stepwgn, 5-dr MPV, 09-

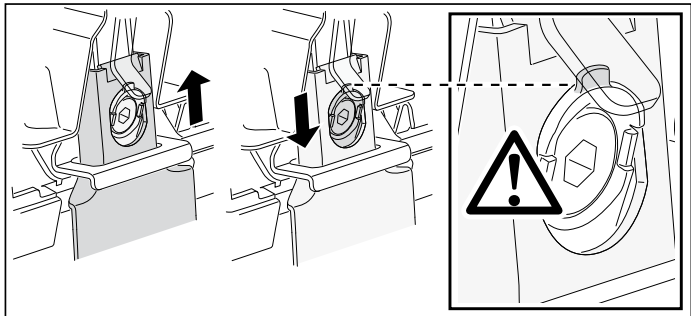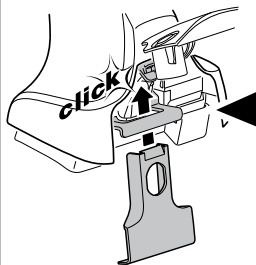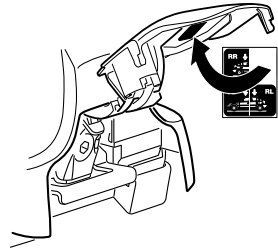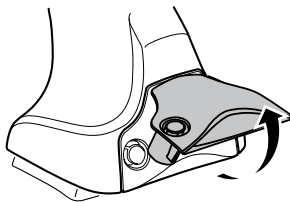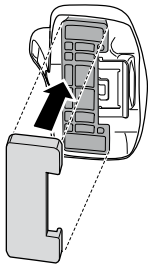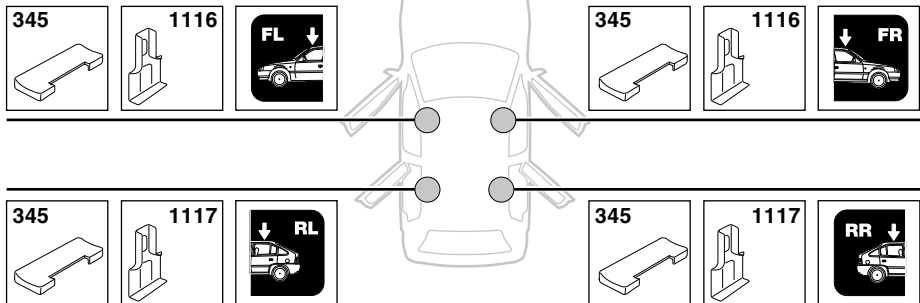

5








	X mm	Y mm	X inch	Y inch
<b>HONDA Stepwgn, 5-dr MPV, 09-</b>	<b>750 mm</b>	<b>700 mm</b>	<b>29 1/2"</b>	<b>27 1/2"</b>

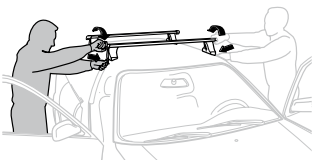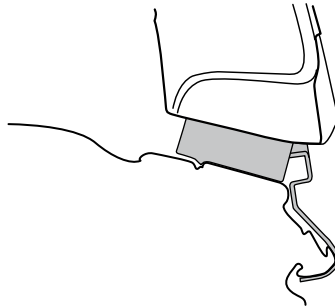
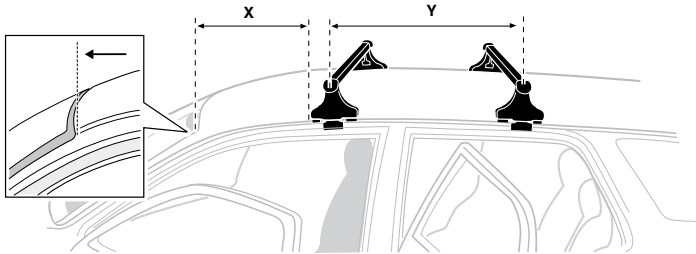




- |              |   |            |   |
|--------------|---|------------|---|
| <b>GB/US</b> | Tighten alternately                                     | <b>CZ</b>  | Pokreťta bagażnika dokrećaj dokrećaj naprzemiennie. |
| <b>D</b>     | Die Schrauben abwechselnd anziehen                      | <b>SK</b>  | Dofahujte striedavo                                 |
| <b>F</b>     | Serrer alternativement chaque côté                      | <b>SLO</b> | Privijajte izmenično.                               |
| <b>NL</b>    | Afwisselend aan de linker- en de rechterkant aandraaien | <b>HR</b>  | Naizmjenično zategnite                              |
| <b>I</b>     | Alternare il serraggio delle viti                       | <b>HU</b>  | Egymástól függetlenül szorítandó                    |
| <b>E</b>     | Apretar alternativamente                                | <b>GR</b>  | Σφιγγετε εναλλάξ                                    |
| <b>PT</b>    | Aperte alternadamente                                   | <b>TR</b>  | Dönüşümlü sıkın                                     |
| <b>S</b>     | Dra åt växelvis   | <b>中文</b>  | 交替拧紧  |
| <b>FIN</b>   | Kierrä vuorotellen                                      | <b>한국어</b> | 번갈아 가며 조이십시오.                                       |
| <b>EST</b>   | Pinguldage vaheldumisi                                  | <b>日本語</b> | 交互に締め付けてください。                                       |
| <b>LAT</b>   | Pievēciēt pamāšus                                       | <b>ไทย</b> | ขันในแบบสลับ  |
| <b>LIT</b>   | Užsukinėkite pakaitomis                                 |            |   |
| <b>PL</b>    | Śruby dokrećaj naprzemiennie                            |            |   |
| <b>RU</b>    | Затягивайте попеременно                                 |            |   |

6

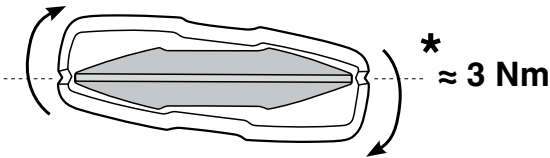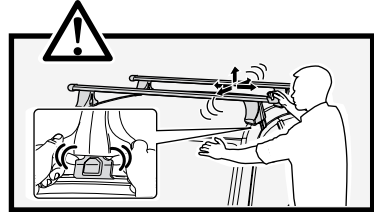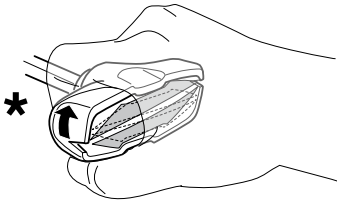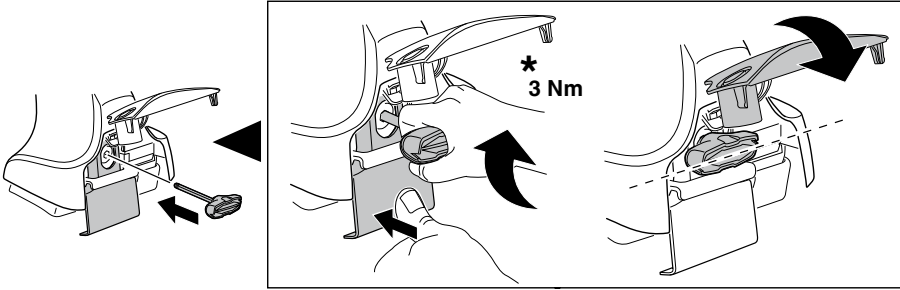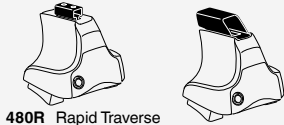


7

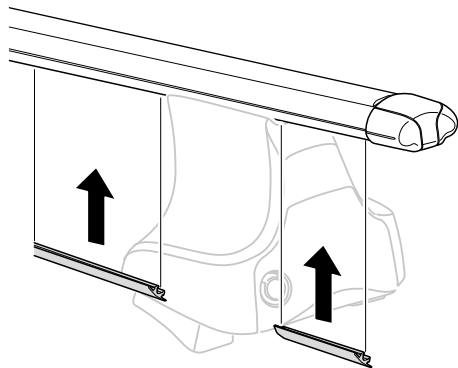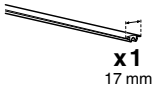

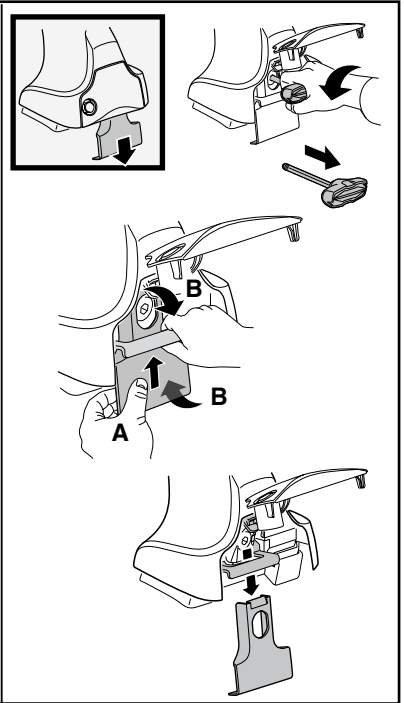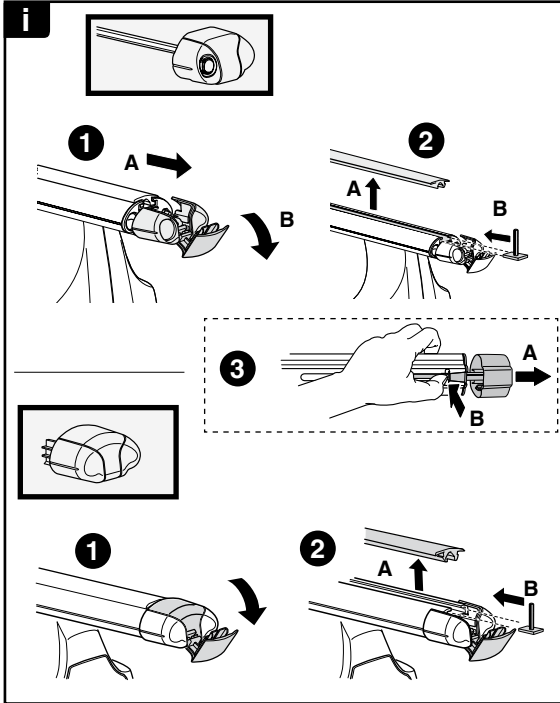 

 **THULE**  
SWEDEN  
**ONE  
KEY  
SYSTEM**

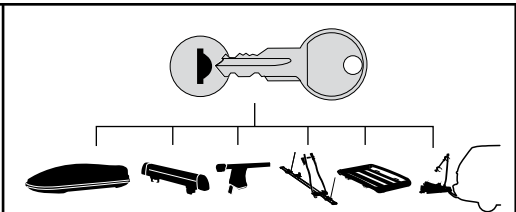

- 544** (x4)
  - 596** (x6)
  - 588** (x8)
  - 510** (x10)
  - 452** (x12)
- NA  
EUR  
ASIA



WW ▶ Thule Sweden AB, Box 69, 330 33 Hillerstorp, SWEDEN  
NA ▶ Thule Inc., 42 Silvermine Road, Seymour, Connecticut 06483, USA

info@thule.com  
customer.service@thule.com

www.thule.com