 
 
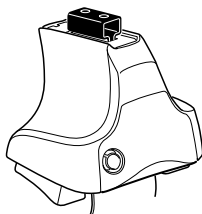 


Kit 1665

 
FORD Ranger, 4-dr Double Cab, 11–

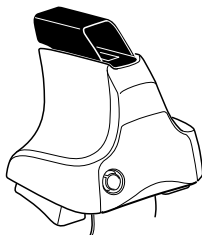

754 Rapid System
480R Rapid Traverse (North America)

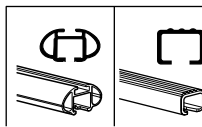

480 Traverse (North America)



THULE[®]
SWEDEN

ISO 11154-E

The diagram illustrates the importance of instructions. It features a box on the left labeled 'THULE' with a warning symbol (a triangle with an exclamation mark) and a plus sign next to it. To the right of the plus sign is a box labeled 'instructions' with a warning symbol and the text 'Kit XXXX'. A person is shown reading the instructions.

754 Rapid System **x1**

 
 
 
 
 
 
 
 
 
480R Rapid Traverse (North America) **x1**

754 Rapid System **x4**


480R Rapid Traverse (North America) **x4**

754 Rapid System **x4**

480R Rapid Traverse (North America) **x4**



1

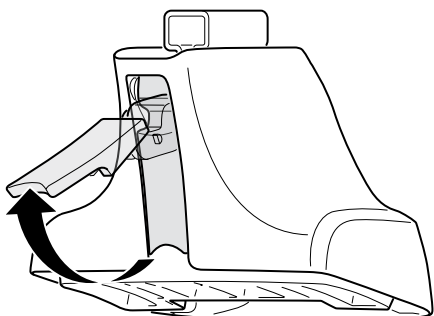 




2




 
 
754 Rapid System
480R Rapid Traverse
(North America)

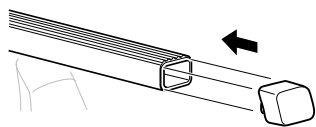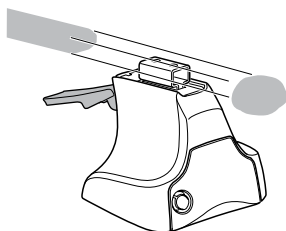

x4

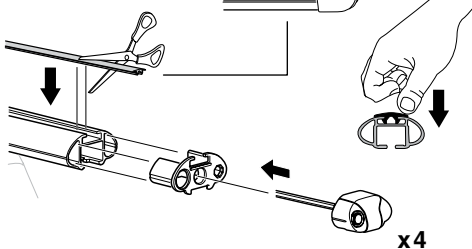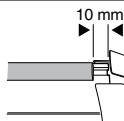   



x4

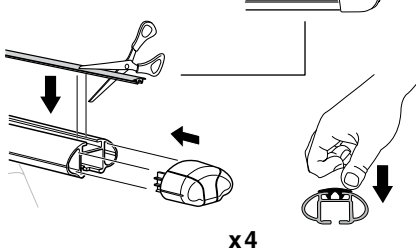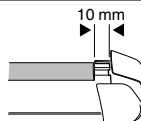   

x4




  480 Traverse
(North America)

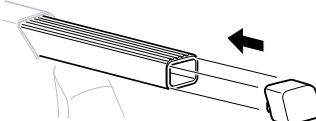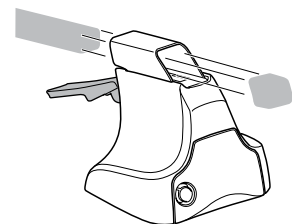


x4

 3



754 Rapid System

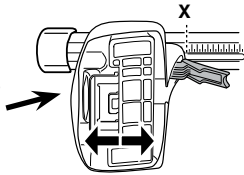 


X

FORD Ranger, 4-dr Double Cab, 11–

X

 45,5

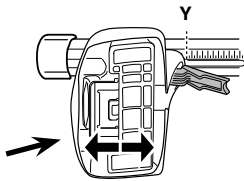

Y

FORD Ranger, 4-dr Double Cab, 11–

Y

44

3



480R Rapid Traverse



480 Traverse



(North America)



X inch/mm



 
X inch

X mm

FORD Ranger, 4-dr Double Cab, 11–

43 1/2"

1106 mm



Y inch/mm



Y inch

 
Y mm

FORD Ranger, 4-dr Double Cab, 11–

43"



1091 mm

4

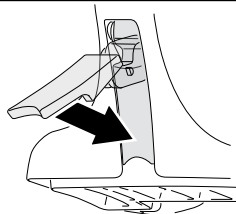


5

  
FORD Ranger, 4-dr Double Cab, 11-

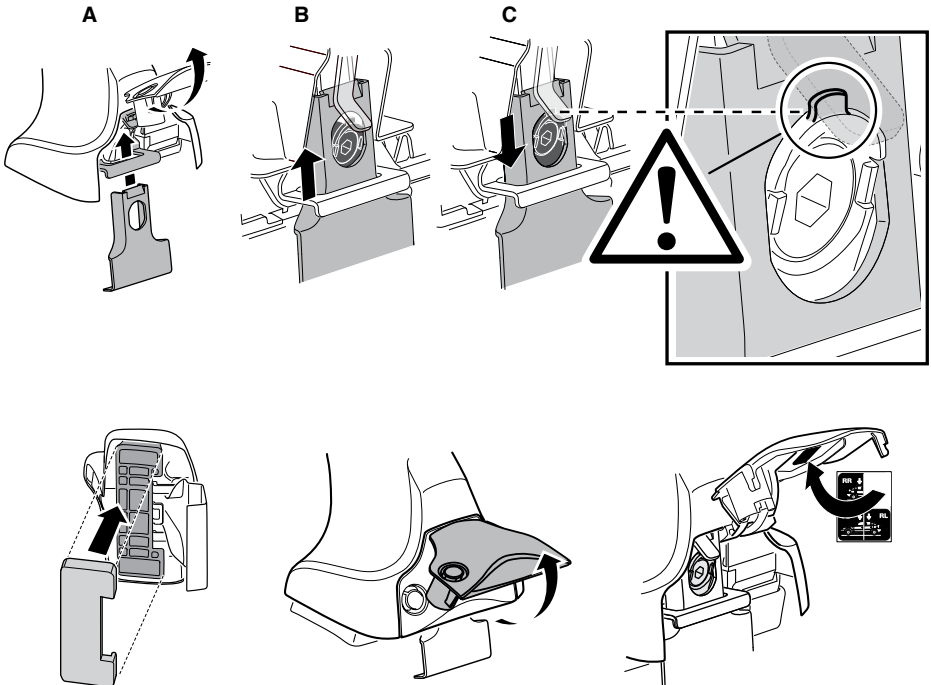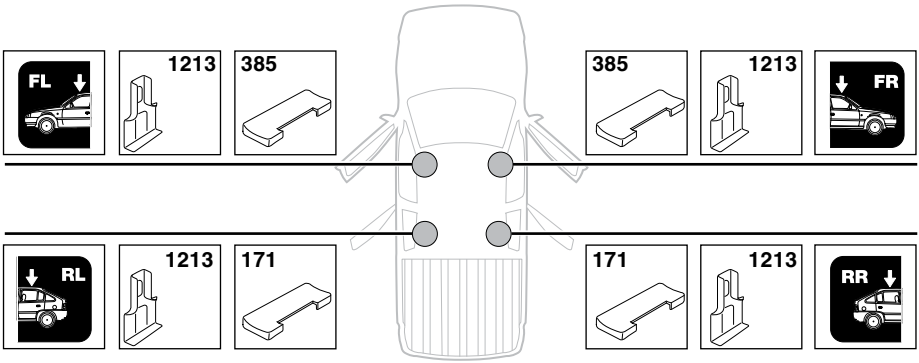

6

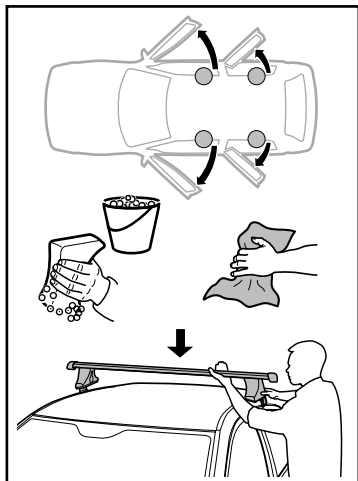 



i

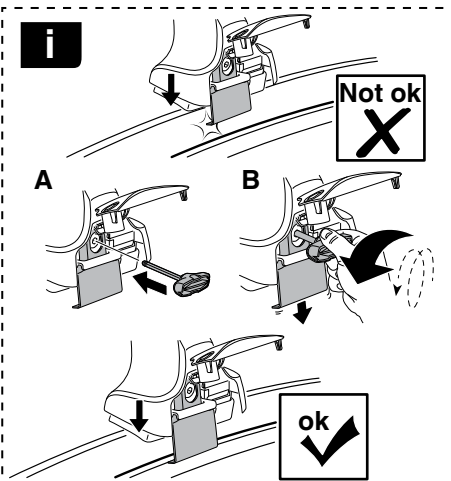 


FORD Ranger, 4-dr Double Cab, 11–

X mm Y mm X inch Y inch

  235 mm 700 mm 9 1/4" 27 1/2"

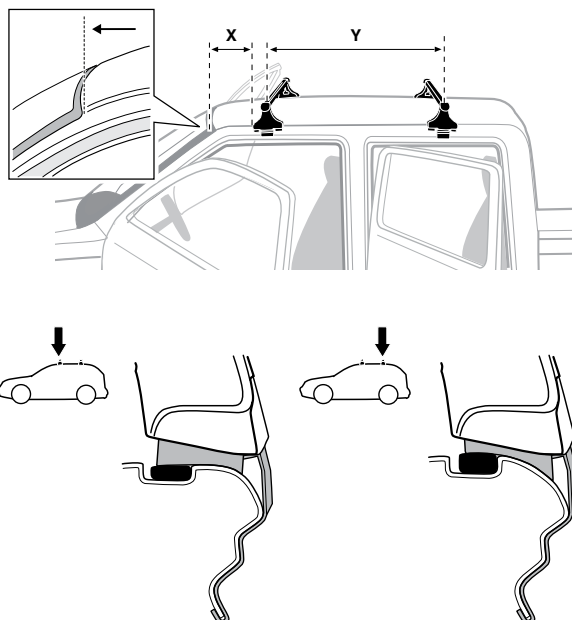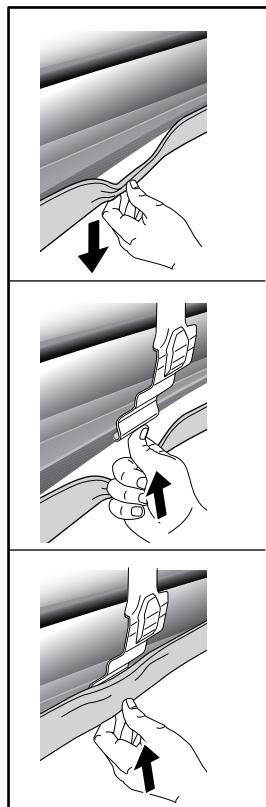

7

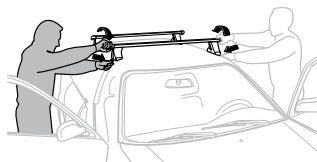 

GB/US	Tighten alternately
D	Die Schrauben abwechselnd anziehen
F	Serrer alternativement chaque côté
NL	Afwisselend aan de linker- en de rechterkant aandraaien
I	Alternare il serraggio delle viti
E	Apretar alternativamente
PT	Aperte alternadamente
S	Dra åt växelvis
FIN	Kierrä vuorotellen
EST	Pinguldage vaheldumisi
LAT	Pielvelciet pamišus
LIT	Užsukinėkite pakaitomis
PL	Śruby dokręcaj naprzemiennie
RU	Затягивайте попеременно





CZ	Pokrétla багаžníka dokręcaj dokręcaj naprzemiennie.
SK	Dofahujte striedavo
SLO	Privijajte izmenično.
HR	Naizmjenočno zategnite
HU	Egy mástól fűggetlenül szorítandó
GR	Σφιγγετε εναλλάξ
TR	Dönüşümlü sıkın

中文 交替拧紧



한국어 번갈아 가며 조이십시오.

日本語 交互に締め付けてください。

    ไทย ชันในแบบสลับ

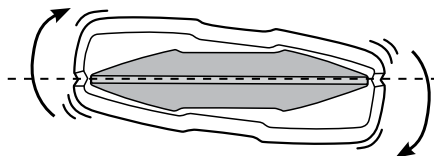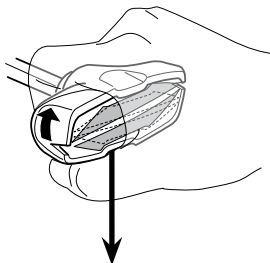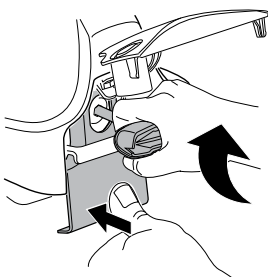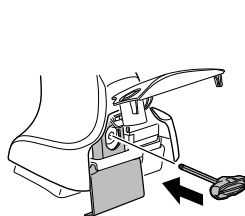


≈ 3 Nm

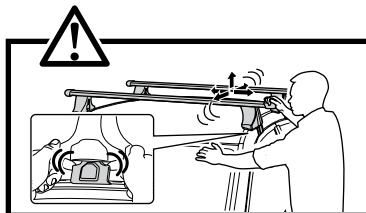 
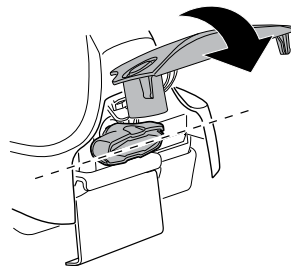 


8



   x1
17 mm

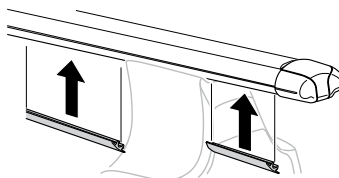

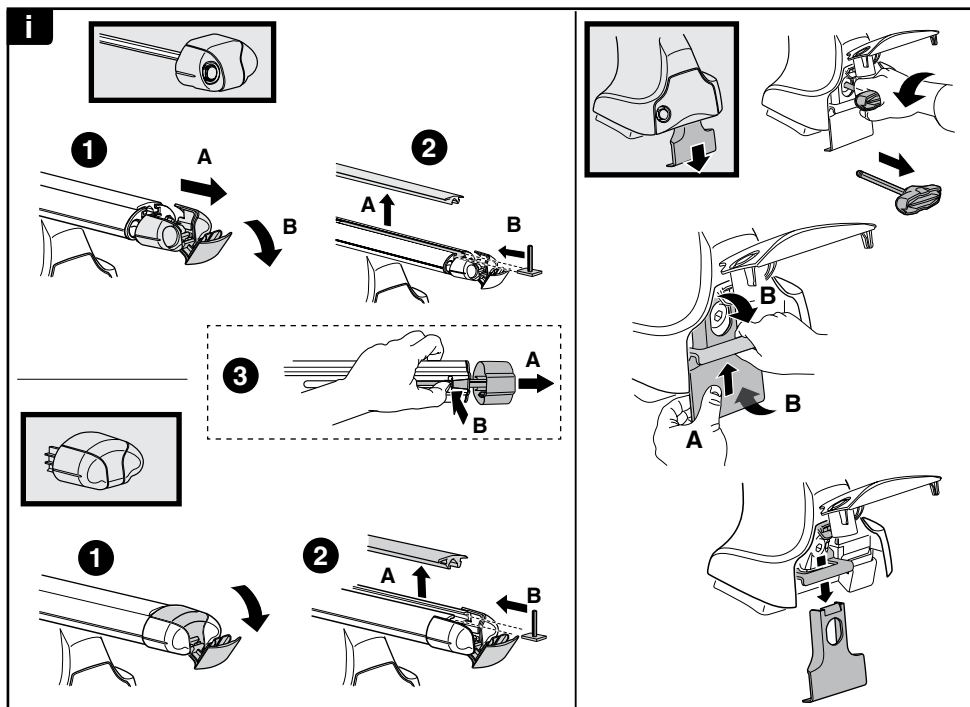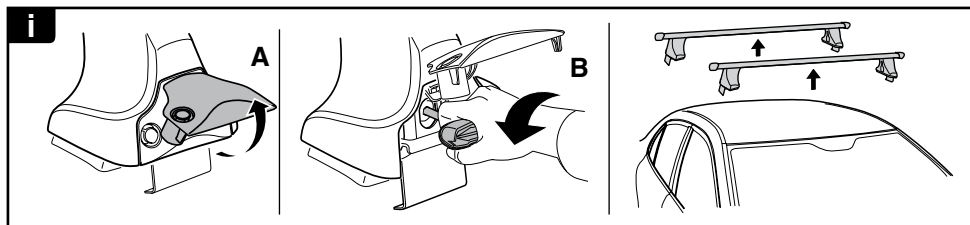

THULE®
SWEDEN

**ONE
KEY
SYSTEM**

544 (x4)

 
 
596 (x6)

 
 
588 (x8)

 
 
NA **510** (x10)

EUR **452** (x12)



ASIA


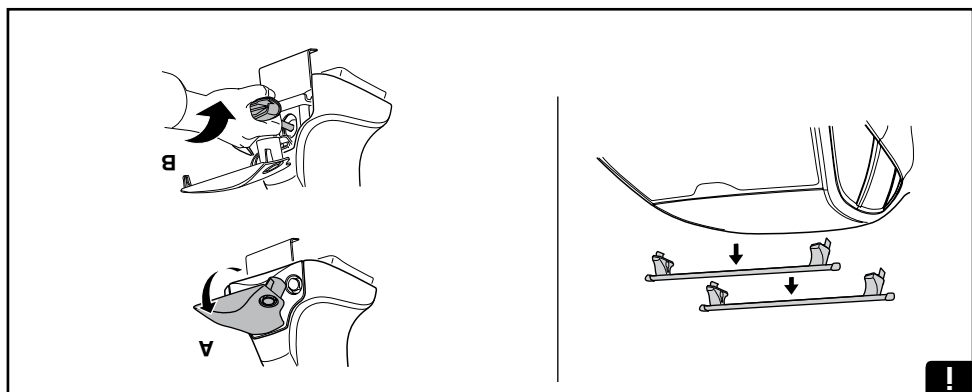
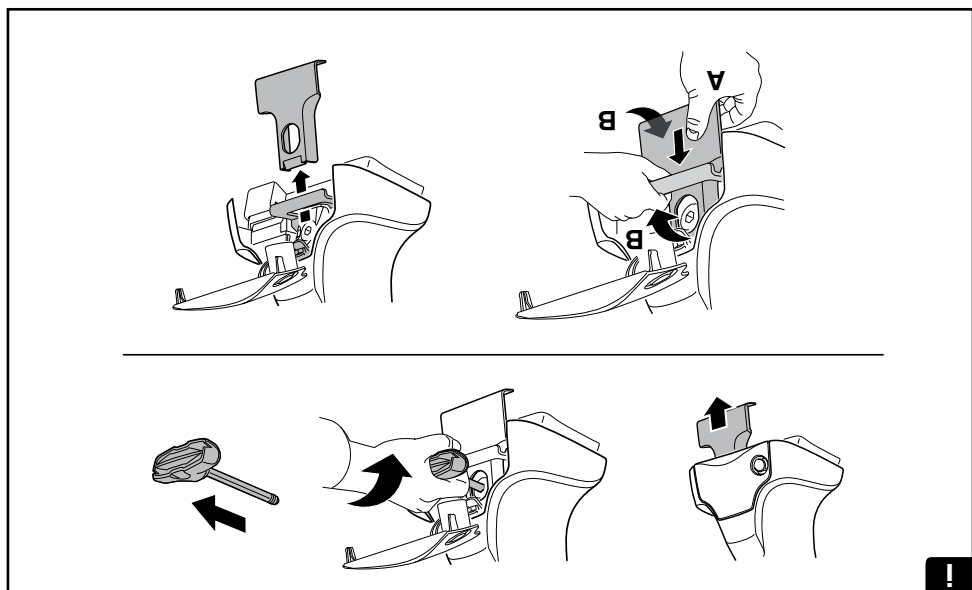


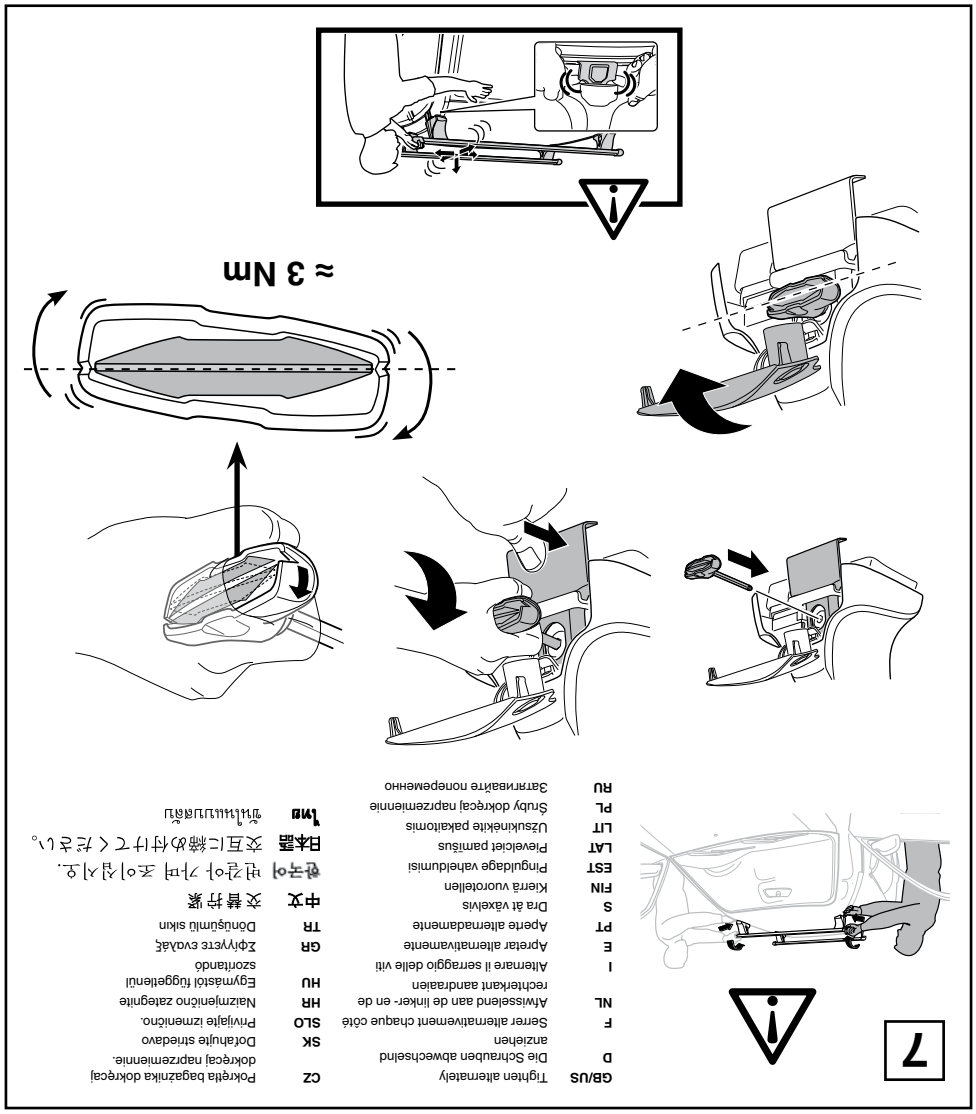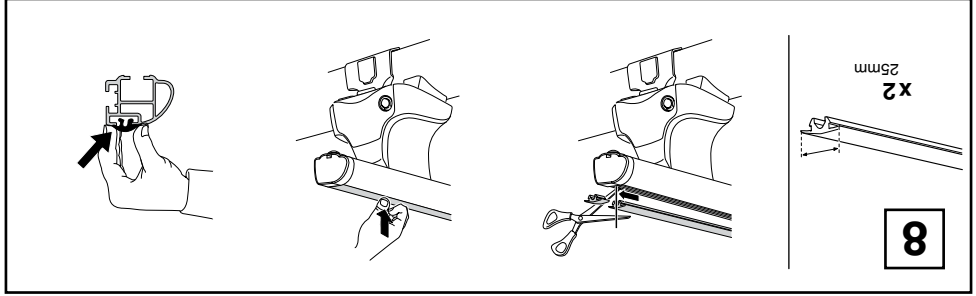

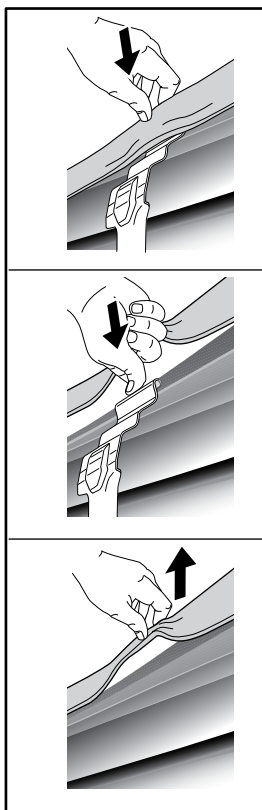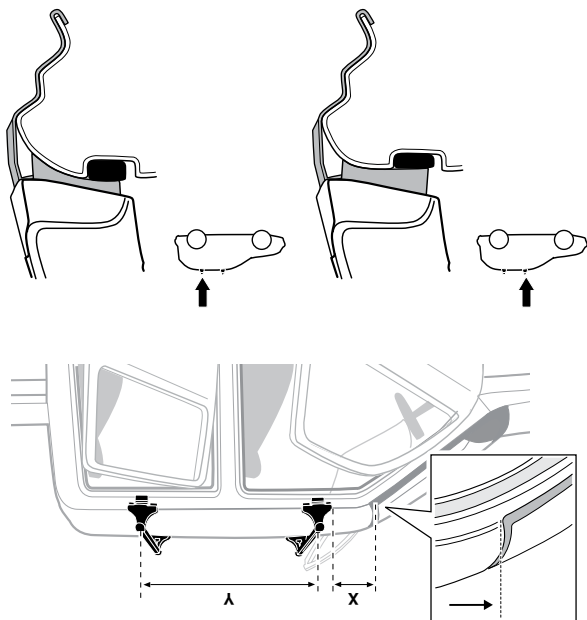


FORD Ranger, 4-dr Double Cab, 11-				
27 1/2"	9 1/4"	700 mm	235 mm	X mm
Y inch	X inch	Y mm	X mm	

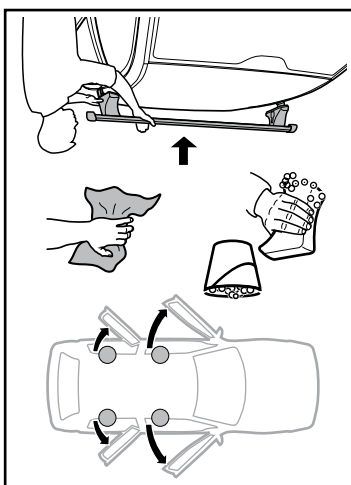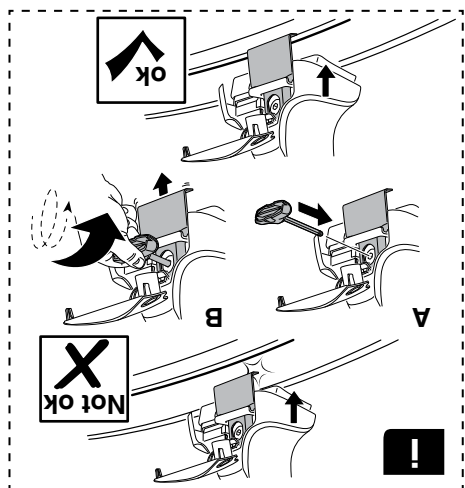  


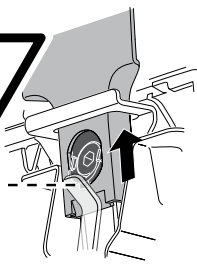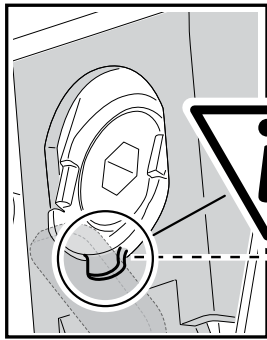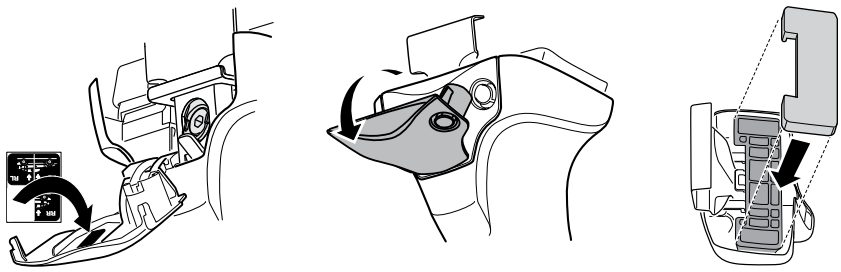   


A


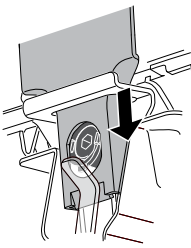 




B






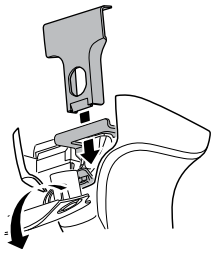 


C

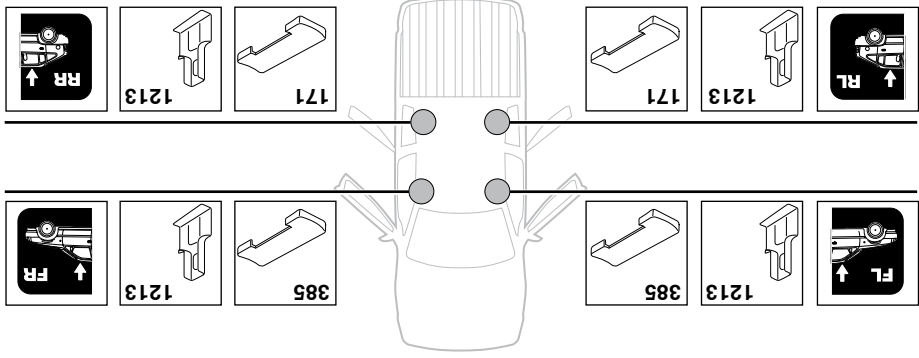 

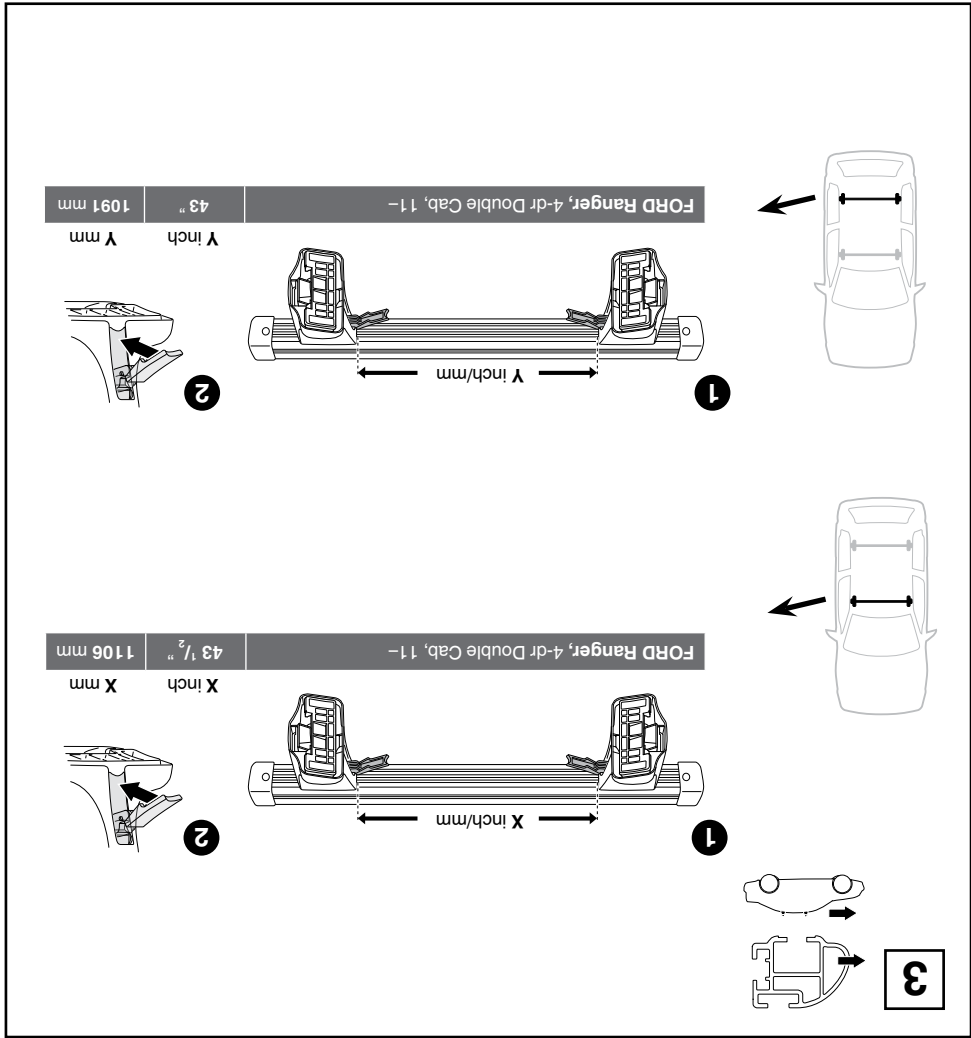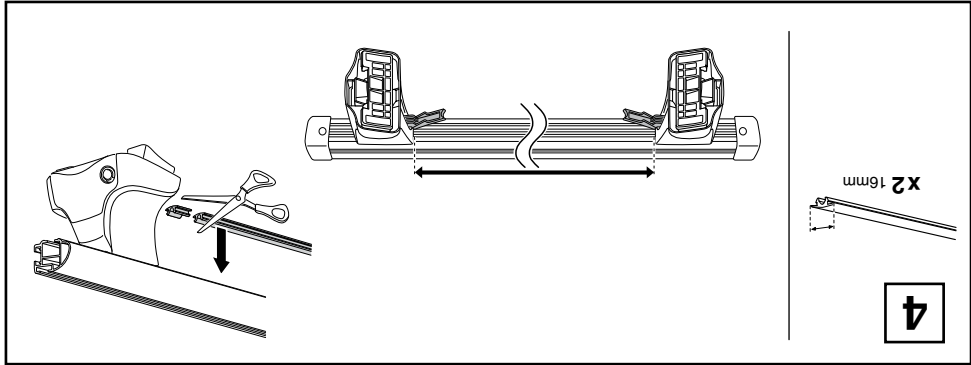  

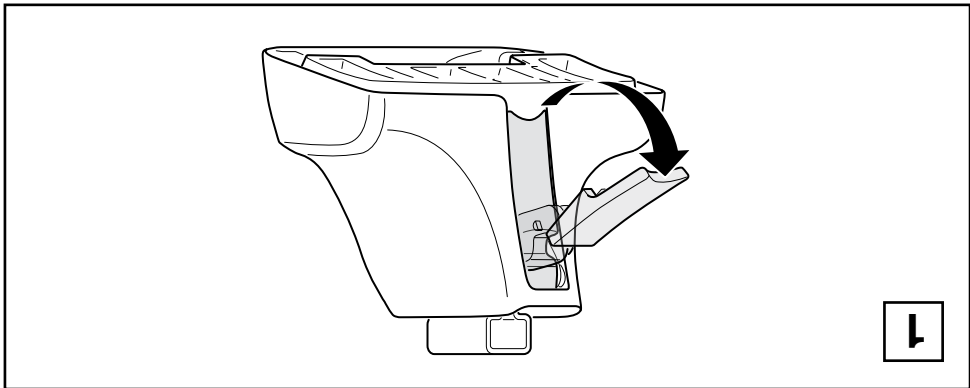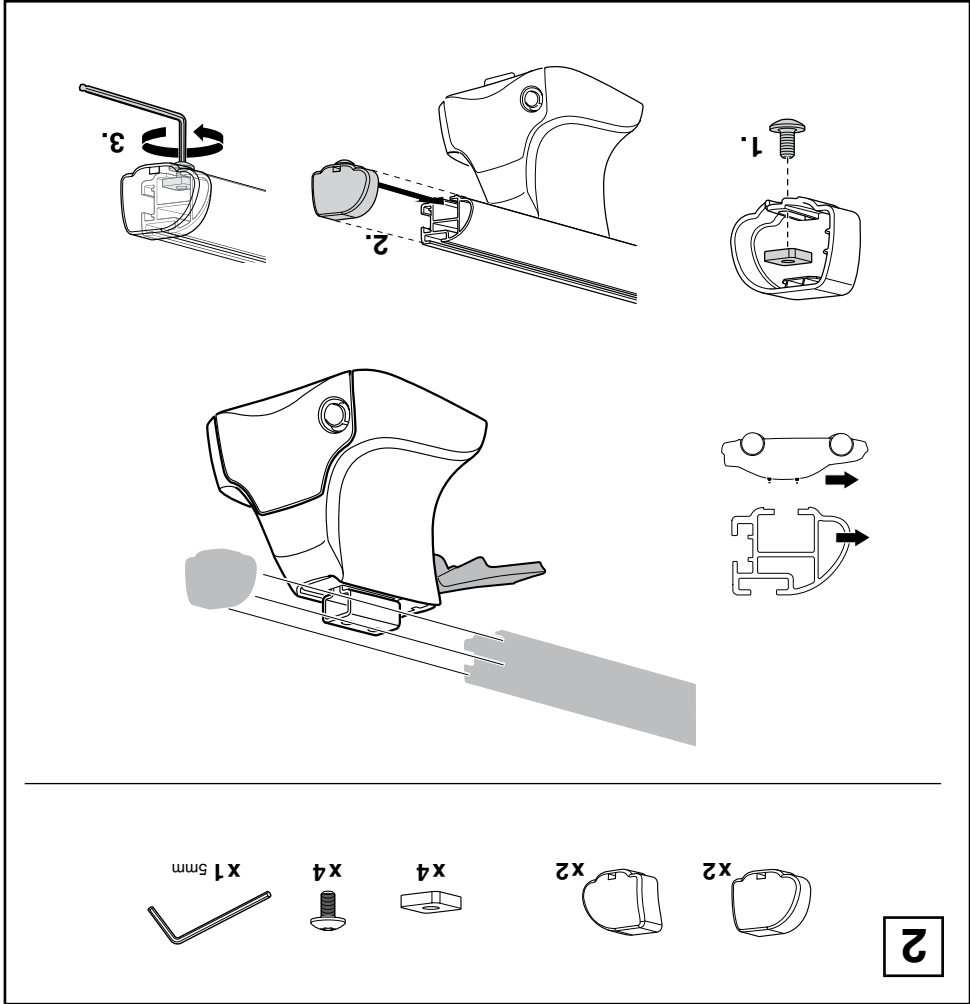  

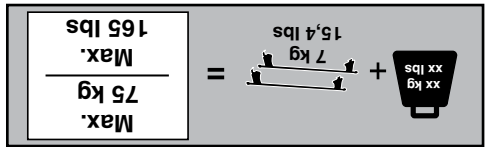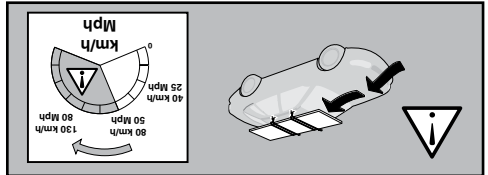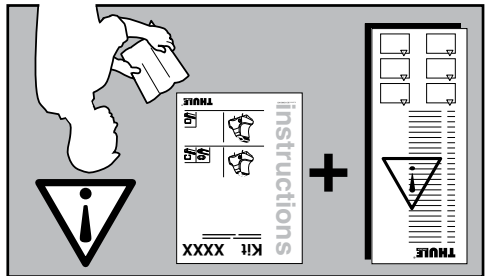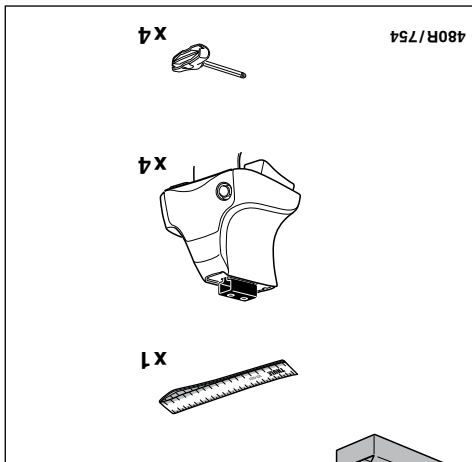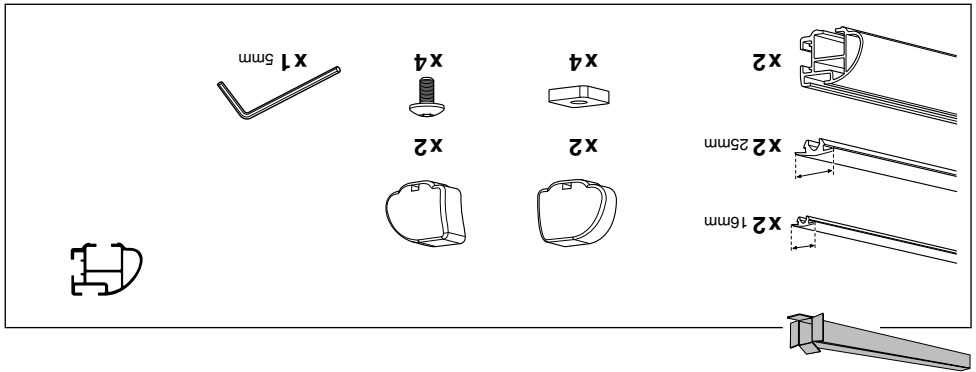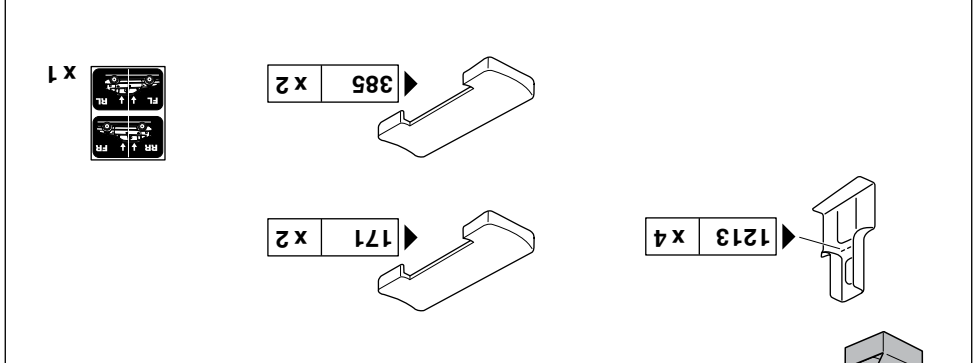      

Kit 1665

FORD Ranger, 4-dr Double Cab, 11-

instructions

© 20120323; 503-1665-01

ISO 11154-E

PROFESSIONAL



480R
754

