







## Thule Rapid System Kit 1751

# > Instructions

HONDA Fit, 5-dr Hatchback, 14-

HONDA Jazz, 5-dr Hatchback, 14-

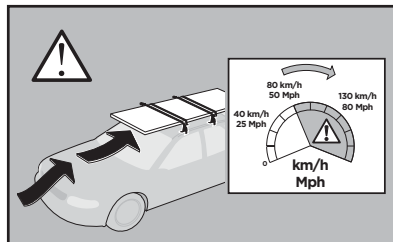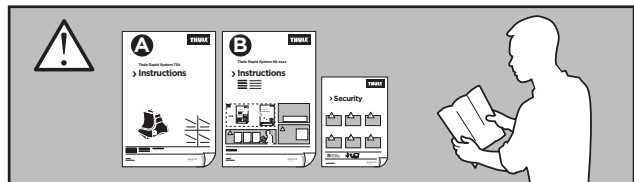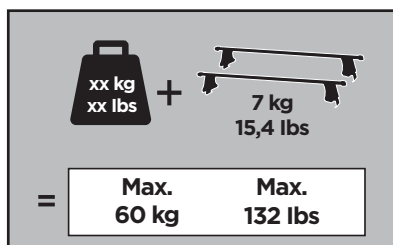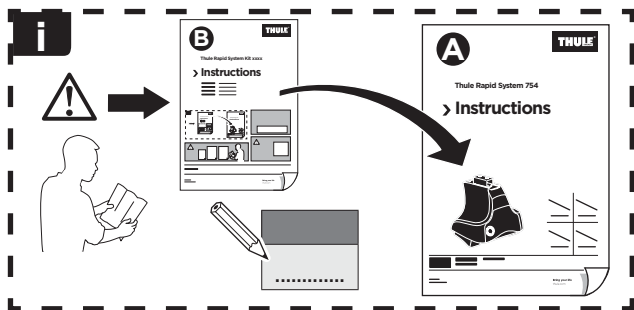


ISO 11154-E

141751

C.20141204  
519-1751-01


Bring your life

thule.com

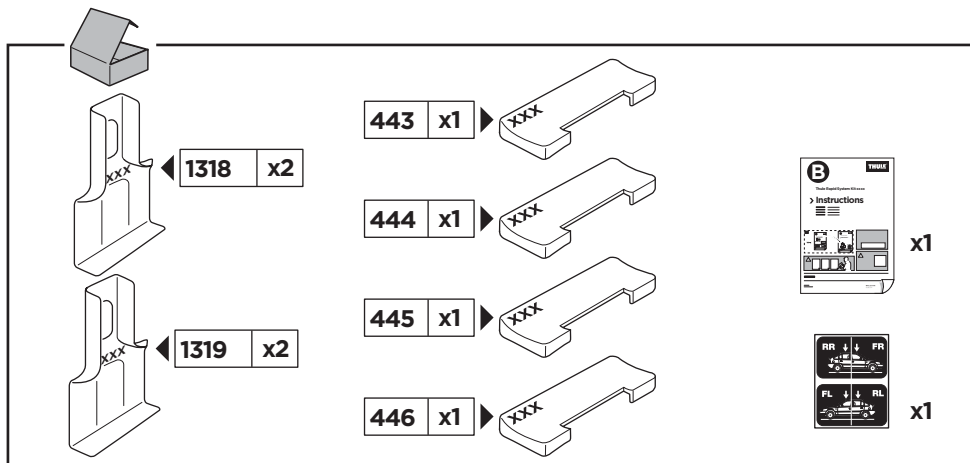

# 1



	X (scale)	X (mm)	X (inch)
<b>HONDA Fit</b> , 5-dr Hatchback, 14-	<b>28,5</b>	<b>936</b>	<b>36 7/8</b>
<b>HONDA Jazz</b> , 5-dr Hatchback, 14-	<b>28,5</b>	<b>936</b>	<b>36 7/8</b>

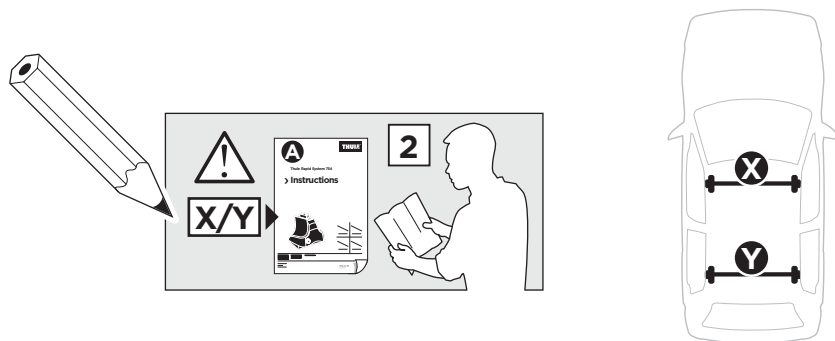


	Y (scale)	Y (mm)	Y (inch)
<b>HONDA Fit</b> , 5-dr Hatchback, 14-	<b>17,5</b>	<b>826</b>	<b>32 1/2</b>
<b>HONDA Jazz</b> , 5-dr Hatchback, 14-	<b>17,5</b>	<b>826</b>	<b>32 1/2</b>

**2**

**HONDA Fit, 5-dr Hatchback, 14-**  
**HONDA Jazz, 5-dr Hatchback, 14-**

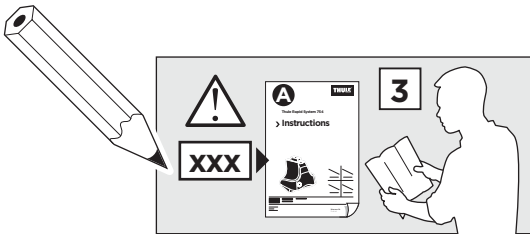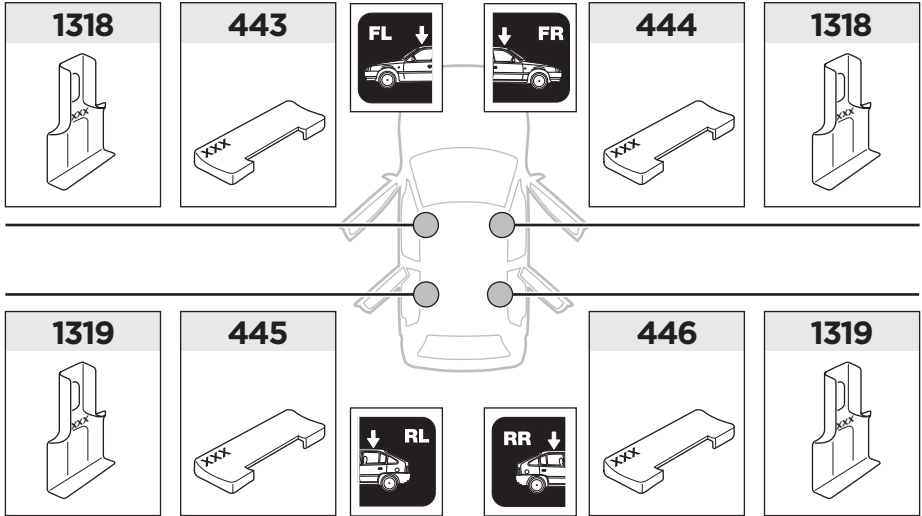

3

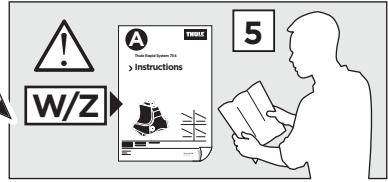

	W (mm)	Z (mm)	W (inch)	Z (inch)
<b>HONDA Fit</b> , 5-dr Hatchback, 14-	<b>310</b>	<b>750</b>	<b>12 1/4</b>	<b>29 1/2</b>
<b>HONDA Jazz</b> , 5-dr Hatchback, 14-	<b>310</b>	<b>750</b>	<b>12 1/4</b>	<b>29 1/2</b>

